



Bell Fibe™ TV
remote guide



Fibe is a trade-mark of Bell Canada.

BATTERY INSTALLATION

1. Remove cover on back.
2. Insert 2 new AA alkaline batteries.

PROGRAMMING THE REMOTE TO CONTROL OTHER DEVICES

The remote will only control a device that has been selected by the appropriate mode key (TV, DVD, and AUX). You do not need to program the remote to operate your Bell Fibe TV receiver. Once pressed, the mode key light will flash. In order to control other devices, you need to tell the remote what types of devices you have. Refer to sections A and B. The volume controls will control your Set Top Box (Bell button) until the TV device mode is setup. The channel controls will always control your receiver. If you want to change this, you should follow the steps in Sections E & F.

To use your remote for other devices, you will need to setup the TV, DVD and AUX mode keys to control the devices (Section A).

Refer to the code list for a list of supported brands and models. If you do not find the brand of your device, refer to section B for the search function or section C for instructions on the learning feature.

If you have a TV/DVD, each component may need to be setup separately.

NOTE: The DVD and AUX mode keys can be setup with any code. The TV mode key can only be setup with TV codes.

A. MANUAL PROGRAMMING

Use the following steps to setup mode keys:

1. Turn on the device you want to program and locate the 4-digit code from the code list (see over).
2. Press and hold the mode key. While holding it pressed, press the SELECT key for 1 second.
3. Release both keys, all of the mode keys will flash then the selected mode key light will stay lit.
4. Enter the 4-digit code.
5. Press the power key once. The device should turn off. If the device stayed on, repeat steps 2 thru 5 trying each code for your brand.

Repeat the steps above to setup another device.

NOTE: If an invalid code is entered or no key is pressed for 30 seconds, the mode key light will flash for 3 seconds and turn off. You will need to start over.

B. USING THE SEARCH FUNCTION

1. Turn on the device you want to control.
2. Press and hold the mode key and while holding it pressed, press the SELECT key for 1 second.
3. Release both keys, all the mode keys will flash then the selected mode key light will stay lit.
4. Press the power button repetitively until the selected device turns off. Once your device has turned off, press SELECT to save the code.
5. If setup is successful the mode key will turn off and you are ready to setup another device.

D. CLEARING COMMANDS

D-I. To Clear all Learned Commands (under a single mode)

C. LEARNING

If the code for your device is not found in the code list and the search feature was not able to find the code for your device, then the learning feature will let you "learn" functions from your original remote.

IMPORTANT: Before using the Learning Feature of your remote, please follow steps 1-5 in Section A. If you are not able to find a code for your device in this manual, please use "0000" as your code for Step 4 of Section A.

C-I. Learning Commands

1. Press and hold the mode key and while holding it pressed, press the LEARN key for 1 second then release both keys.
2. All of the mode keys will flash and then the selected mode key light remains on.
3. Press and release the key that you want to teach.
4. While pointing your original remote approximately 1 inch from the bottom of your Bell Fibe TV remote, press and hold the original remote key until the mode key light blinks once and stays on. (If there is a learning problem, the mode key light blinks for 3 seconds and stays on. If this happens, repeat steps 3 and 4 above.)

5. Repeat steps 3 and 4 above for each key you want your Bell Fibe TV Remote to learn.
6. Press and release the LEARN key when all desired remote commands have been learned.

E. VOLUME CONTROL

D-II. To Clear all Learned Commands (under ALL modes)

1. Press and hold the mode key (TV, DVD, or AUX) and while holding it pressed, press the LEARN key for 1 second.
2. Release both keys, all of the mode keys will flash followed by the TV mode key light remaining on.
3. Press and hold the MUTE key for 3 seconds until the TV mode key light briefly turns off then stays on, then release the MUTE key.
4. Press and release the DELETE key. The mode key light turns off. All learned commands in the remote are now cleared.

NOTE: If a programmed mode key has no volume commands of its own, then the volume control will normally operate the TV. If an invalid key is pressed, the selected mode key light flashes for 3 seconds and turns off. You will need to start over.

If no key is pressed within 30 seconds, the selected mode key light flashes for 3 seconds and turns off. You will need to start over from step 1.

E-I. Volume Always Controls the Same Device

1. Press the TV key and while holding it pressed, press the SELECT key for 1 second.

2. Release both keys, all of the mode keys will flash followed by the TV mode key light remaining on. If this happens, repeat steps 3 and 4 above.)
3. Press and hold the MUTE key for 3 seconds until the TV mode key light briefly turns off then remains on. Press and release the mode key that you always want to operate the volume commands (Bell, TV, DVD, and AUX). The selected mode key light will remain on.

4. Press and release the MUTE key to save the setting. The selected mode key light will turn off indicating a successful setup. If the selected mode key light flashes for 3 seconds and turns off, then the selected mode will have no volume commands of its own and will need to start over from step 1.

F-I. Channel Control Depends on Device Selected

1. Press and hold the TV key and while holding it pressed, press the SELECT key for 1 second.
2. Release both keys, all of the mode keys will flash followed by the TV mode key light remaining on.
3. Press and hold the LAST key for 3 seconds until the TV mode key light briefly turns off then stays on, then release the LAST key.
4. Press and release the LAST key to save the setting. The TV mode key light turns off indicating successful setup.

G. MODE DEACTIVATION

The channel controls (Channel Up/Down, 0-9 and LAST) will always work your receiver. If you'd like the channel commands to be sent to different devices depending which mode you are in, then follow the instructions in Section F-I.

H. MULTIPLE DEVICE POWER CONTROL SETUP OPTIONS

After pressing the Bell key, pressing the POWER key turns the Set Top Box on or off, AND turns on or off the TV if it has been setup. If you want the POWER key to turn on other devices at the same time you can enable these as follows:

F-II. Channel Always Controls your Set Top Box (Factory Default)

1. Press and hold the TV key and while holding it pressed, press the SELECT key for 1 second. Then release both keys.
2. Release both keys, all of the mode keys will flash followed by the TV mode key light remaining on.
3. Press and release the 1 key. If no mode key is pressed in step 2 ALL modes will be enabled.

To remove a mode from the Power key:

1. Press and hold the Bell key and while holding it pressed, press the SELECT key for 1 second. Release both keys.
2. Press and release the mode key (TV, DVD or Aux) you want to disable.
3. Press and release the 0 key. If no mode key is pressed in step 2, ALL modes will be disabled.

NOTE: you can turn individual devices on/off by pressing the desired Mode key followed by the POWER key.

I. BACKLIGHT CANCELLATION FEATURE

You can turn the backlights on or off.

1. Press and hold both the TV key and the SELECT key. Release both at the same time.
2. Press GUIDE.

To reverse it repeat the same steps again.

J. RESETTING TO FACTORY DEFAULT

1. Press and hold both the TV key and SELECT. Release both keys at the same time.
2. Press and hold DELETE for 3 seconds until the TV key blinks and stays off.
3. If no key is pressed within 30 seconds, the remote will turn off and return to normal.

K. TROUBLESHOOTING LEARNING

You can only learn TV codes under the TV mode, DVD codes under the DVD mode, etc. If you are trying to learn from a "Universal" remote, it might have more than one code type stored under a mode.

- No functions may be stored under the LEARN key, or in the Bell mode.
- Depending on your original remote, some keys may not be learnable.
- Only 1 original device type can be learned per individual mode.
- Use only new batteries.
- Keep at least 3 feet away from incandescent or low energy lights.
- Before learning, clear all learned commands (refer to Section D-II) then try learning 2 or 3 commands initially.
- Point your original remote at the bottom end of your Bell Fibe TV Remote so both remotes are directly in line with each other. You may need to adjust the height of either remote.

h. Avoid learning your original remote's Volume/Mute, VCR or DVD transport keys unless you're sure these operate the same device.

- If learning the first or second keys for a mode results in continuous errors then try the following:

- End the learn session by pressing the LEARN key.
- Clear out the learned commands for that mode.
- Adjust the distance between the two remotes to be closer or further away.
- Try learning the original remote for that mode again. If problems reoccur with the same key, check to see if it works with the original remote. Try learning that key, under a different clear mode. If it learns SELECT then it is likely to be a different code type from the others and cannot be learned under the same mode.

CODE LIST

Codes in bold are for new TVs

TV	
Abex	0215 • 0185
Acer	0081 • 0083
Acme	0010
Admiral	0001 • 0020 • 0226
Advent	0116 • 0176 • 0922
Adventura	0174
Aiko	0058
Aiwa	0195 • 0196 • 0227 • 0269
Akai	0002 • 0077 • 0105 • 1137 1138 • 0254 • 105 • 1113 • 1139
Alleron	0051
Amark	0020
Amtron	0053
Anam National	0003 • 0025 0042 • 0053 • 0193
AOC	0004 • 0005 • 0009 • 0014 0156 • 0175 • 0187 • 1009
Apex	0215 • 0214 • 0216 • 1132
Archer	0020
Aspect	0059
Audiovox	0053 • 1019 • 1117
Axion	0177
Bang & Olufsen	0190
Belcor	0004
Bell & Howell	0000 • 0001 • 0031 • 0049
Beng	0081 • 0083 • 0101
Bluesky	0144 • 1155
Bradford	0053
Broksonic	0135 • 0147 • 0310
Brokwood	0004
Candle	0004 • 0008 • 0009 • 0174
Capehart	0175
CCE	1153
Celebrity	0002
Celera	0214
Centrios	0169
Centurion	0009
Cetronic	0042
Changhong	0214 • 0401
Cineral	0058 • 0144
Citizen	0001 • 0004 • 0009 • 0008 0042 • 0053 • 0058 • 0105 0109 • 0135 • 0189
Clairtone	0014
Classic	0042 • 0214 • 0401
Coby	1091 • 1124
Color Voice	0010
ColorTyme	0004 • 0009 • 0010
Concerto	0004 • 0009
Concierge	0121
Contec/Cony	0012 • 0014 • 0042 • 0053
Cornea	0050
Craig	0042 • 0053
Crosley	0062
Crown	0042 • 0053
Curtis Mathes	0000 • 0001 • 0004 • 0009 0015 • 0031 • 0049 • 0105 0109 • 0130 • 0358
CTX	0020
CXC	0042 • 0053
Cybervision	0144
Daewoo	0100 • 0004 • 0005 0009 • 0010 • 0017 • 0018 0019 • 0039 • 0042 • 0043 0058 • 0080 • 0126 • 0127 0130 • 0138 • 0140 • 0444
Daytron	0004 • 0009
Dell	0028 • 0132 • 0209
Diamond Vision	0092 • 0210 • 0948
Digimaster	0107
Digistar	0116 • 0118 • 0132 • 0165 0167 • 0119 • 0120 • 1151 • 1152
Dimensia	0000 • 0031
Disney	0135 • 0158
Dukane	0059 • 0072
Dumont	0004 • 0121
Durabrand	0135 • 0153 • 0157 0189 • 0217 • 1135
Dynasty	0042
Electroband	0002 • 0014
Electrohome	0003 • 0004
	0009 • 0022 • 0254

Elektra	0001
Elite Video	0197
Emerson	0004 • 0009 • 0021 • 0023 0024 • 0025 • 0027 • 0030 • 0032 0034 • 0035 • 0037 • 0039 • 0040 0041 • 0042 • 0044 • 0045 • 0049 0051 • 0053 • 0130 • 0135 • 0147 0179 • 0189 • 0210 • 0456
Envision	0004 • 0009 • 0074 • 1009
ESA	0189
Fisher	0012 • 0049 • 0110 • 0180 • 268
Fujitsu	0197 • 1006 • 0051
Funai	0042 • 0051 • 0053 0189 • 0227 • 0456
Futuretec	0042 • 0053
Gateway	0046
GE	0000 • 0003 • 0004 • 0009 • 0015 0022 • 0031 • 0044 • 0052 • 0054 0087 • 0107 • 0125 • 0164 • 0342
Gibralter	0004 • 0121
Goldstar	0004 • 0005 0009 • 0012 • 0057 0080 • 0156 • 0227 • 0338
Gradiente	0004 • 0153 • 1013 • 1160 • 1159
Grundy	0051 • 0053
Guestvision	0201
Gvision	1005
Haier	0081 • 0157 • 0216 • 0217 • 1147
Hallmark	0004 • 0009
Harley Davidson	0153
Harvard	0053
Hewlett Packard	1004 • 1015
Hisense	0073 • 0182 • 0216 • 1016
Hitachi	0059 • 0060 • 0061 0072 • 0088 • 0091 • 0137 0139 • 0141 • 0179 • 1002 0001 • 0004 • 0009 • 0012 • 0142 • 0227
Hyundai	1134
ILO	0146 • 0189 • 0198 1023 • 1024 • 1070 • 1139
IMA	0053
In Focus	0000
Infinity	0062 • 0288
Initial	0146 • 1070 • 1085 • 1109
Insignia	0029 • 0061 • 0103 • 0116 • 0133 0135 • 0167 • 0189 • 0217 • 0456 • 1148
Integra	0181
Inteq	0121
Janeil	0174
JBL	0062
JCB	0002
JC Penney	0000 • 0004 • 0005 • 0008 0009 • 0011 • 0062 • 0068 • 0075 0141 • 0183 • 1158
Philips	0204 • 0205 • 0208 • 0003 0004 • 0008 • 0062 • 0068 • 0075 0081 • 0086 • 0087 • 0141 • 0183 0184 • 0189 • 0199 • 0200 • 0206 0207 • 1149 • 1154
Philips-Magnavox	0062 • 0183 • 0204 0207 • 0226 • 0288
Pilot	0004
Jensen	0004 • 0009 • 0133
JVC	0060 • 0069 • 0160 0012 • 0026 • 0065 • 0067 0141 • 0197 • 0247 • 0293
Kawasho	0002 • 0004 • 0009
Kapani	0175
KEC	0042 • 0053
Kenwood	0004 • 0009
KLH	0214
Kloss Novabeam	0068 • 0174
Kogi	1005
Konka	0011 • 0016 • 0029 • 0047 0053 • 0066 • 0103 • 0412 • 0413
Kotobuki	0009 • 0010 • 0017 • 0018
Kurazai	0001
Lasonic	0210 • 0948
Legend	0116
LG	0050 • 0155 • 0004 • 0005 0009 • 0012 • 0057 • 0080 0132 • 0156 • 0227 • 0338
Liquidvideo	0168 • 0177
Lloyd	0153
Lodgenet	0000 • 0001 • 0031 • 0202
Loewe	0062 • 0211
Logik	0000 • 0001 • 0031
Luce	0055
Luxman	0004 • 0009
LXI	0000 • 0004 • 0009 • 0015 0049 • 0062 • 0107 • 0109 • 0227
Magnasonic	0051
Magnavox	0204 • 1133 • 0004 0008 • 0009 • 0062 • 0068 0075 • 0141 • 0183
RCA	0000 • 0031 • 0003 0004 • 0005 • 0009 • 0015 0022 • 0048 • 0054 • 0094 0096 • 0100 • 0102 • 0107 0113 • 0125 • 0129 • 0162
Rhpsody	0046
Maxent	0046
Medion	0158 • 0198 • 0213
Megatron	0004 • 0009 • 0059
MEI	0014
Memorex	0000 • 0001 • 0004 • 0009 0031 • 0049 • 0051 • 0135 0268 • 0310 • 1007
MGA	0004 • 0005 • 0009 • 0012 0015 • 0080 • 0104 • 0106 • 0109 • 0172
Sampo	0124 • 0004 • 0009 0012 • 0046 • 0175
Samsung	0007 • 0076 • 0077 • 0085 0105 • 0004 • 0005 • 0009 • 0012 0039 • 0058 • 0064 • 0134 0135 • 0138 • 0153
Rhapsody	0014
Runco	0111 • 0121 • 0181
Samco	0004 • 0005 • 0009 • 0010
Zenith	0050 • 0059 • 0078 0091 • 0111 • 0121 • 0131 • 0001 0004 • 0009 • 0023 • 0038 0039 • 0058 • 0064 • 0134 0135 • 0138 • 0153
White Westinghouse	0080 • 0100 • 0130 0138 • 0136 • 0227 • 1008
Hitachi	0404 • 0407 0428 • 0419 • 0387
Irradio	0417
JVC	0398 • 0406 • 0408 • 0964 0900 • 1072 • 0418 • 0923
Zenith	0050 • 0059 • 0078 0091 • 0111 • 0121 • 0131 • 0001 0004 • 0009 • 0023 • 0038 0039 • 0058 • 0064 • 0134 0135 • 0138 • 0153
Kenwood	0400 • 0429 0410 • 0411 • 0412 • 0413 • 0905
Koss	0415 • 0388
Lasonic	0451 • 0948
LG	0405 • 0972 • 0907
Magnavox	0398 • 0408 • 0458 • 0981 0456 • 0915 • 0914 • 0969
Marantz	0398 • 0405 0408 • 0423 • 0981
Panasonic	0446 • 1050 • 1118 • 1123
RCA	0430
Minetek	0402
NAD	0405 • 0433
Nakamichi	0432
Nexxtech	0952 • 0954 • 0955 0956 • 0934 • 1052 • 1054 1055 • 1056 • 1057 • 1063
Sears	0000 • 0004 • 0009 • 0012 0015 • 0031 • 0049 • 0051 • 0062 0079 • 0105 • 0107 • 0109 • 0110 0112 • 0180 • 0189 • 0394 • 0456
Sony	0004 • 0012 • 0049 • 0049 0012 • 0051 • 0180
Toshiba	0924

Maxent	0046
Medion	0158 • 0198 • 0213
Megatron	0004 • 0009 • 0059
MEI	0014
Memorex	0000 • 0001 • 0004 • 0009 0031 • 0049 • 0051 • 0135 0268 • 0310 • 1007
MGA	0004 • 0005 • 0009 • 0012 0015 • 0080 • 0104 • 0106 • 0109 • 0172
Sampo	0124 • 0