



Configuration Guide

Jumper Settings

Drive Termination

Enable Termination	TE jumper on
Disable Termination	TE jumper off

Termination Power

Enable Term Power	TP jumper on
Disable Term Power	TP jumper off

Set SCSI ID:

SCSI ID	A0	A1	A2
0	Off	Off	Off
1	On	Off	Off
2	Off	On	Off
3	On	On	Off
4	Off	Off	On
5	On	Off	On
6	Off	On	On
7	On	On	On

Pin	Signal	Pin	Signal
1	A0	2	logic_gnd
3	A1	4	logic_gnd
5	A2	6	logic_gnd
7	Fault LED	8	key
9	Busy LED	10	Spindle Sync ref.
11	+5VDC out	12	(reserved)
13	Spin Delay	14	logic_gnd
15	AC low	16	logic_gnd
17	(reserved)	18	(reserved)
19	Spindle Sync	20	logic_gnd

Spin Delay:

Enable spin delay
Disable spin delay

SD jumper off
SD jumper on