


Quick Start Guide

Smart Wi-Fi Lamp Dimmer Kit

Appearance

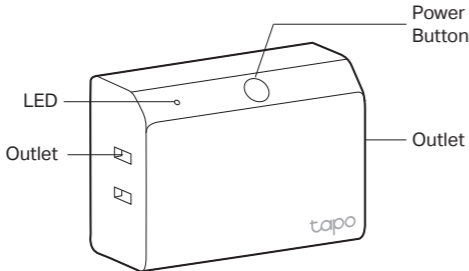

Outlets *2

Connect lamps and control them simultaneously

Power Button

- **Touch once:** Turn on/off lamps
- **Touch and hold for 5s:** Reset Wi-Fi while preserving other existing settings
- **Touch and hold for 10s:** Reset to factory default settings


1 Download the Tapo App

Download the Tapo app from the App Store or Google Play.



2 Set Up with the Tapo App

Open the Tapo app and tap the ⊕ button. Select **Plugs** and then your model. Follow the app instructions to complete setup.

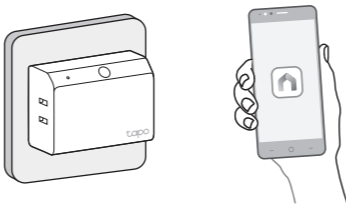

3 Connect Lamps

Connect lamps to the outlets and control them simultaneously.

For Device Safety

- ⚠ **Lamps only.** Do NOT exceed the max load. Total Max Load: 150W LED, 300W INC/HAL
- ⚠ **Do NOT** connect products powered by power adapters. This may damage the adapter and cause hazards.
- ⚠ **Not compatible** with smart lights.

Supported Dimming Type

TRIAC Dimming/Forward (Leading-edge) Phase Dimming

*It's also suggested to contact your bulb's Support to check the supported dimming type of the bulb.

For Optimal Dimming Performance


- ⚠ **Make sure** the lights connected to the outlets are the same fixture type, support the same dimming type, and have the same load.
- ⚠ **Bulbs may vary** in their dimming range. Recalibrate the brightness in the Tapo app after changing a bulb.

If the lights are too bright when dimming to the minimum level, or they flicker:

1. Check if the connected lights are the same brand and model.
2. Open the Tapo app and go to **Device Settings** to adjust the dimming range.

4 Use the Dimmer Button to Control Lights

Remove the battery insulation tab to power up your dimmer button. It will be paired with the dimmer automatically. You can tap or rotate the button to control the lights.

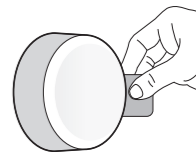


If you can't control the lights, try moving closer or manually pairing the button with the dimmer.

How to pair manually:

- a. Unplug the dimmer and plug it back in.
- b. Within 20 seconds, press and hold the button for at least 5 seconds to start pairing.
- c. The LED on the dimmer will quickly flash green and orange, indicating a successful pairing.

How to Attach the Dimmer Button


Magnetically attach the button to metallic surfaces. The installation height should not be higher than 2 meters.

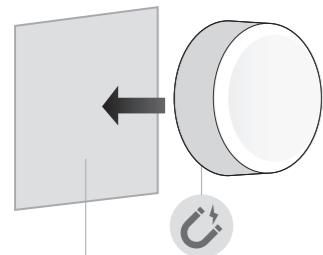


Metallic Surface

How to Replace the Dimmer Button Battery

1 Option 1: By Hand

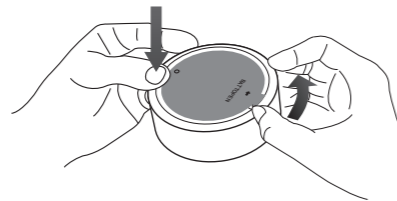


Option 2: With a Shim

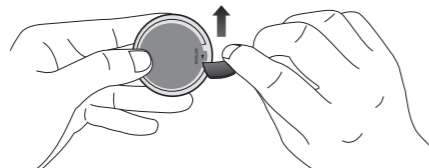

2 Replace Battery (Battery Type: CR2032)

*Make sure the battery is level and its positive side is facing up.

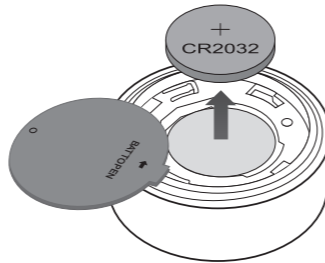

Specifications

Rating: 120V~ 60Hz
 Max Load: 150W LED, 300W INC/HAL
 Operation Temperature: 32°F ~ 104°F
 ELECTRONIC – DISCONNECTION (Type 1.Y)
 Impulse Voltage: 1500V
 Pollution Degree 2

CAUTION!

Avoid replacement of a battery with an incorrect type that can defeat a safeguard.
 Avoid disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
 Do not leave a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas; Do not leave a battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

CAUTION: Do not ingest battery, Chemical Burn Hazard

This product contains a coin / button cell battery. If the coin / button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
 Keep new and used batteries away from children.
 If the battery compartment does not close securely, stop using the product and keep it away from children.
 If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

CAUTION!

Risk of explosion if the battery is replaced by an incorrect type.

CAUTION!

Stop using the dimmer button if the battery leaks in the battery compartment. In the event of a battery leaking, do not allow the liquid to come in contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.



Explanation of the symbol on the product

Warning! This product contains a button cell or coin battery. Avoid ingestion hazard. Death or serious injury can occur if ingested.

⚠ WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH** of **CHILDREN**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



- a) Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- b) Even used batteries may cause severe injury or death.
- c) Call a local poison control center for treatment information.
- d) This product includes button/coin cell batteries of type CR2032.
- e) The nominal voltage of the button/coin cell batteries is +3V.
- f) Non-rechargeable batteries are not to be recharged.
- g) Do not force discharge, recharge, disassemble, heat above 60°C/140°F or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.

Ensure the batteries are installed correctly according to polarity (+ and -). Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries. Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations. Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

Safety Information

Keep the device away from water, fire, humidity or hot environments. Do not attempt to disassemble, repair, or modify the device. If you need service, please contact us. Do not use the device where wireless devices are not allowed. Do not plug in a row: devices of the same or another type not be stacked in normal use.



Semiconductor switch: The lamp is completely powered off only when it is pulled out from the socket of this product. Please read and follow the above safety information when operating the device. We cannot guarantee that no accidents or damage will occur due to improper use of the device. Please use this product with care and operate at your own risk.

📞 Support

For technical support, user guides, warranty and more, please visit <https://www.tapo.com/support/>

a) Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of