

The LEGO logo is displayed in its characteristic white font with a black outline, set against a red square background.The Disney Princess logo is written in a white, elegant cursive font on a pink, ribbon-like banner.

41141

 


**WARNING: CHOKING HAZARD.**  
Toy contains small parts and a small ball.  
Not for children under 3 years.



[LEGO.com/disneyprincess](http://LEGO.com/disneyprincess)




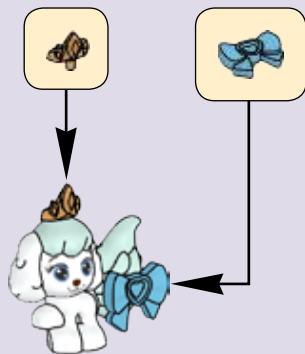


**⚠ AVERTISSEMENT : RISQUE D'ÉTOUFFEMENT.**  
Le jouet contient des petites pièces ainsi qu'une petite boule.  
Il ne convient pas aux enfants de moins de 3 ans.

 **⚠ ADVERTENCIA: PELIGRO DE ASFIXIA.**  
Juguete que contiene partes pequeñas y una pelota pequeña.  
No recomendado para niños menores de 3 años.




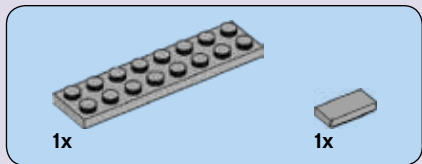

1

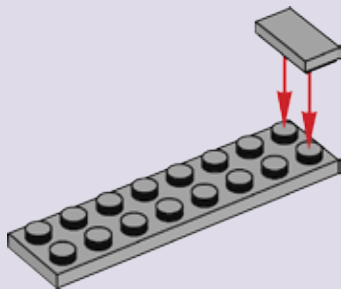 


2

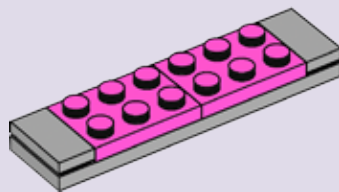 




3

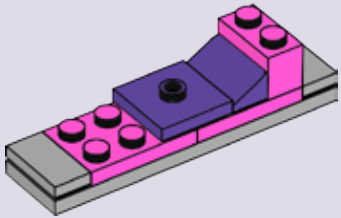 


4

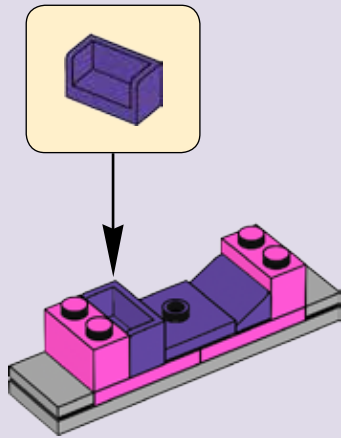 



2x

 5

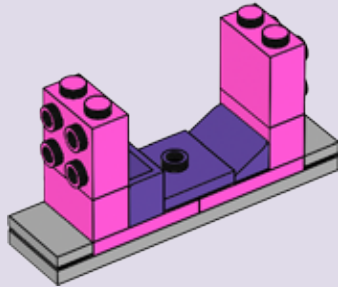


6




2x

 6

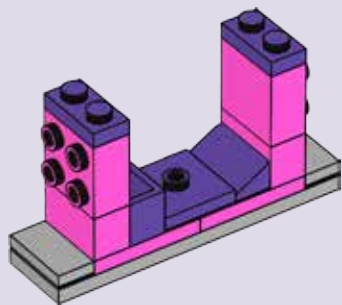

2x


 
7

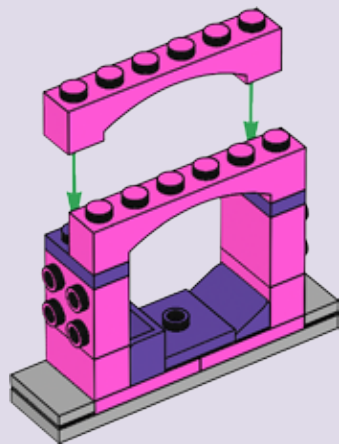



2x

  8

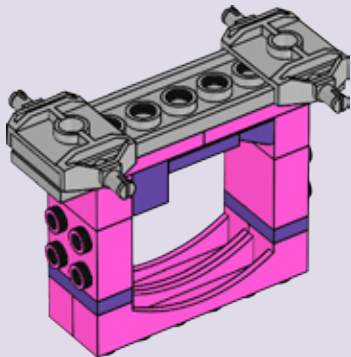








1x



2x

   9

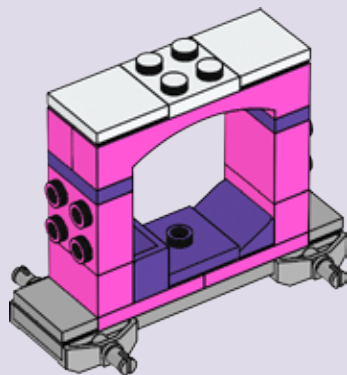

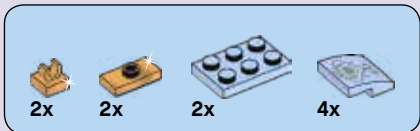

10

 
1




2




3

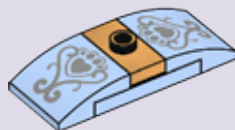

4

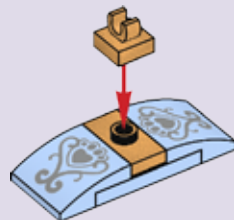 

2x

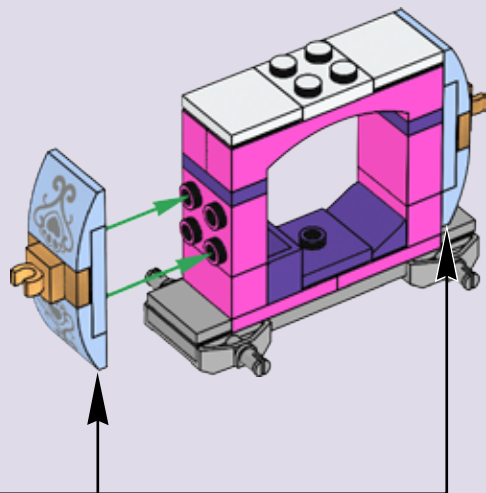 



2x





2x

# 11



  
2x

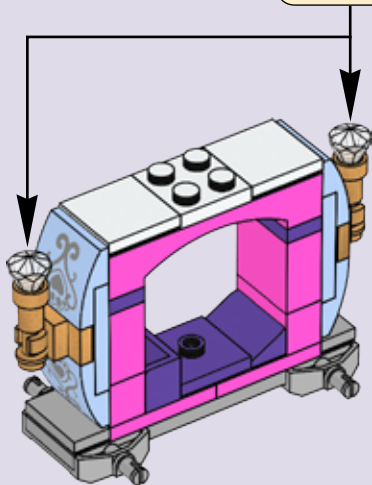

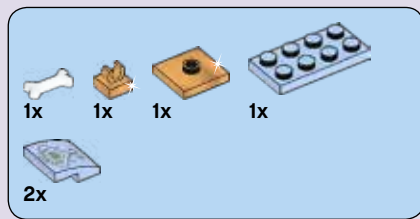


# 12

 
1

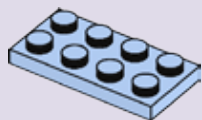

2


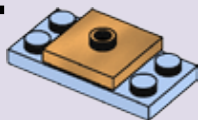 


3

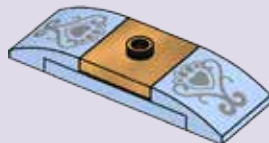 


4



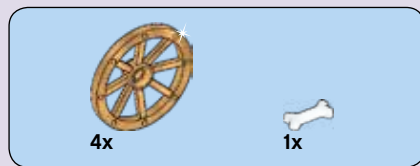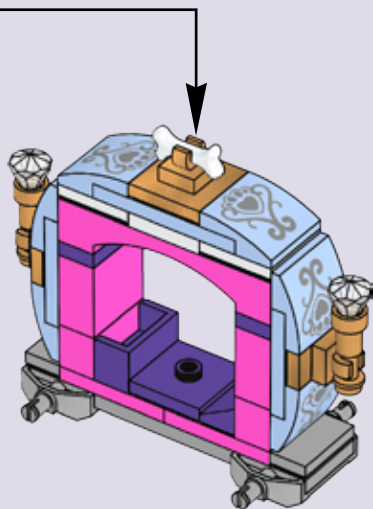  

13

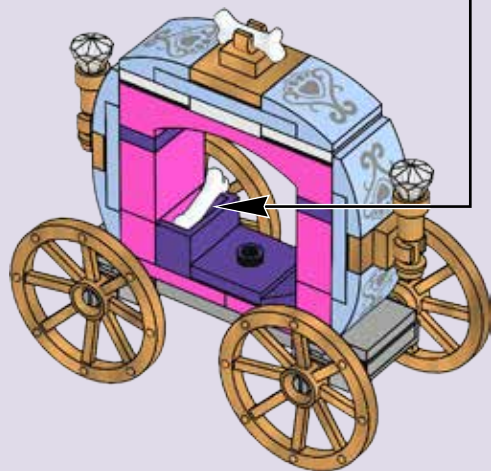 




1




 2

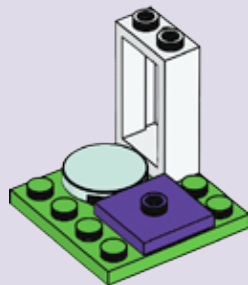



3

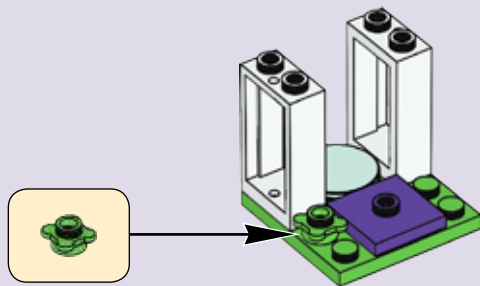 






1x




1x

# 4

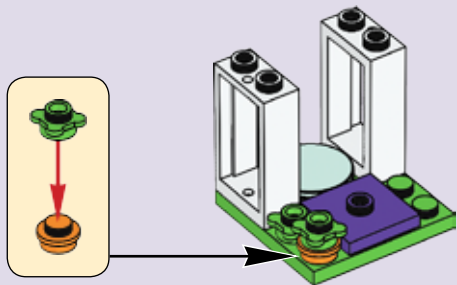 

2x


# 5

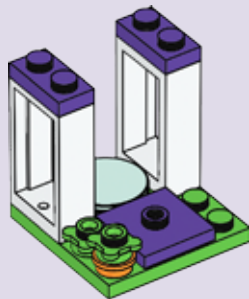 



2x

 6

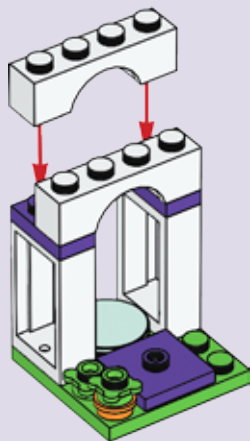




1x

7



4x

 
8

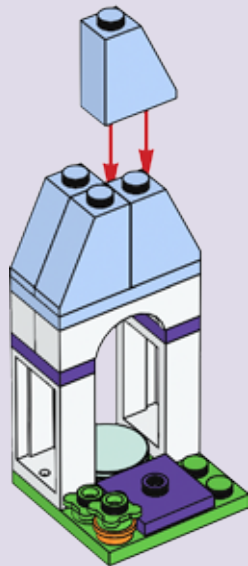



1x

 9

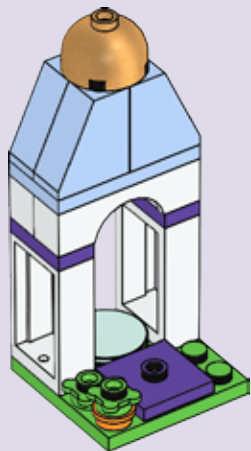


1x




1x

 10




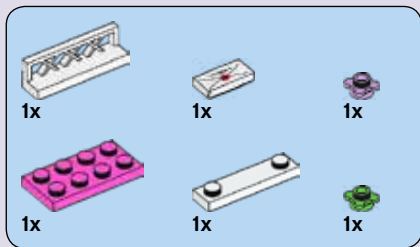


**1**

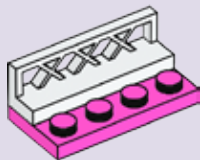 


**2**

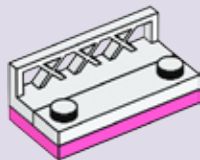 

**3**

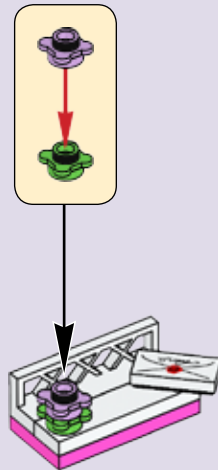 

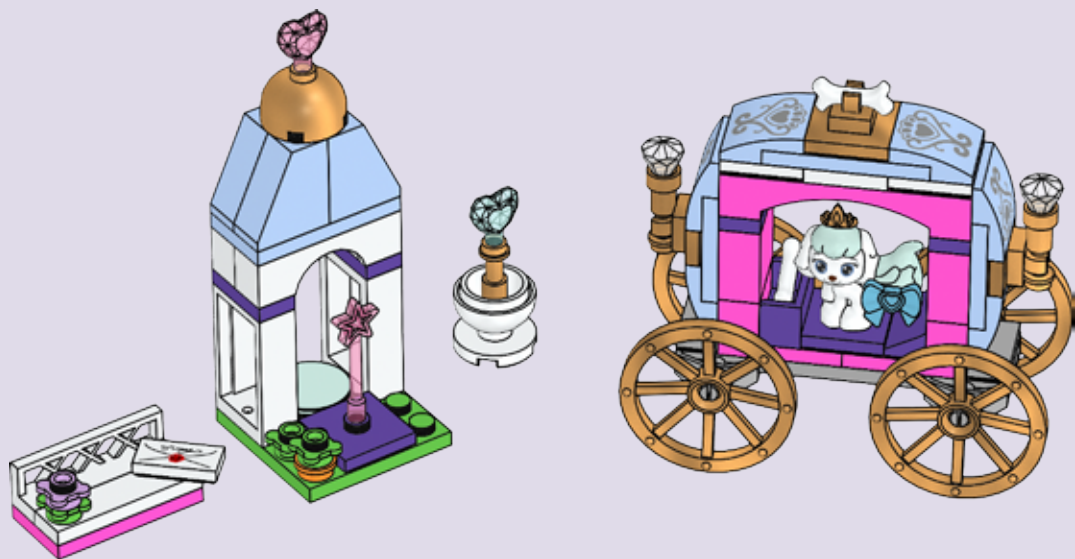 

  
1x  
6050914

  
1x  
6093053

  
2x  
4536521

  
1x  
4119410

  
1x  
6134400

  
2x  
4600294

  
2x  
306801

  
1x  
302201

  
1x  
4597131

  
2x  
365901

  
1x  
4550171

  
3x  
4619599

  
1x  
4617799

  
2x  
4248937

  
1x  
6097099

  
1x  
4157103

  
1x  
6058337

  
1x  
4499710

  
2x  
4211414

  
2x  
4211569

  
1x  
4211406

  
4x  
6060798

  
6x  
6135348

  
2x  
6132418

  
2x  
6132423

  
2x  
6132426

  
2x  
6132425

  
2x  
4621545

  
2x  
6060801

  
1x  
6056263

  
1x  
4566607

  
4x  
4655695

  
1x  
6134716

  
2x  
4659770

  
1x  
6134260


  
3x  
6071259

  
1x  
4569316

  
2x  
6092594

  
3x  
4538126

  
1x  
6107193

  
4x  
6093573

  
1x  
6023825

  
1x  
6096948

  
1x  
6074906

  
Customer Service

Kundenservice

Service Consommateurs

Servicio Al Consumidor

LEGO.com/service or dial



: 00800 5346 5555

: 1-800-422-5346



41055



41063



41062



41061



41068



41066







41141



41069



41140



41142





[LEGO.com/disneyprincess](http://LEGO.com/disneyprincess)





# Friends



41116



41110



41115



41118



41119