 
 


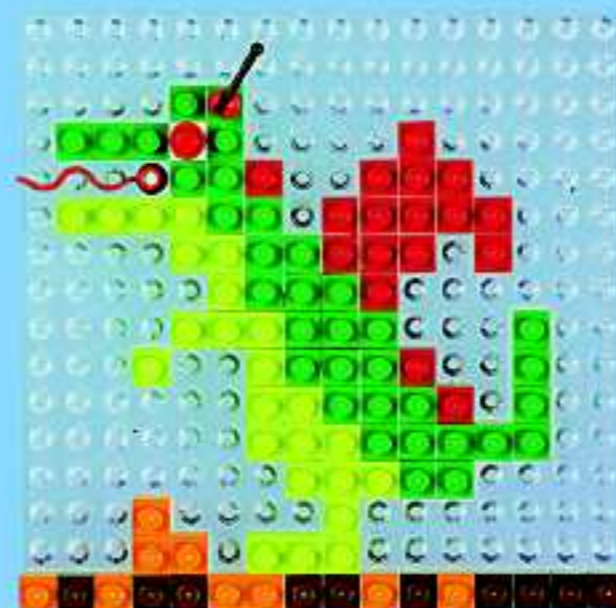






1

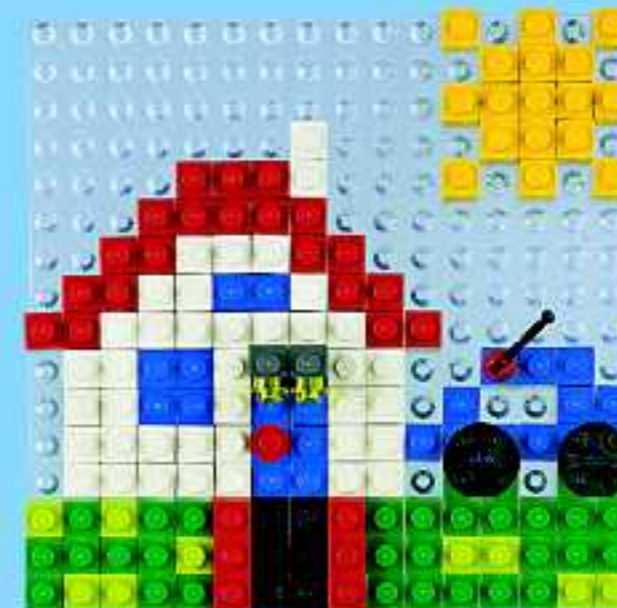



1



   
 
 
2

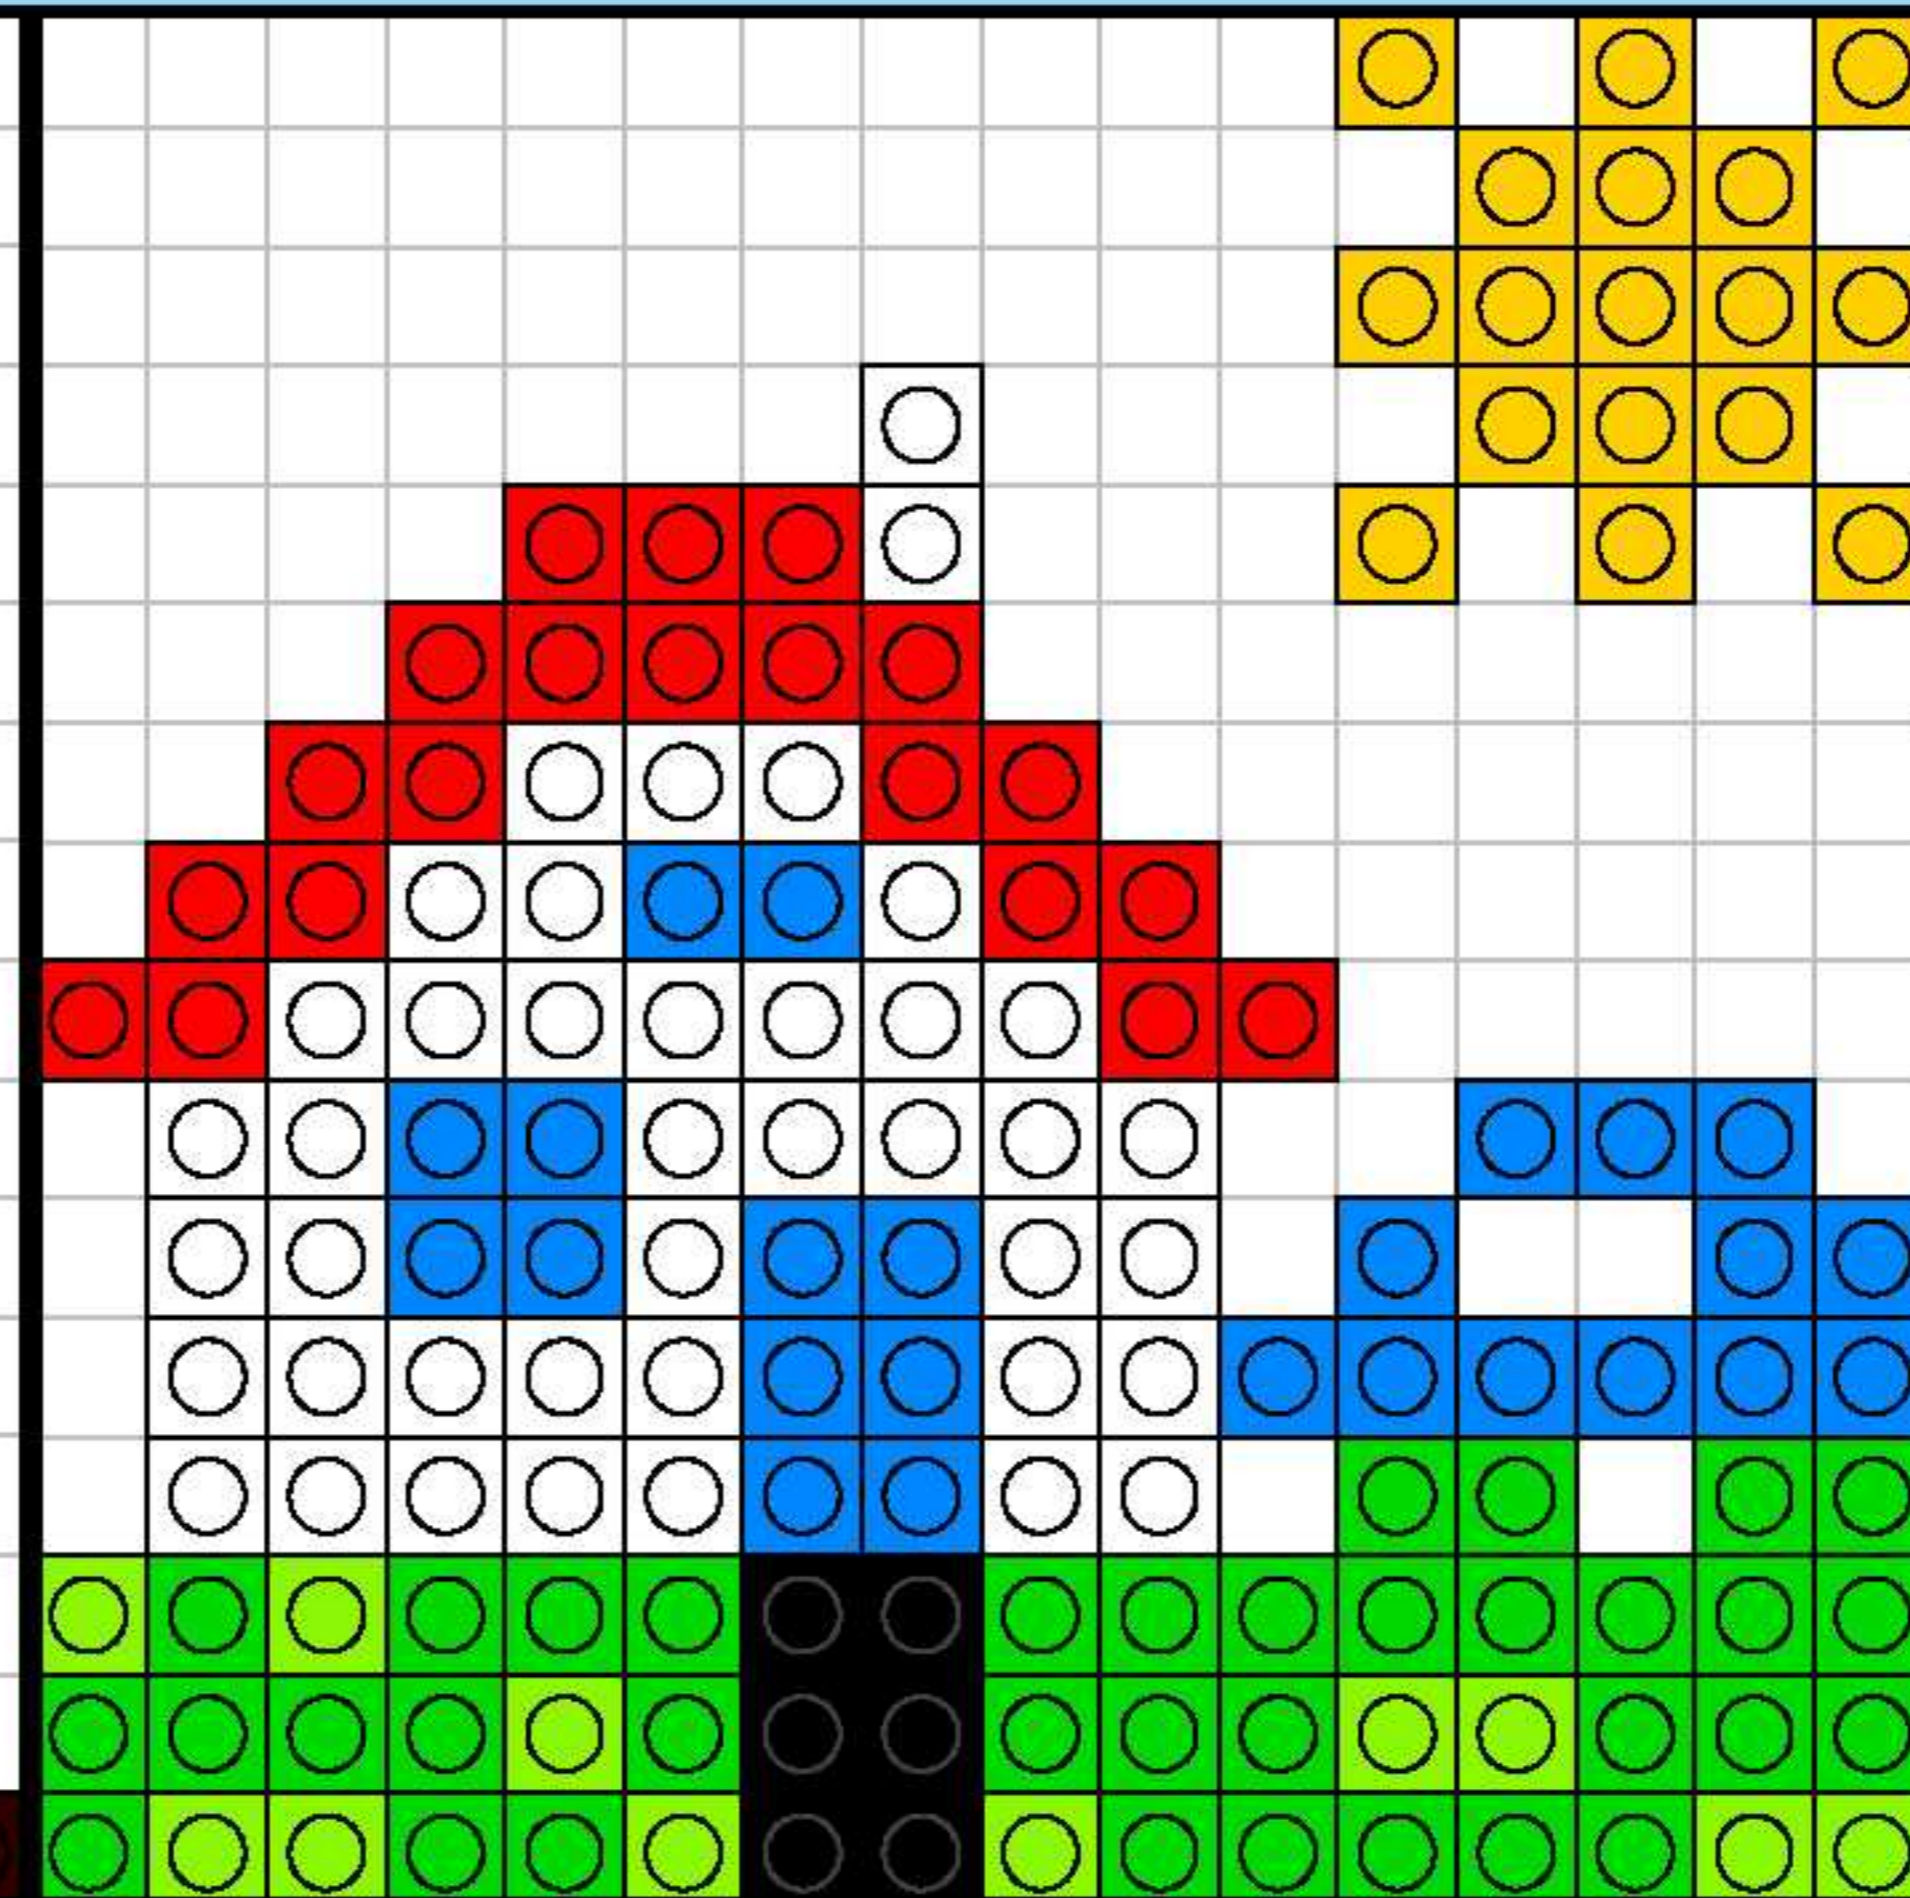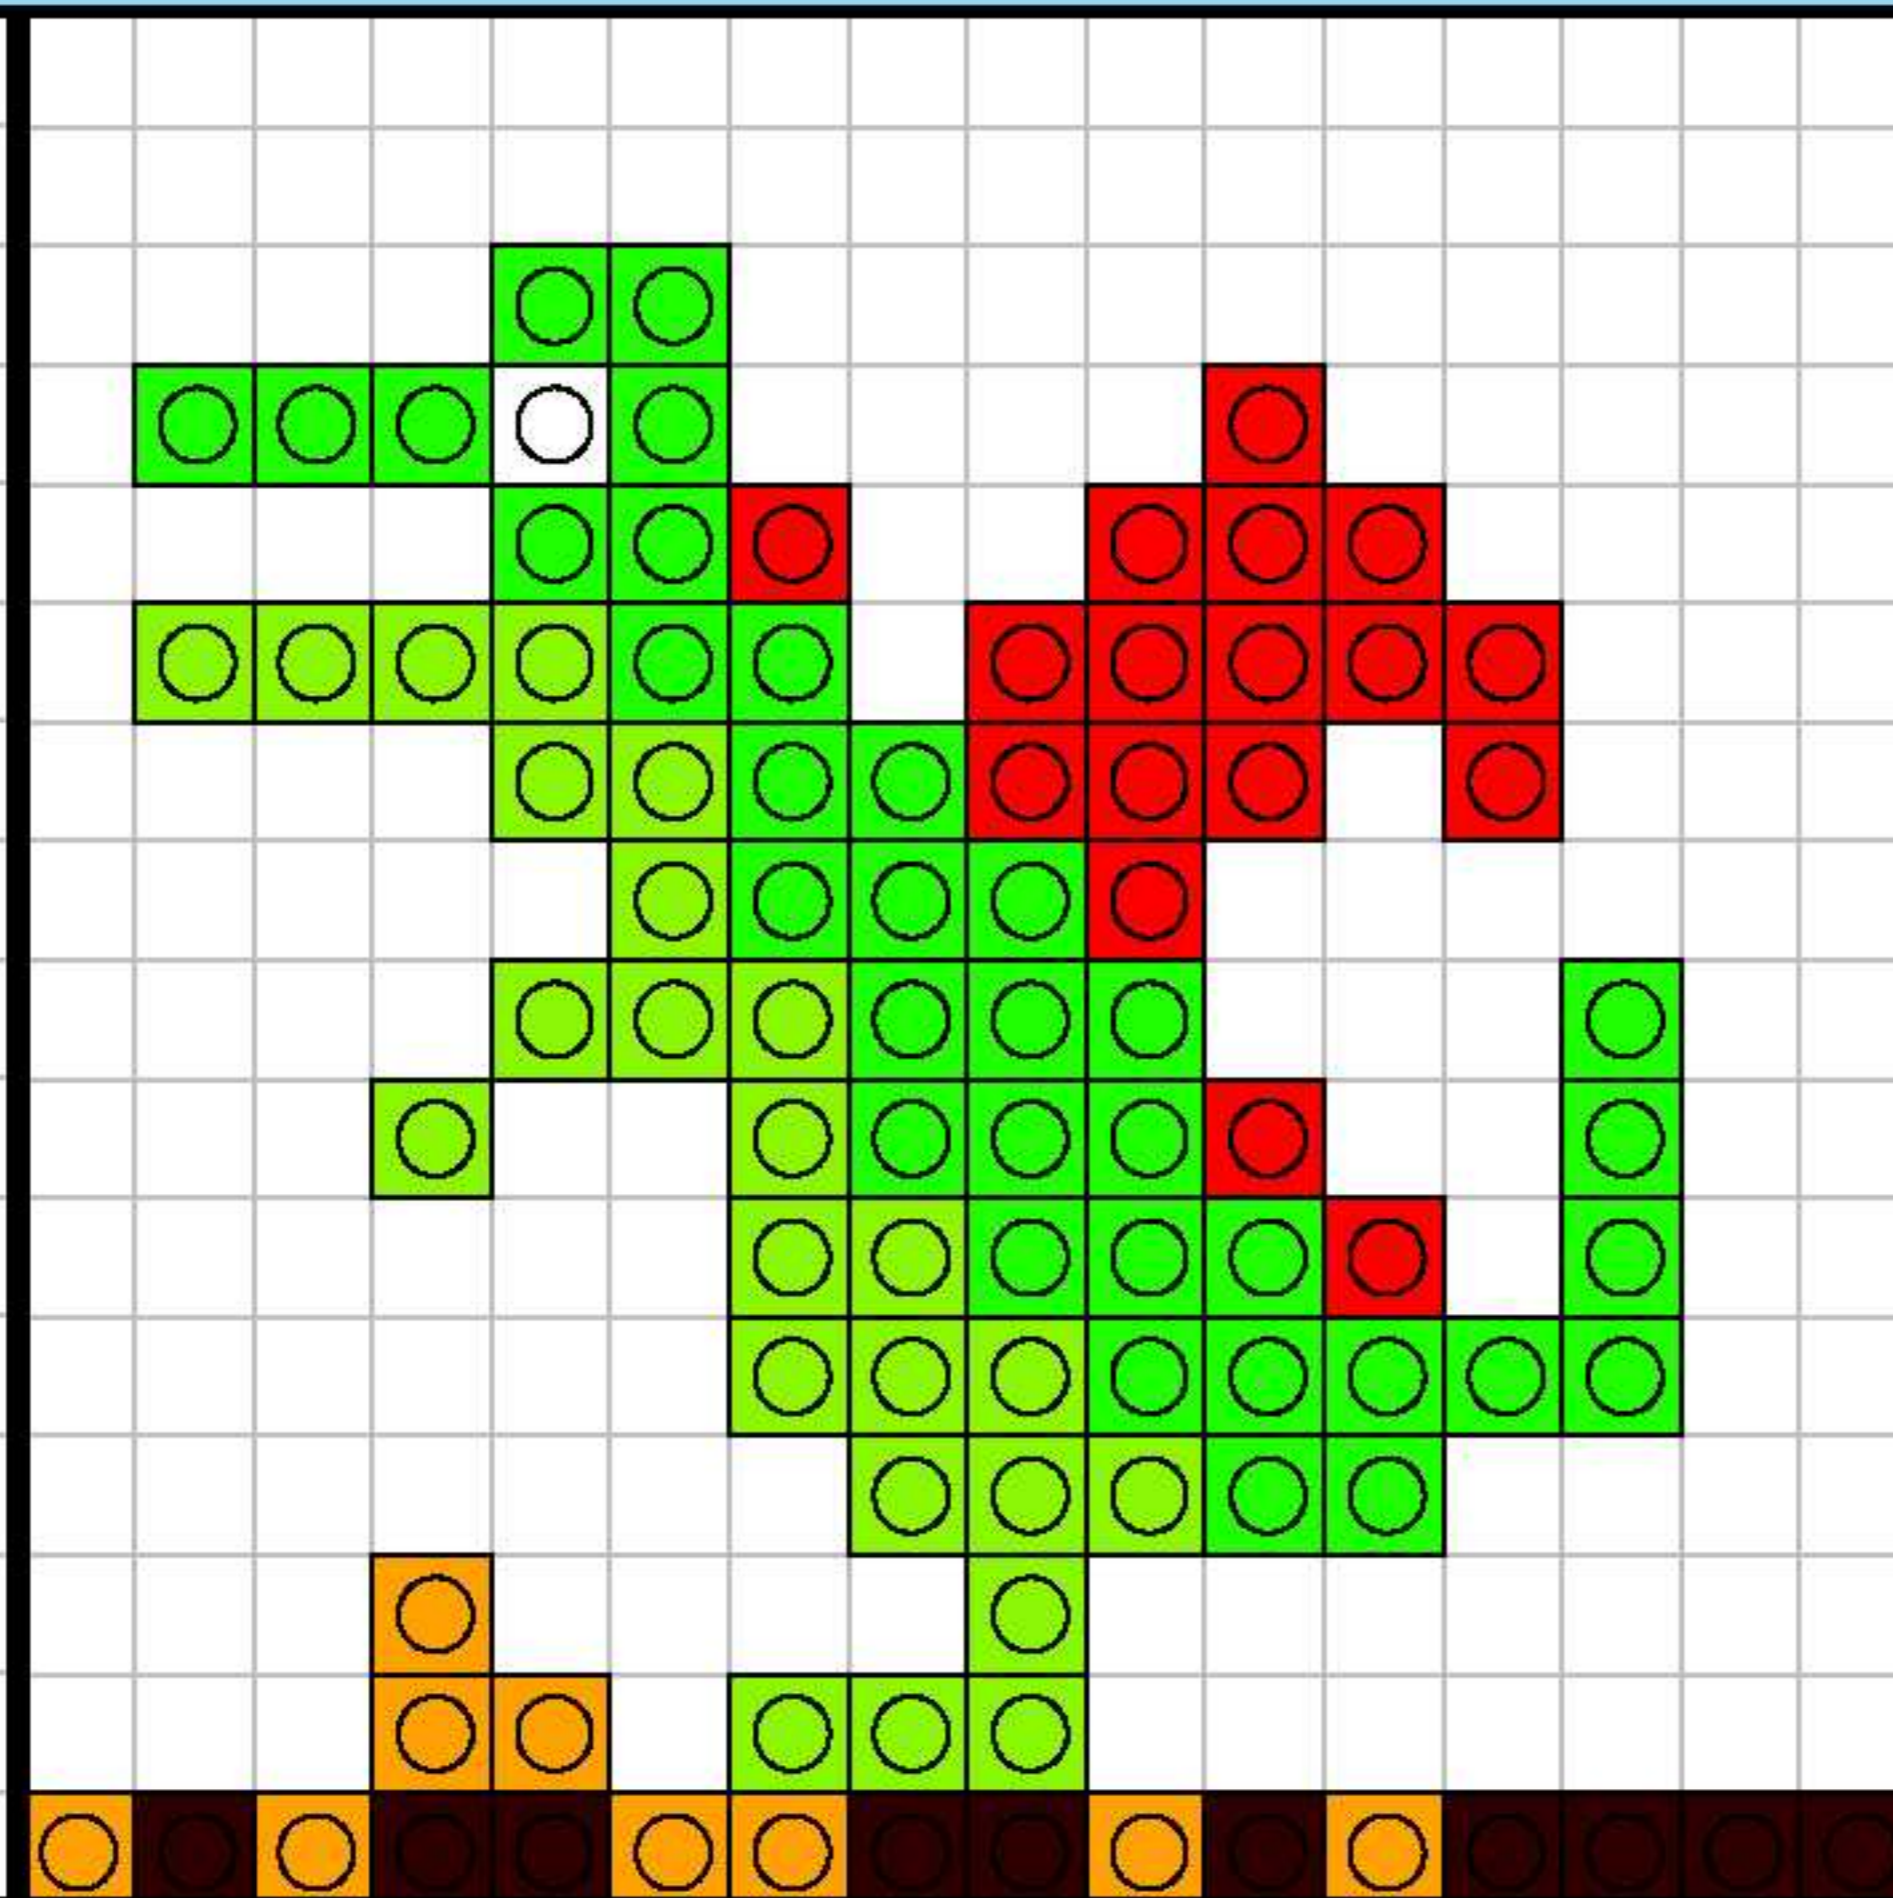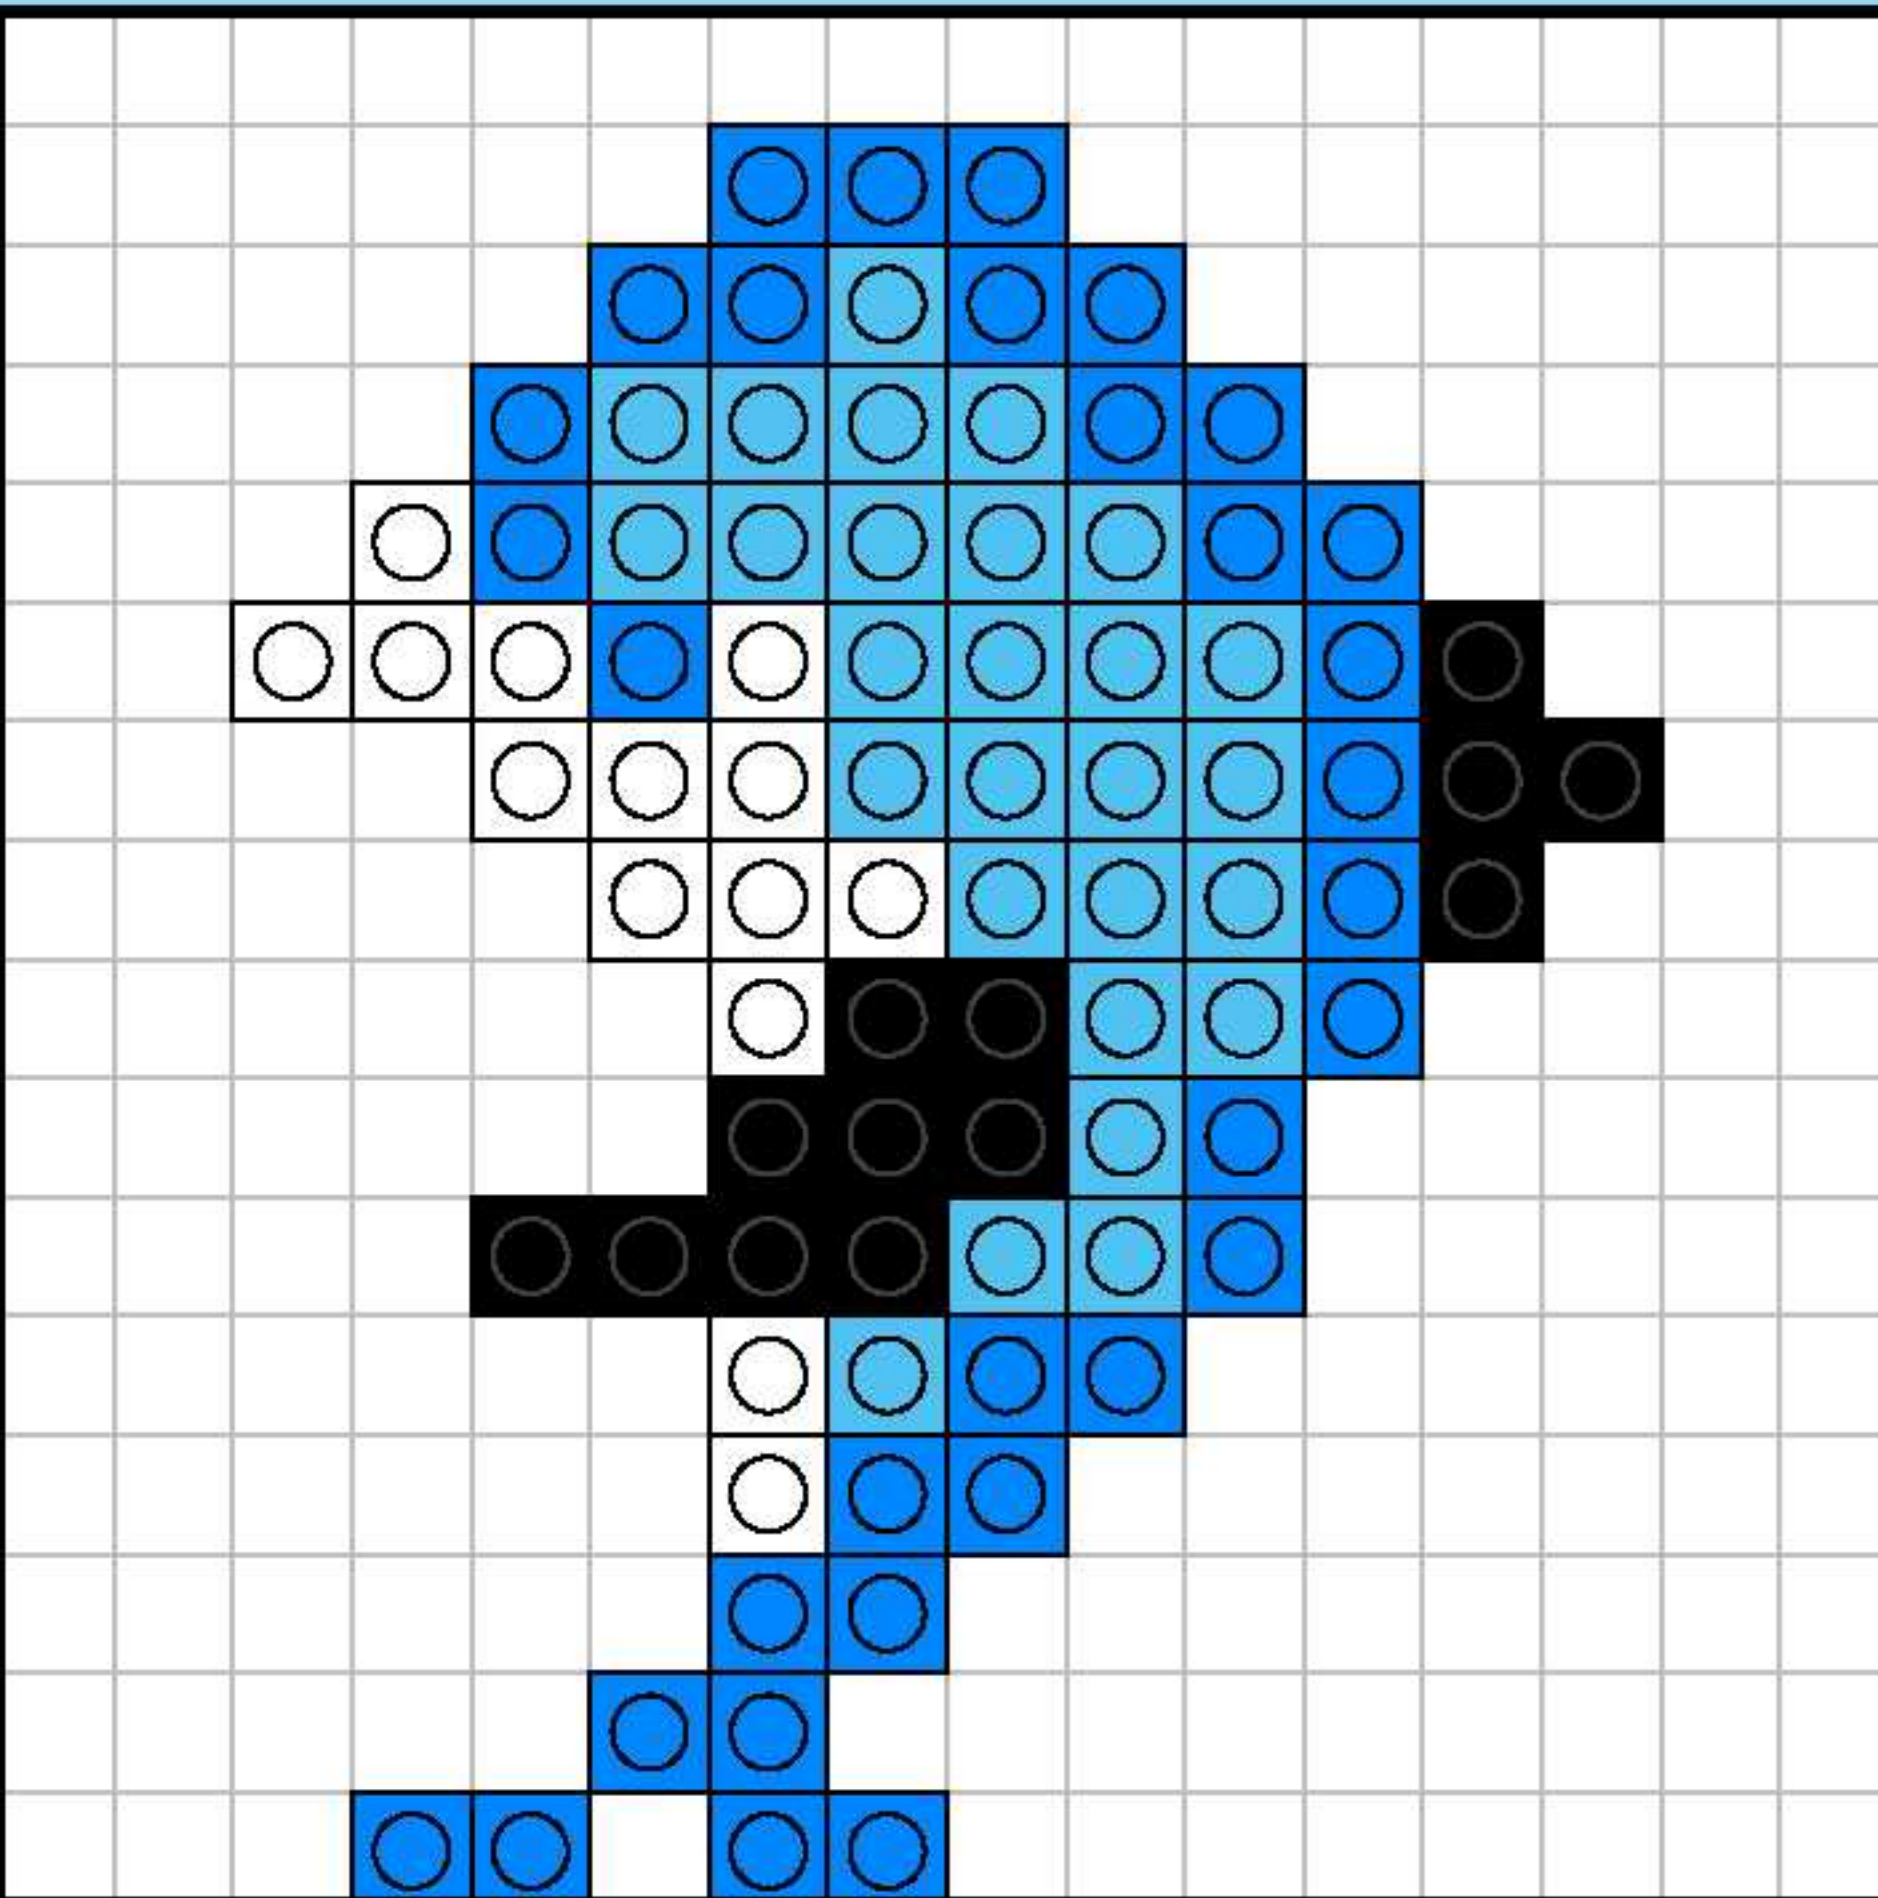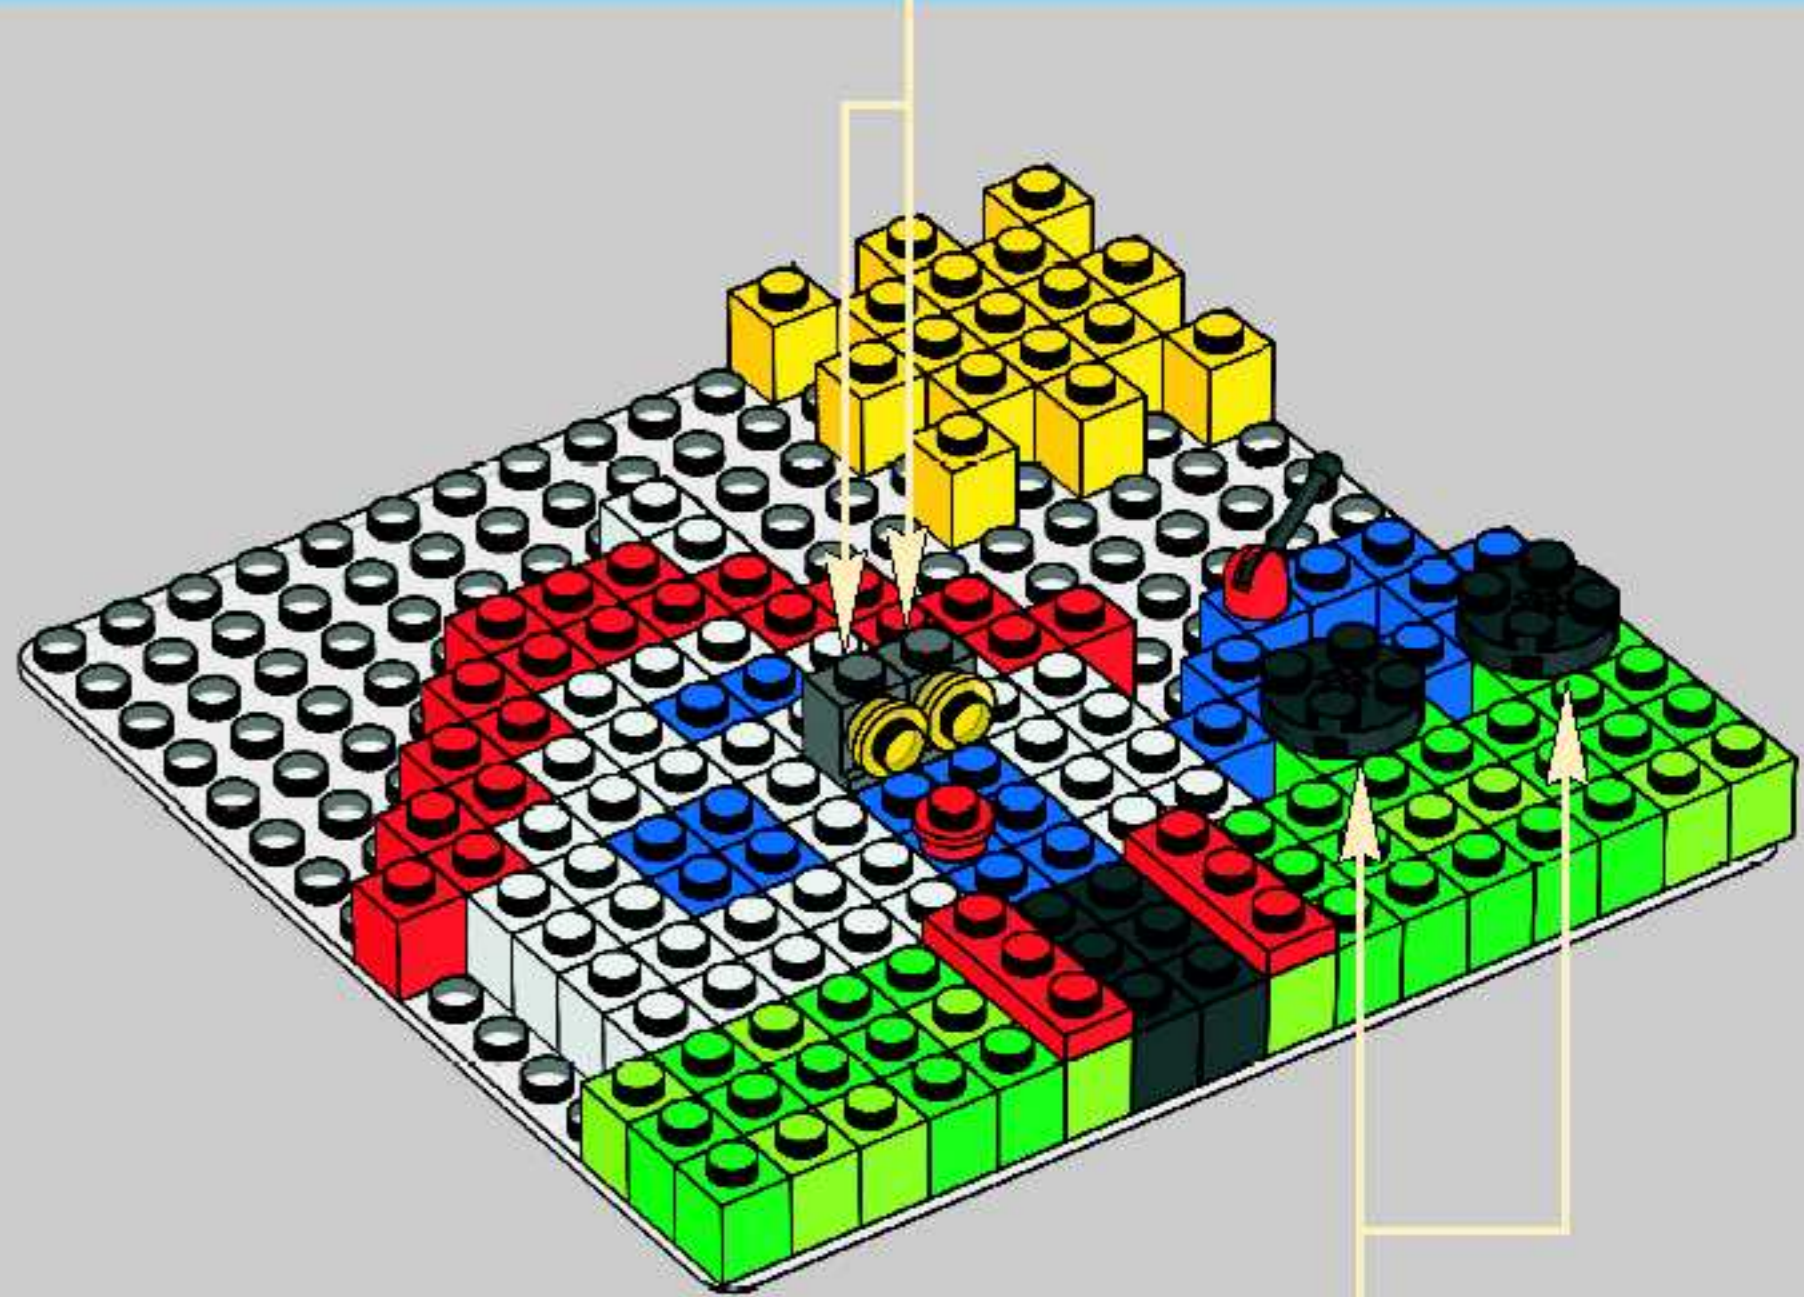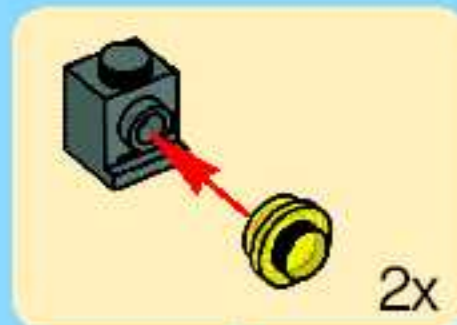


1

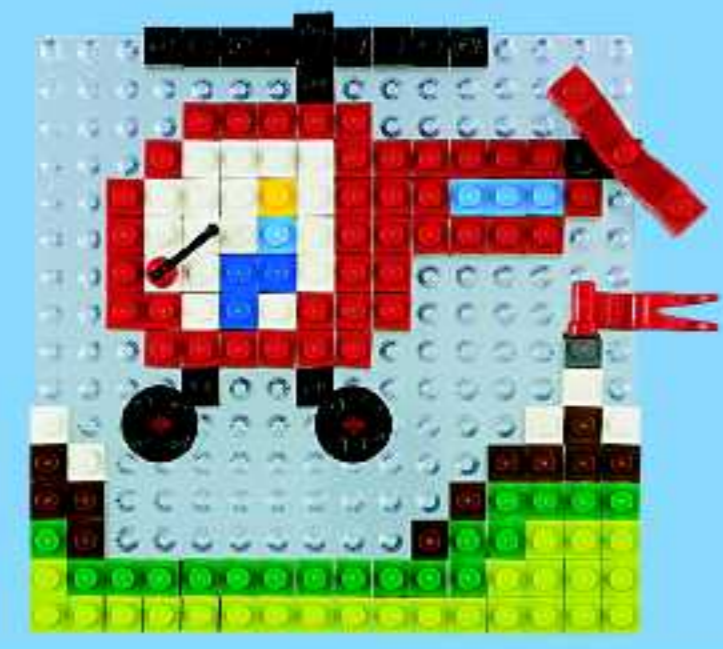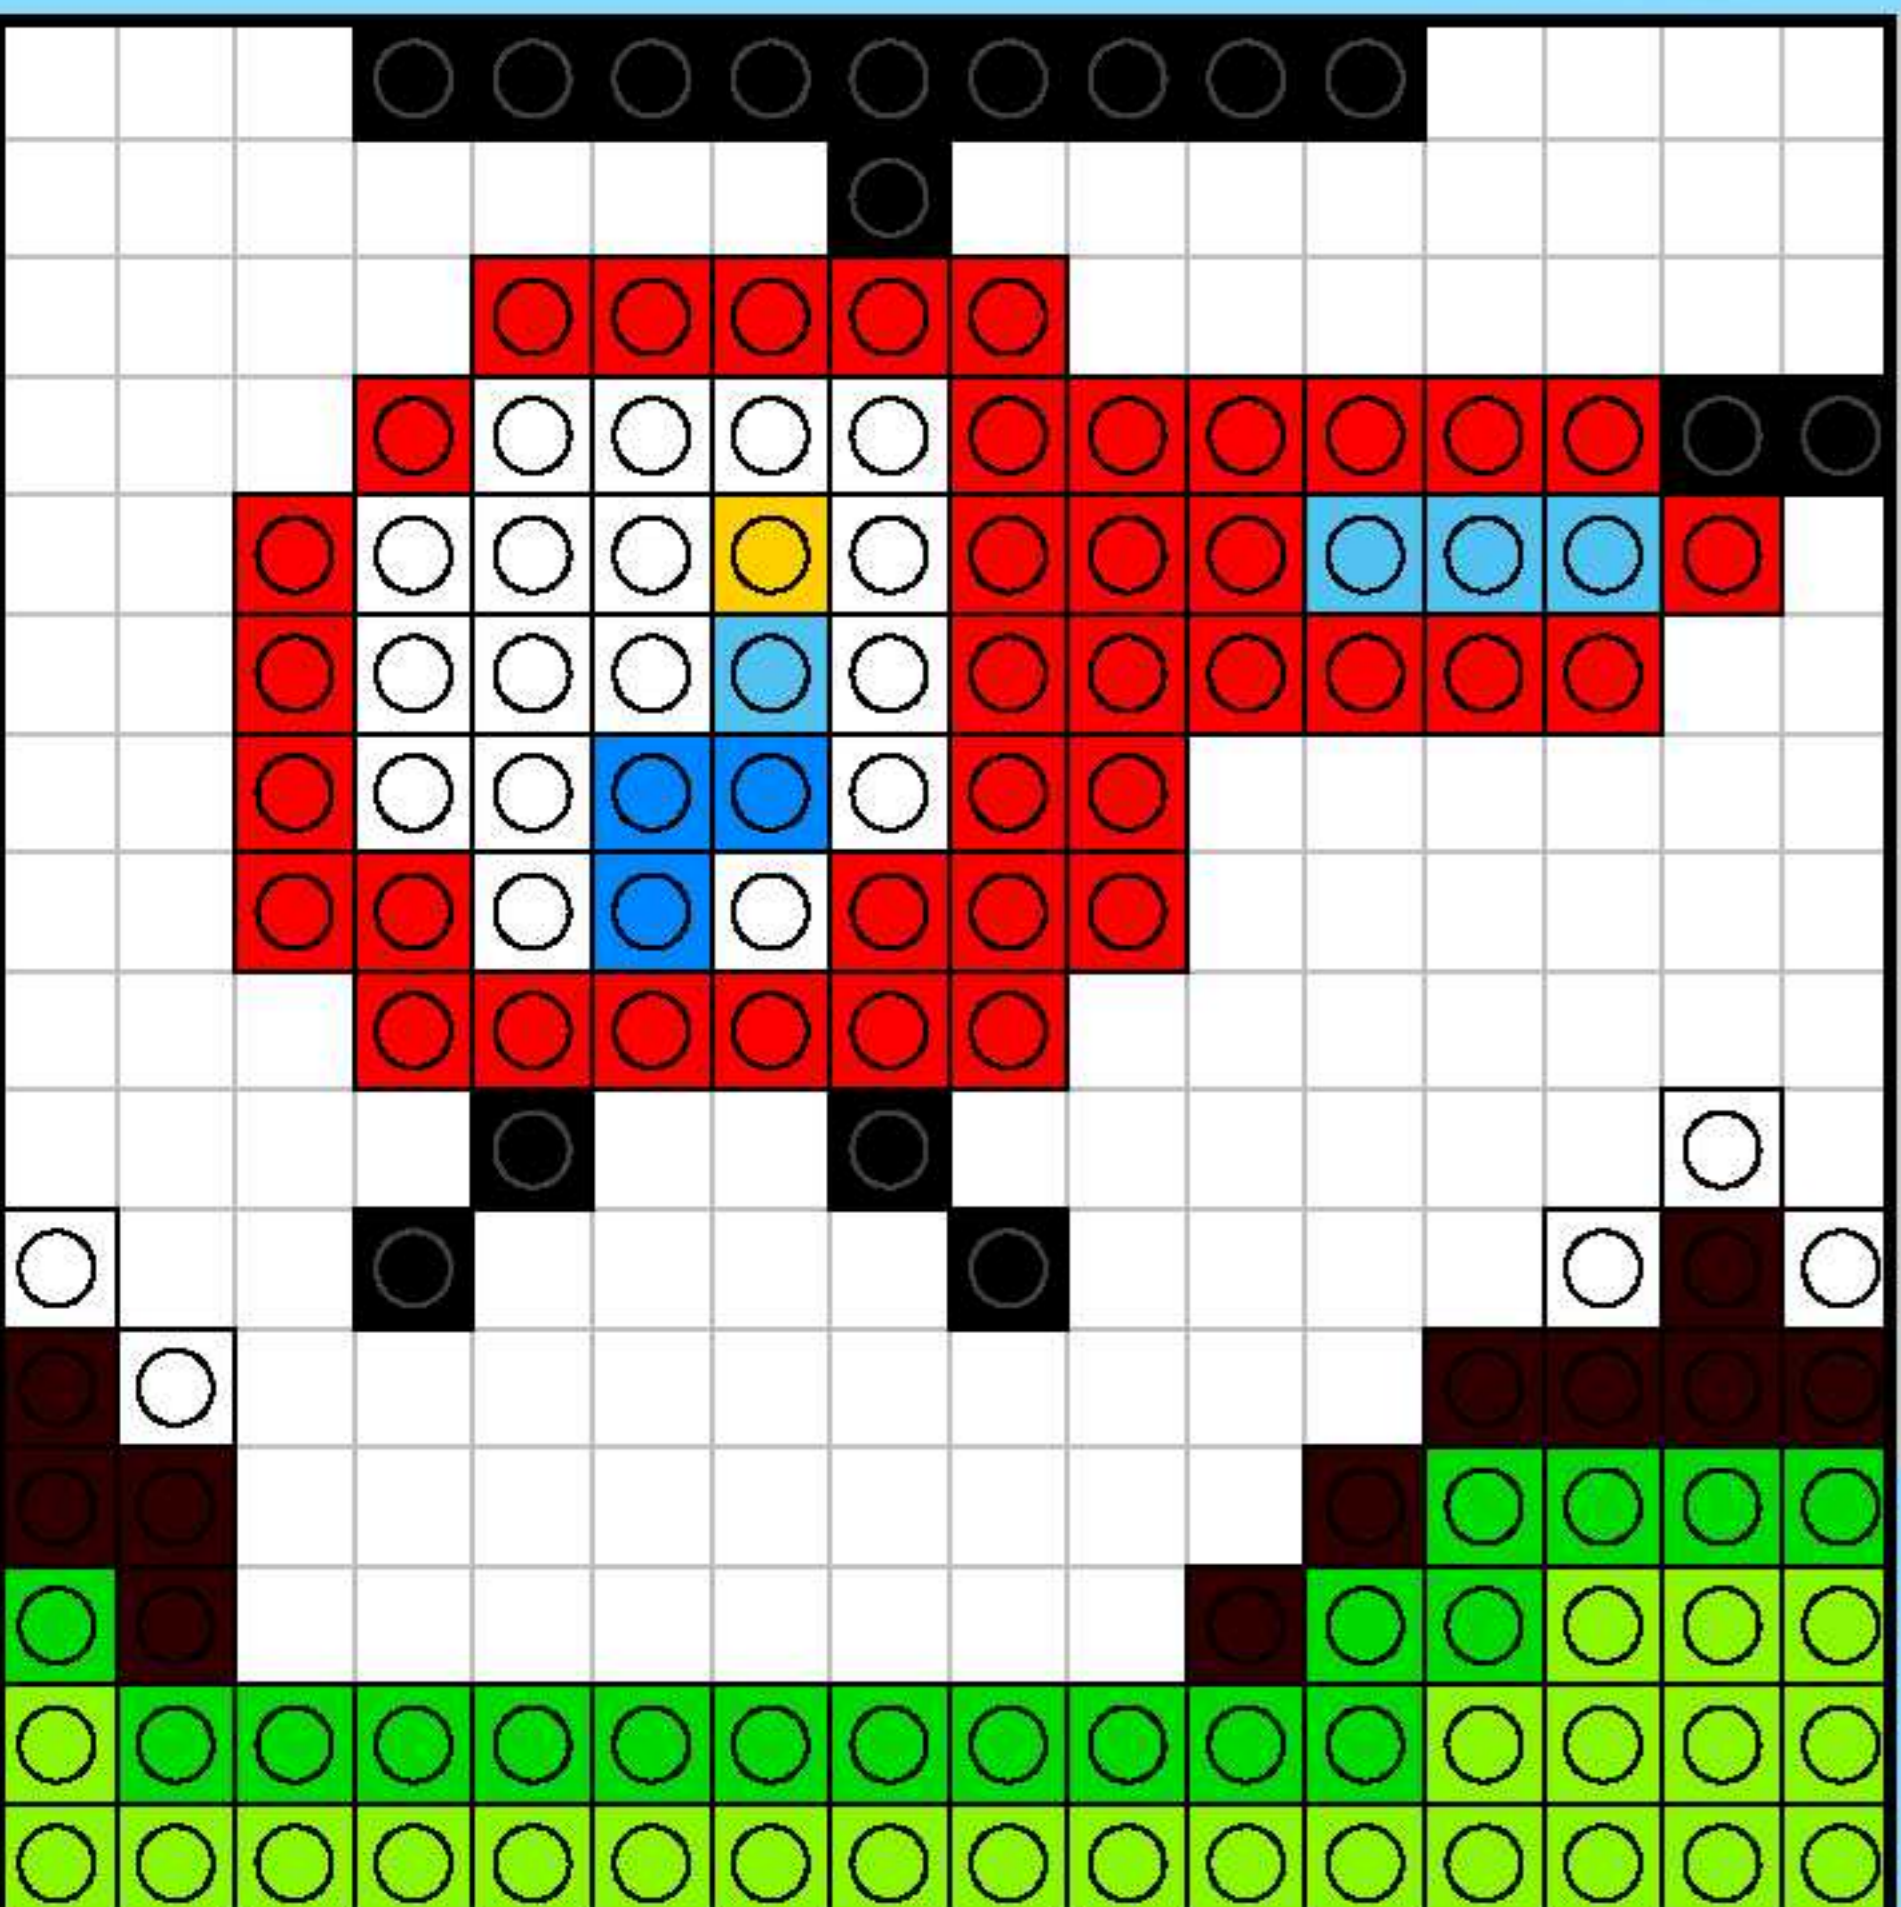  

2

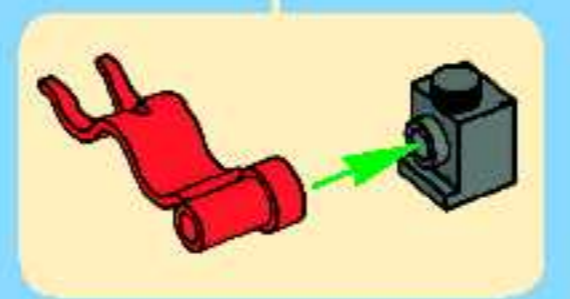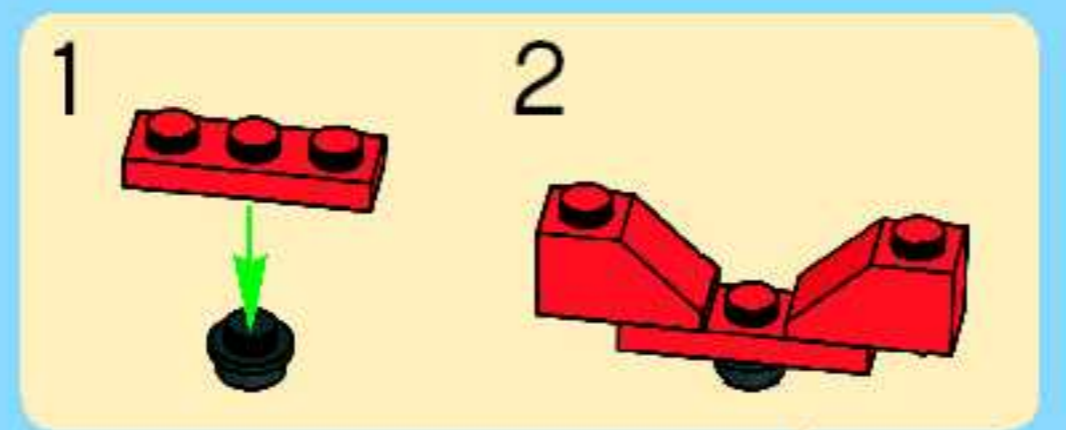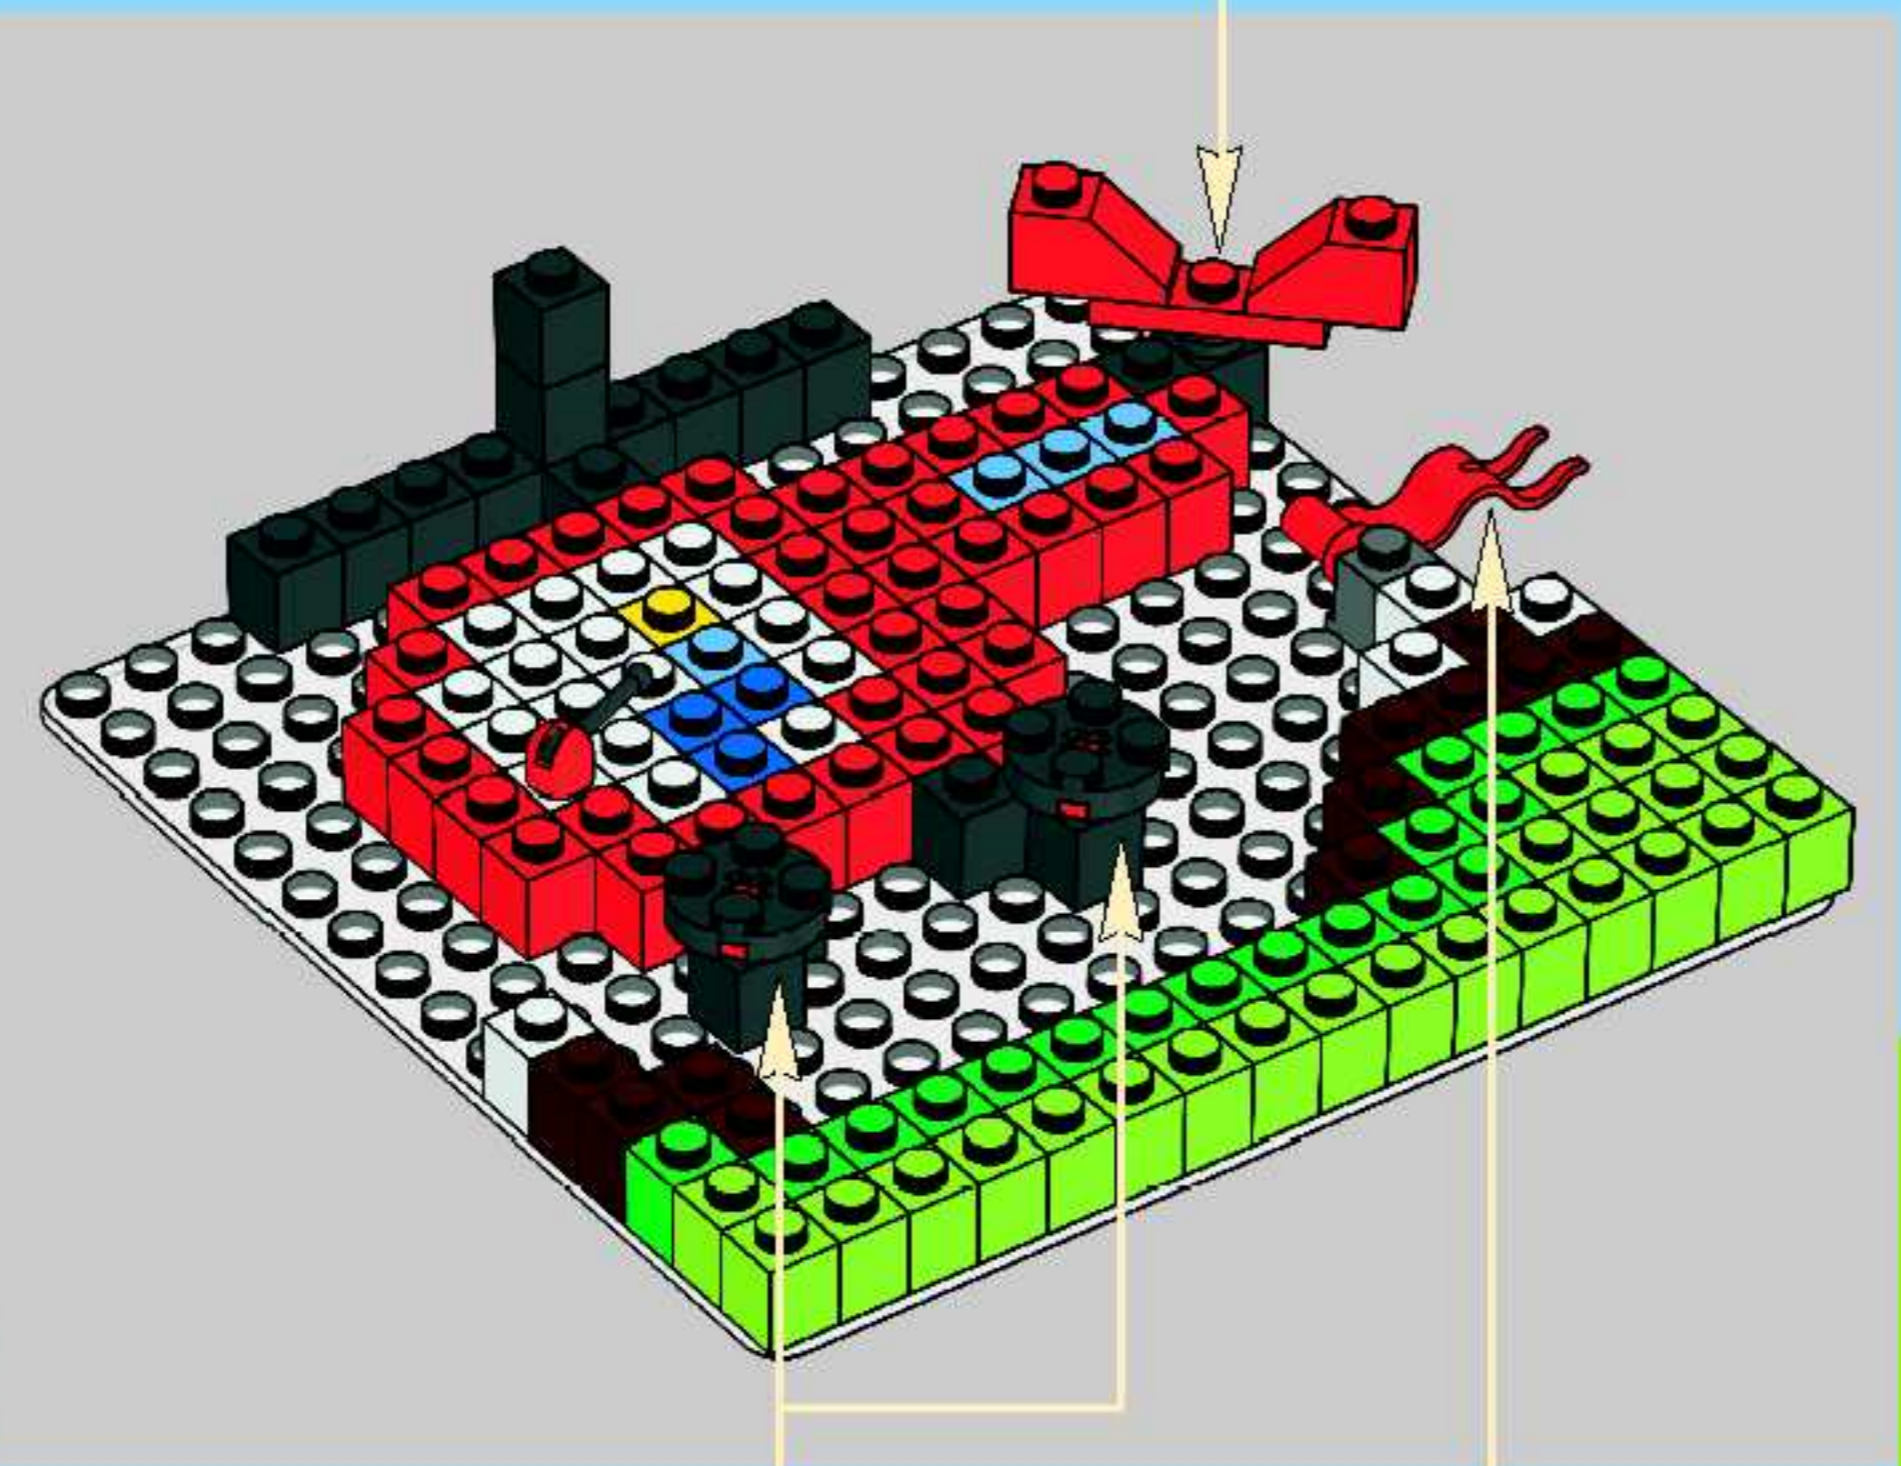   

- 2x 614121
- 1x 449521
- 40x 300521
- 1x 74335
- 2x 362321
- 2x 4121934
- 34x 300523
- 1x 317623
- 27x 4179830
- 19x 300524
- 2x 3005744
- 24x 4220634
- 19x 300526
- 2x 403226
- 2x 614126
- 2x 4211044
- 1x 4497482
- 41x 300501
- 9x 4173805
- 18x 4211242
- 37x 300528

 Do not iron
Nicht bügeln
Ne pas repasser
Non stirare
Niet strijken
No planchar
Må ikke stryges
Ei saa silkkää

Får ej strykas
NÃO passar a ferro
Μην το σιδερώνετε
アイロンをかけたない
ください
初回製
다림질 금지
Не гладить

Nie prasować
Nežehlít
Vasalásat nem igényel
Ne prasywaci
Namojte peglati
Ne peglati
Ne likajte

Nu folosiți fierul de călcat
Да не се глади с ютия
Neqludnâti
Mitte trükka
Nelyginti
Ūtliameyn

Any questions regarding your new LEGO product, please contact:
Hebt u vragen over uw nieuwe LEGO product, neem dan contact op met:
Customer Service
• Kundenservice • Service Consommateurs • Servicio Al Consumidor
• Klantenservice: www.LEGO.com/service or call

 1-800-422-5346
 00800-5346-5555

