



Mixels

41531



1



2



3



4



5



6




7



8



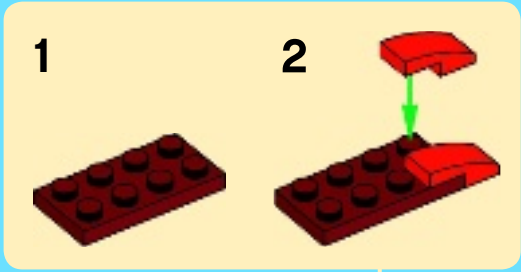

9




10



11




12

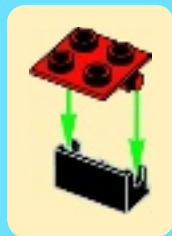

13



14

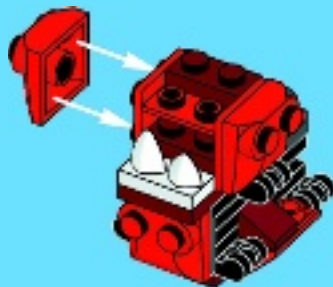

15



16





1




2





3




17

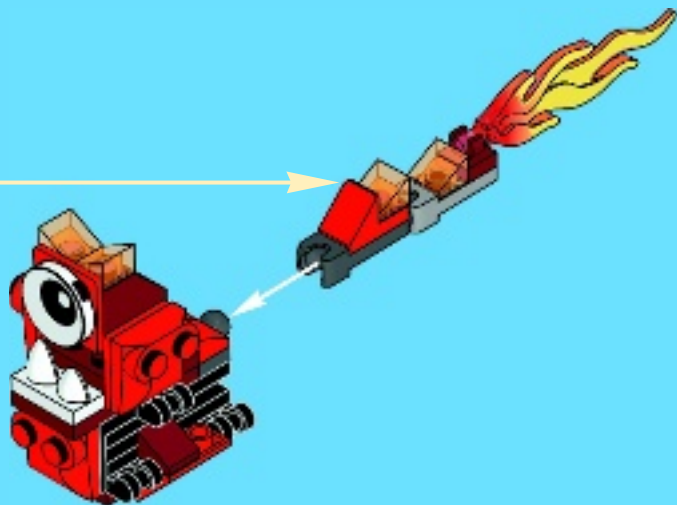


18

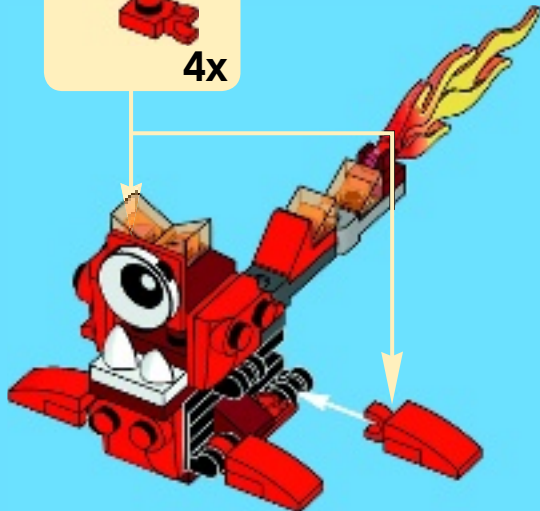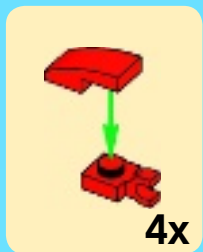

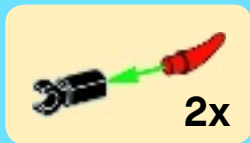

19

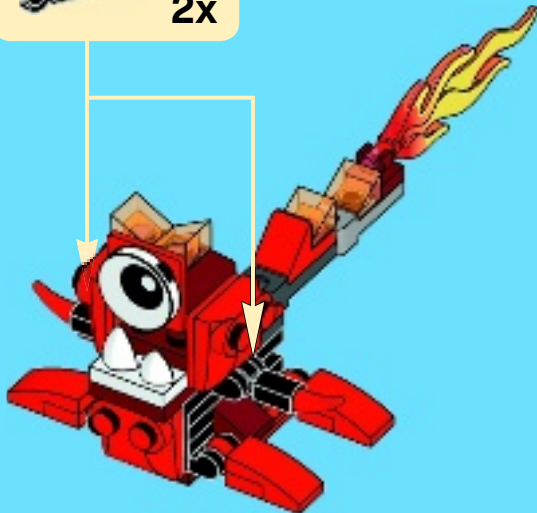



1



2



3



4



5



6





4x
4244369



1x
6060732



2x
4531415



2x
302226



2x
4568388



4x
4524644



1x
6039479



1x
6060734



1x
6071222



1x
6048855



2x
4273590



6x
6029946



1x
6039482



1x
6046384



3x
4539097



1x
393726



2x
6015891



1x
6053011



1x
6043639



1x
6056842



1x
4609925



3x
6099483



2x
4141580



1x
613421



Customer Service

Kundenservice

Service Consommateurs

Servicio Al Consumidor

LEGO.com/service or dial



00800 5346 5555 :



1-800-422-5346 :



2x
265326



2x
407026



3x
4220515



2x
4539071



2x
4504382



1x
487121



**MELTUS
41530**



**FLAMZER
41531**



**BURNARD
41532**



**INFERNITES
MAX!**



LEGO.com/mixels





Mixels

CN
CARTOON NETWORK



Mixels



LEGO.com/mixels

