 
 
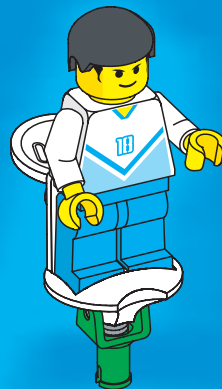 
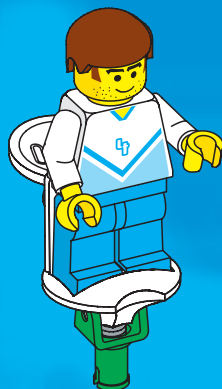 




3421


LEGO

    
 
LEGO

 
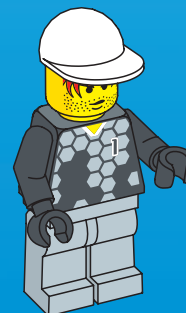 


 
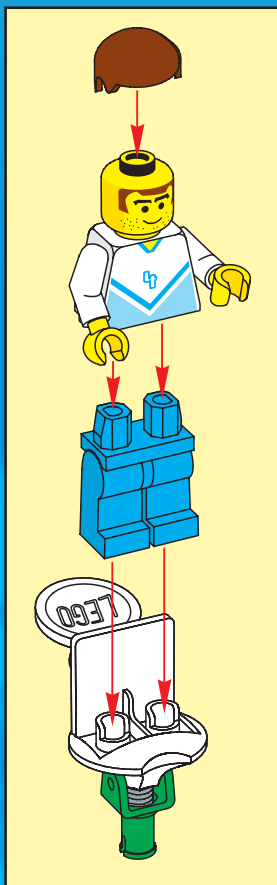 


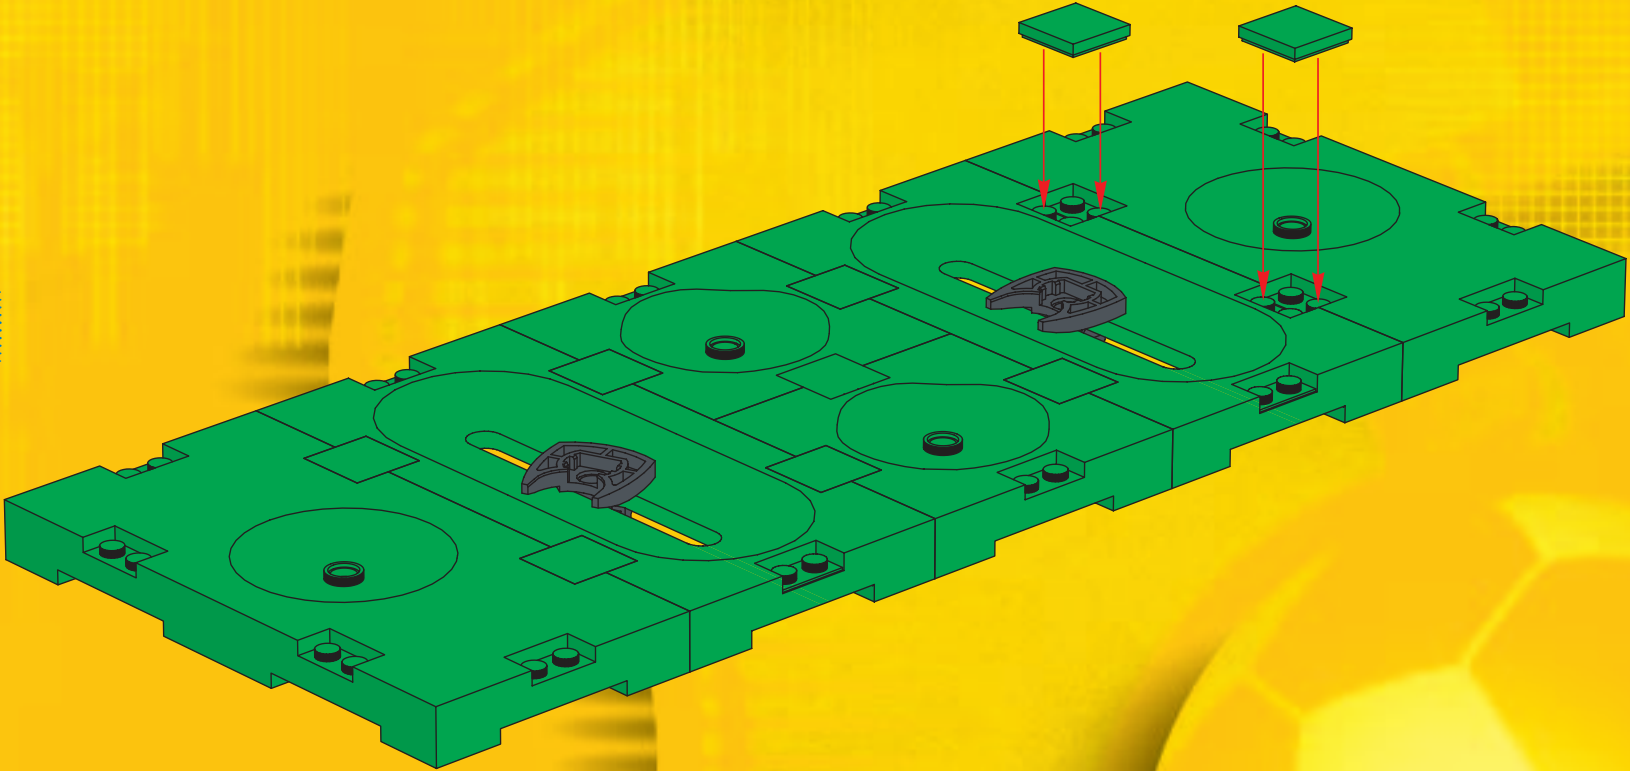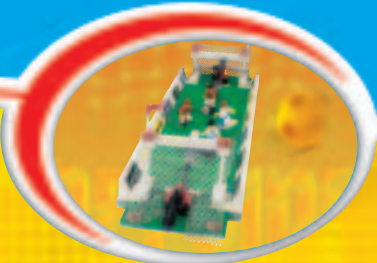 


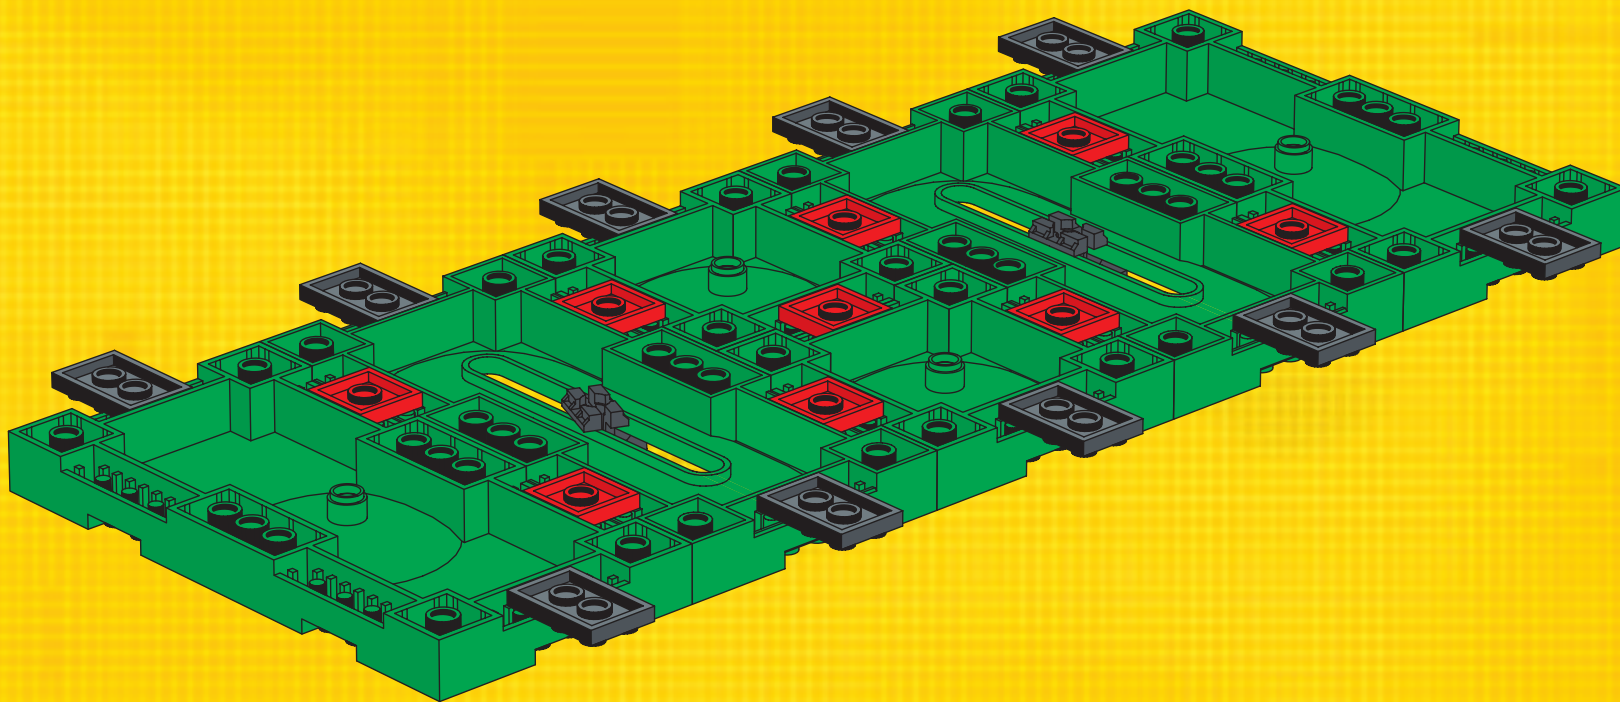 


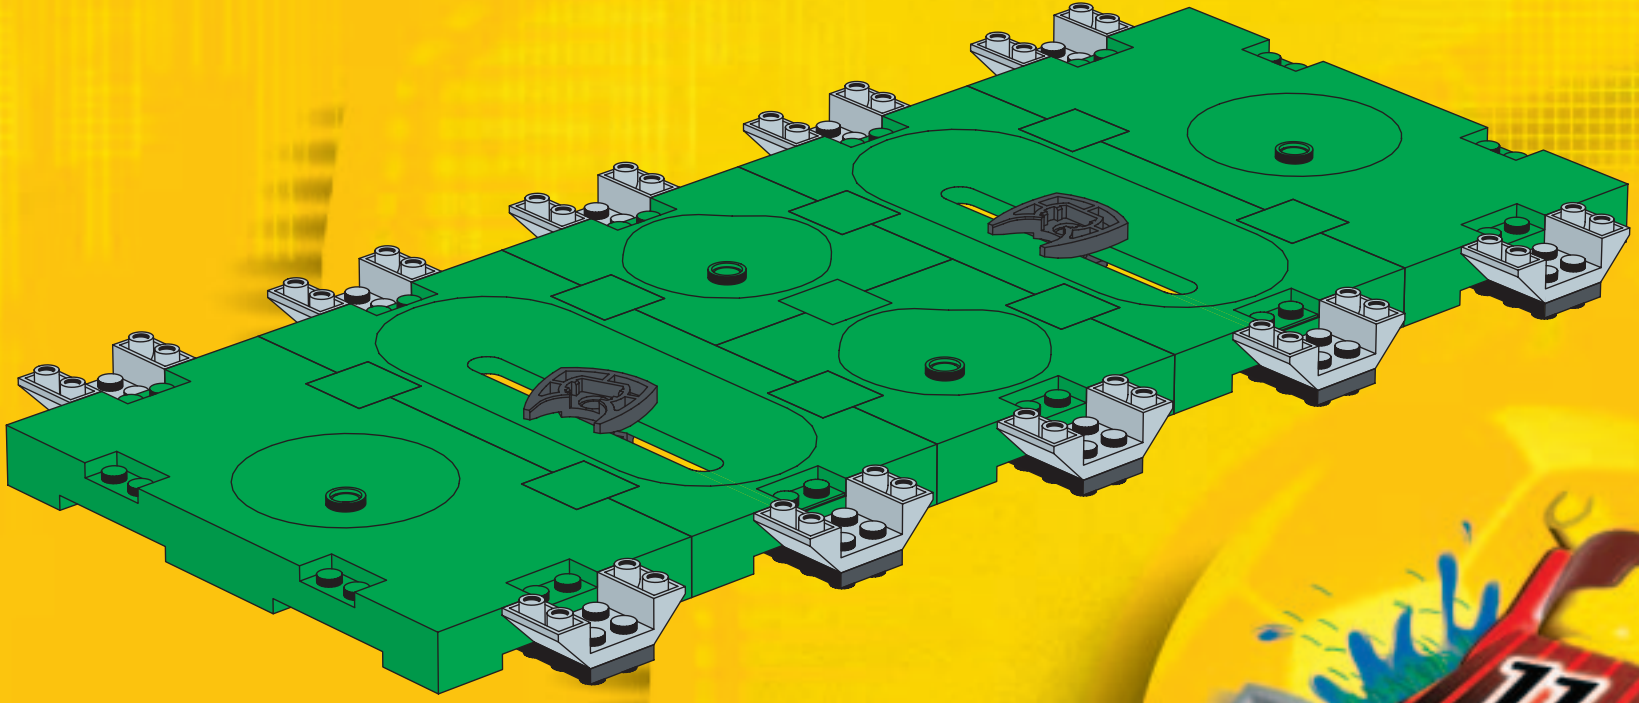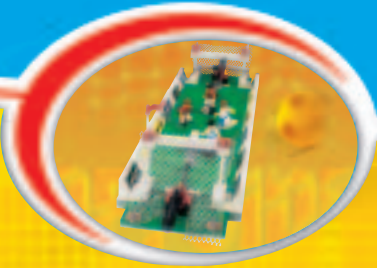

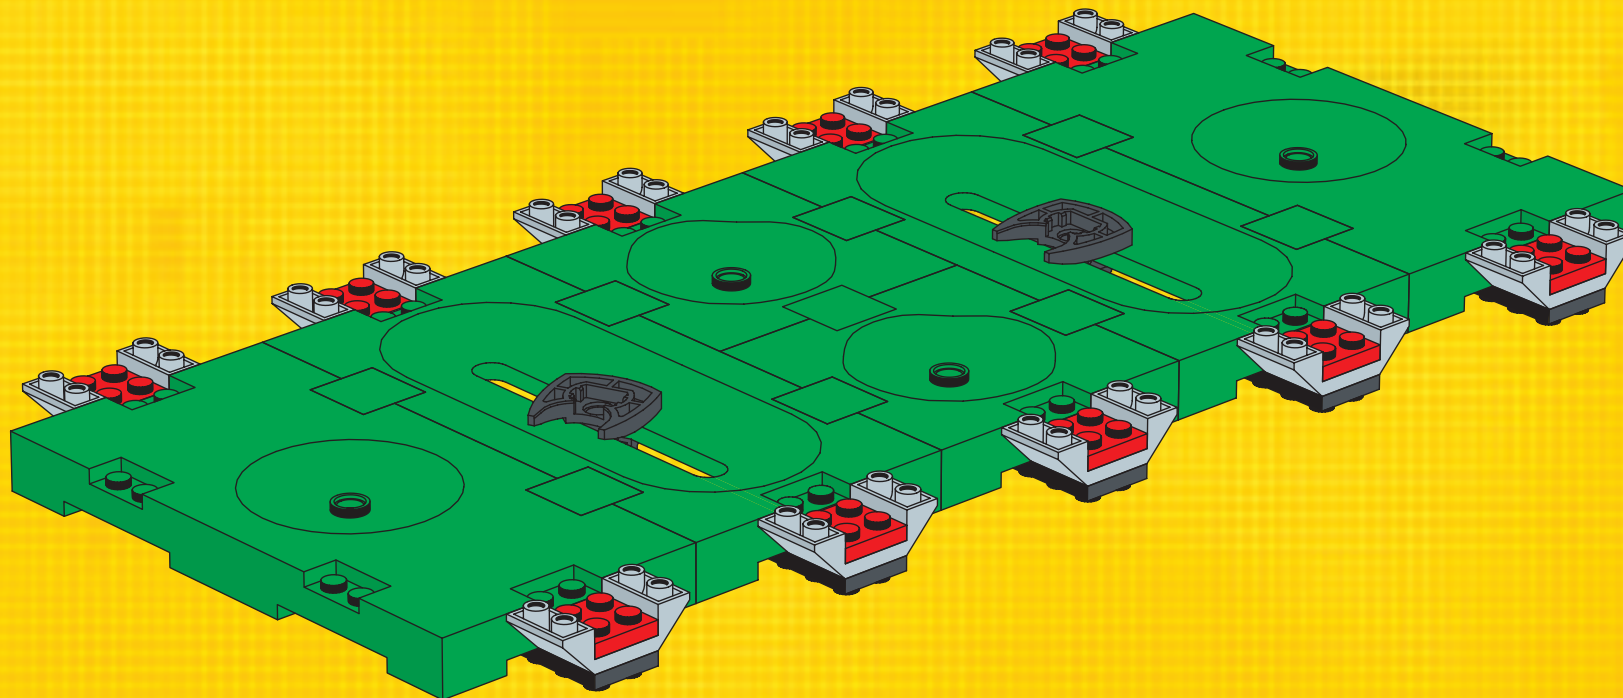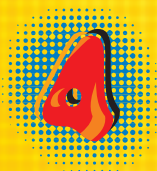


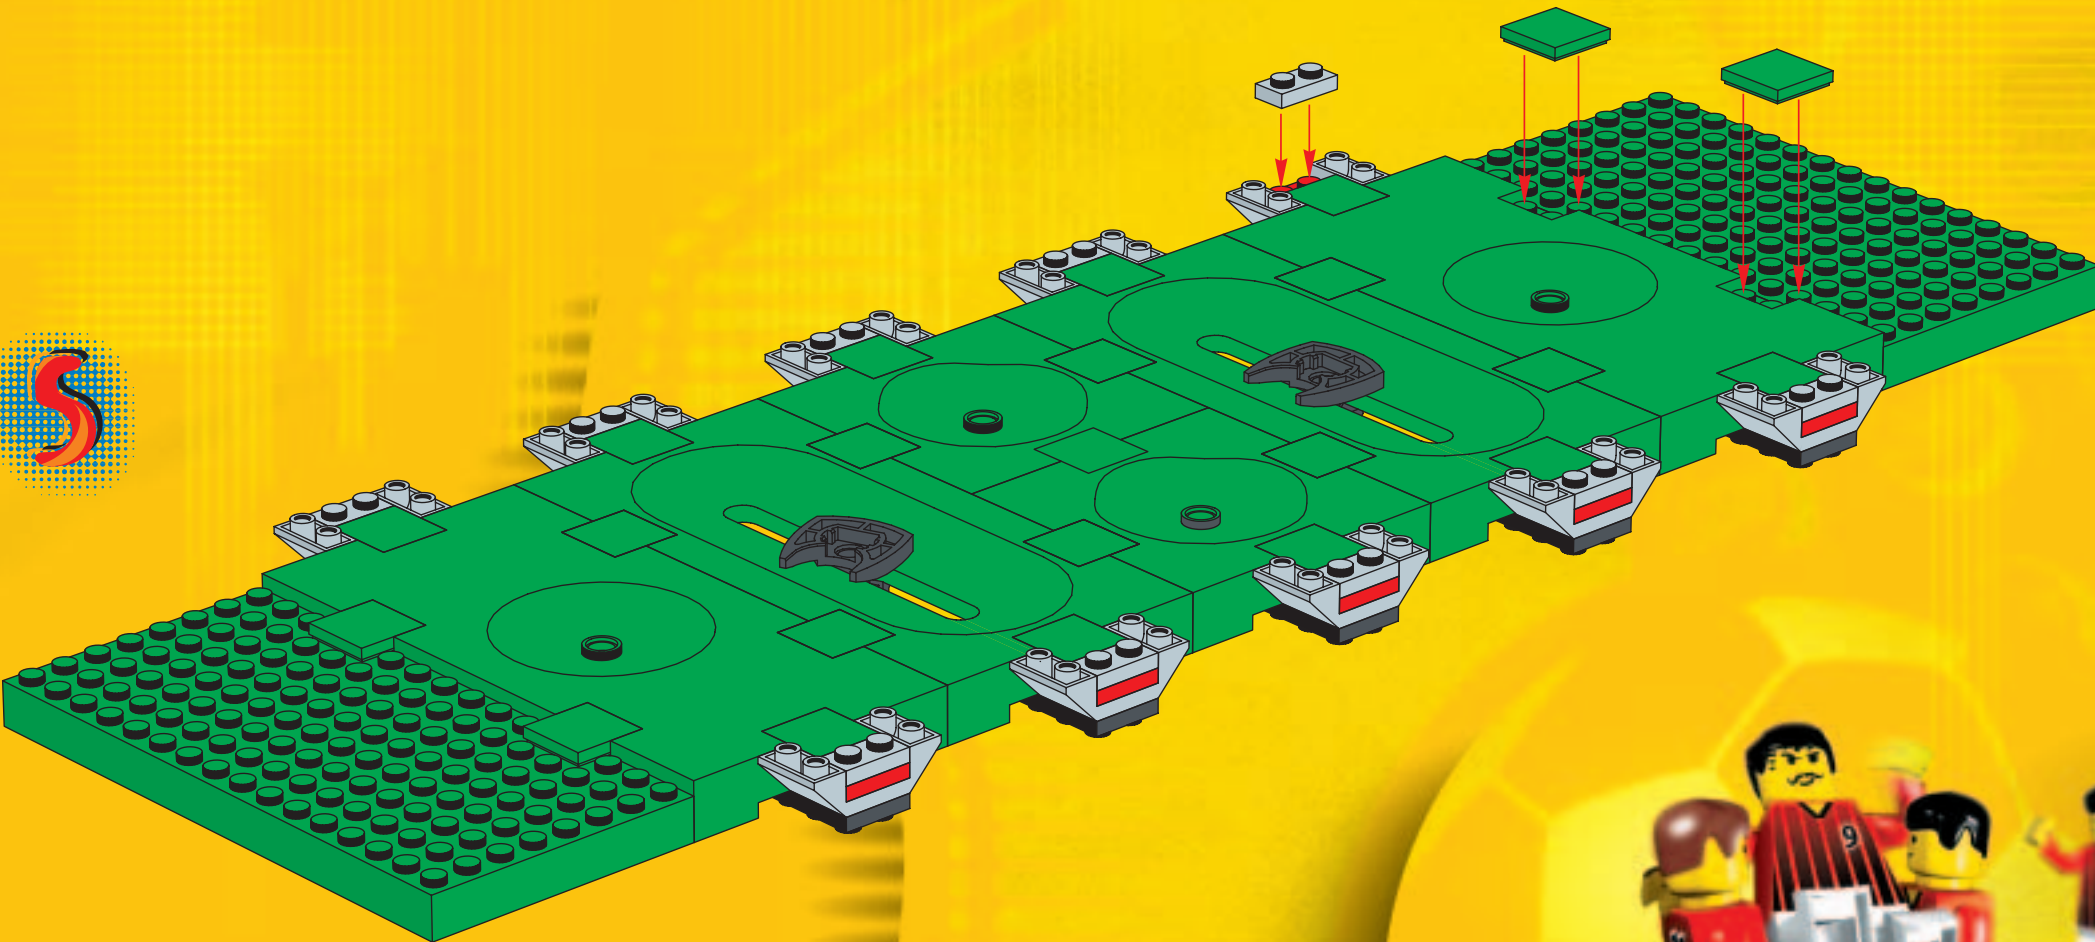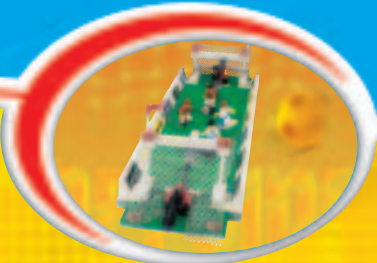



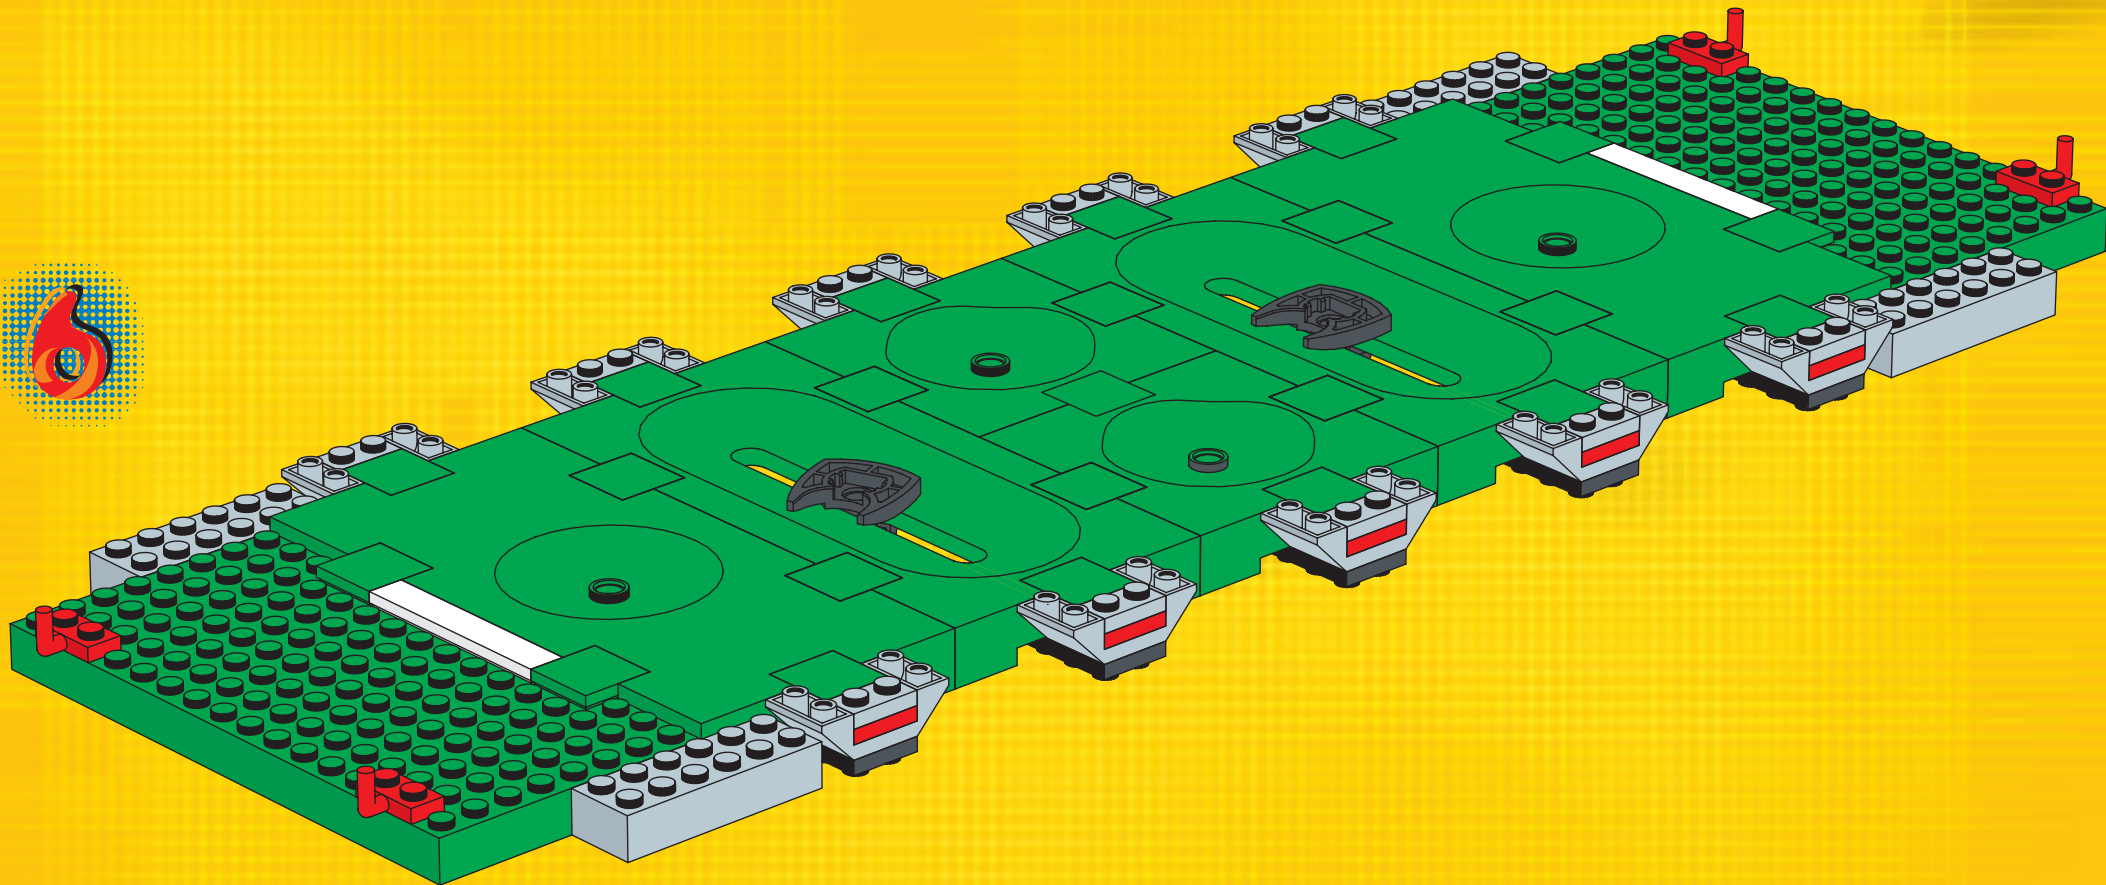


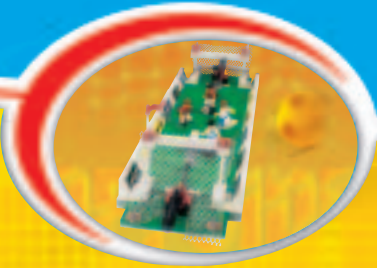

7

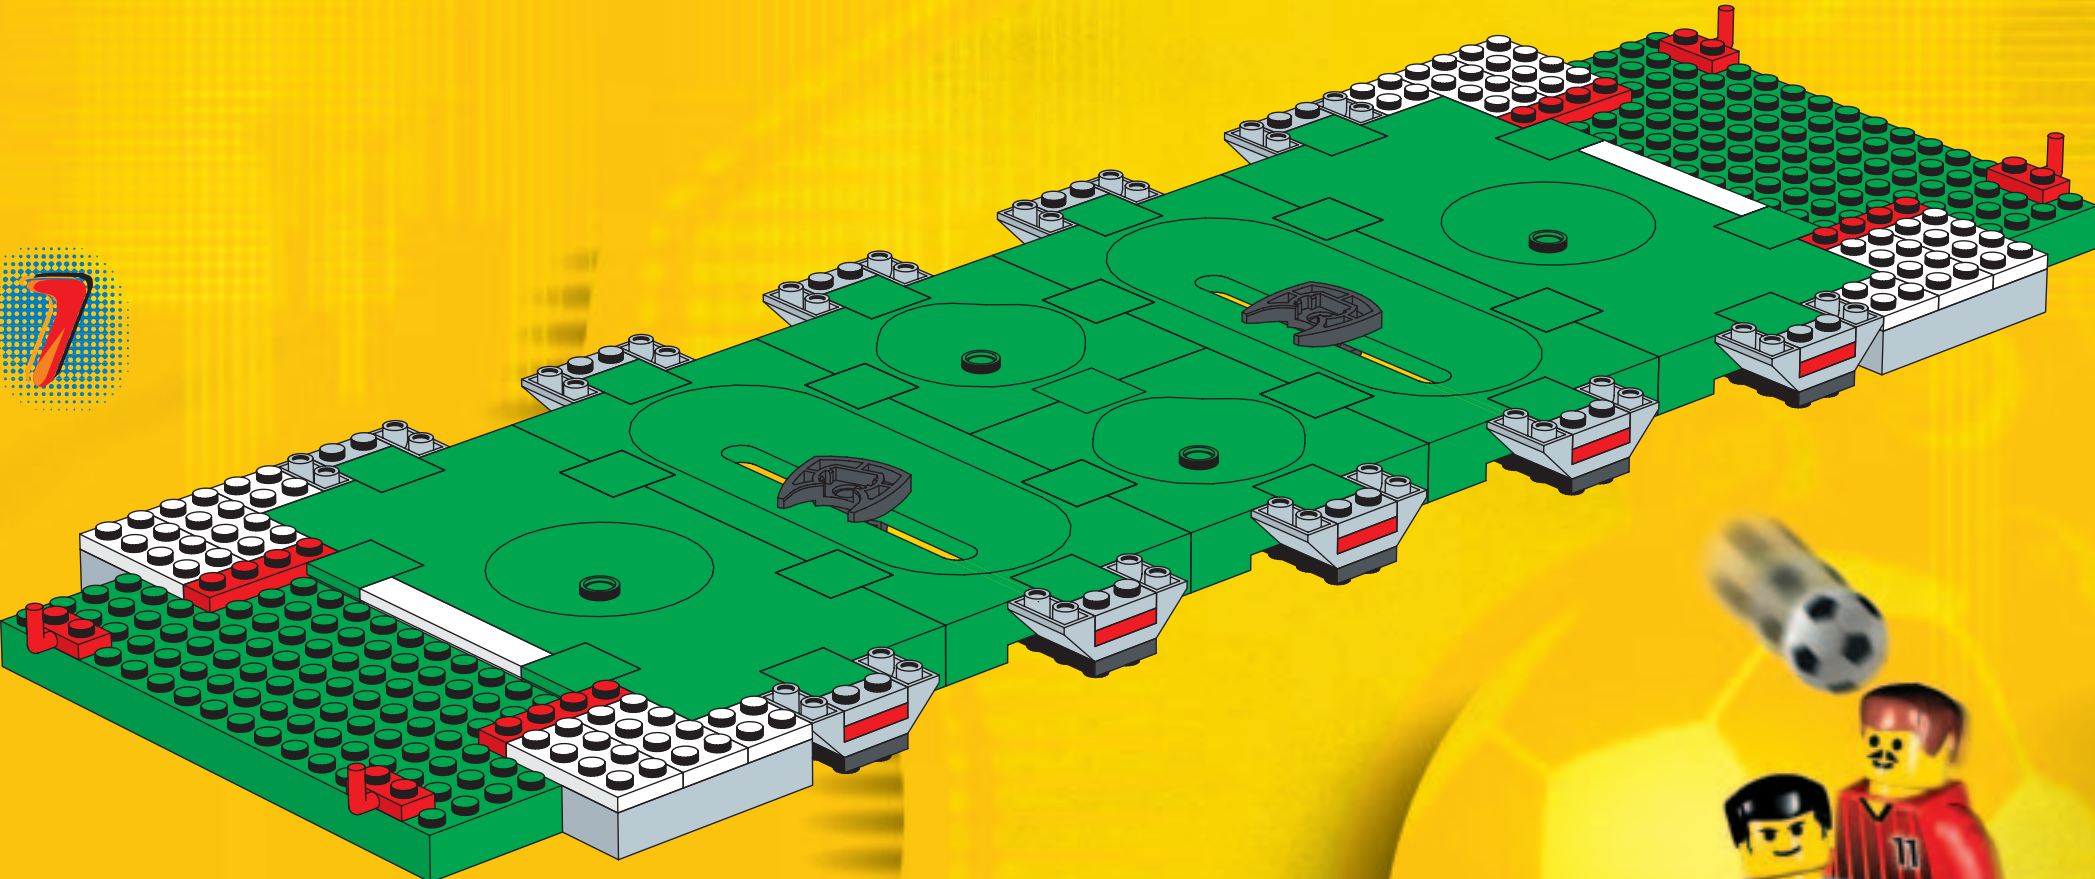 


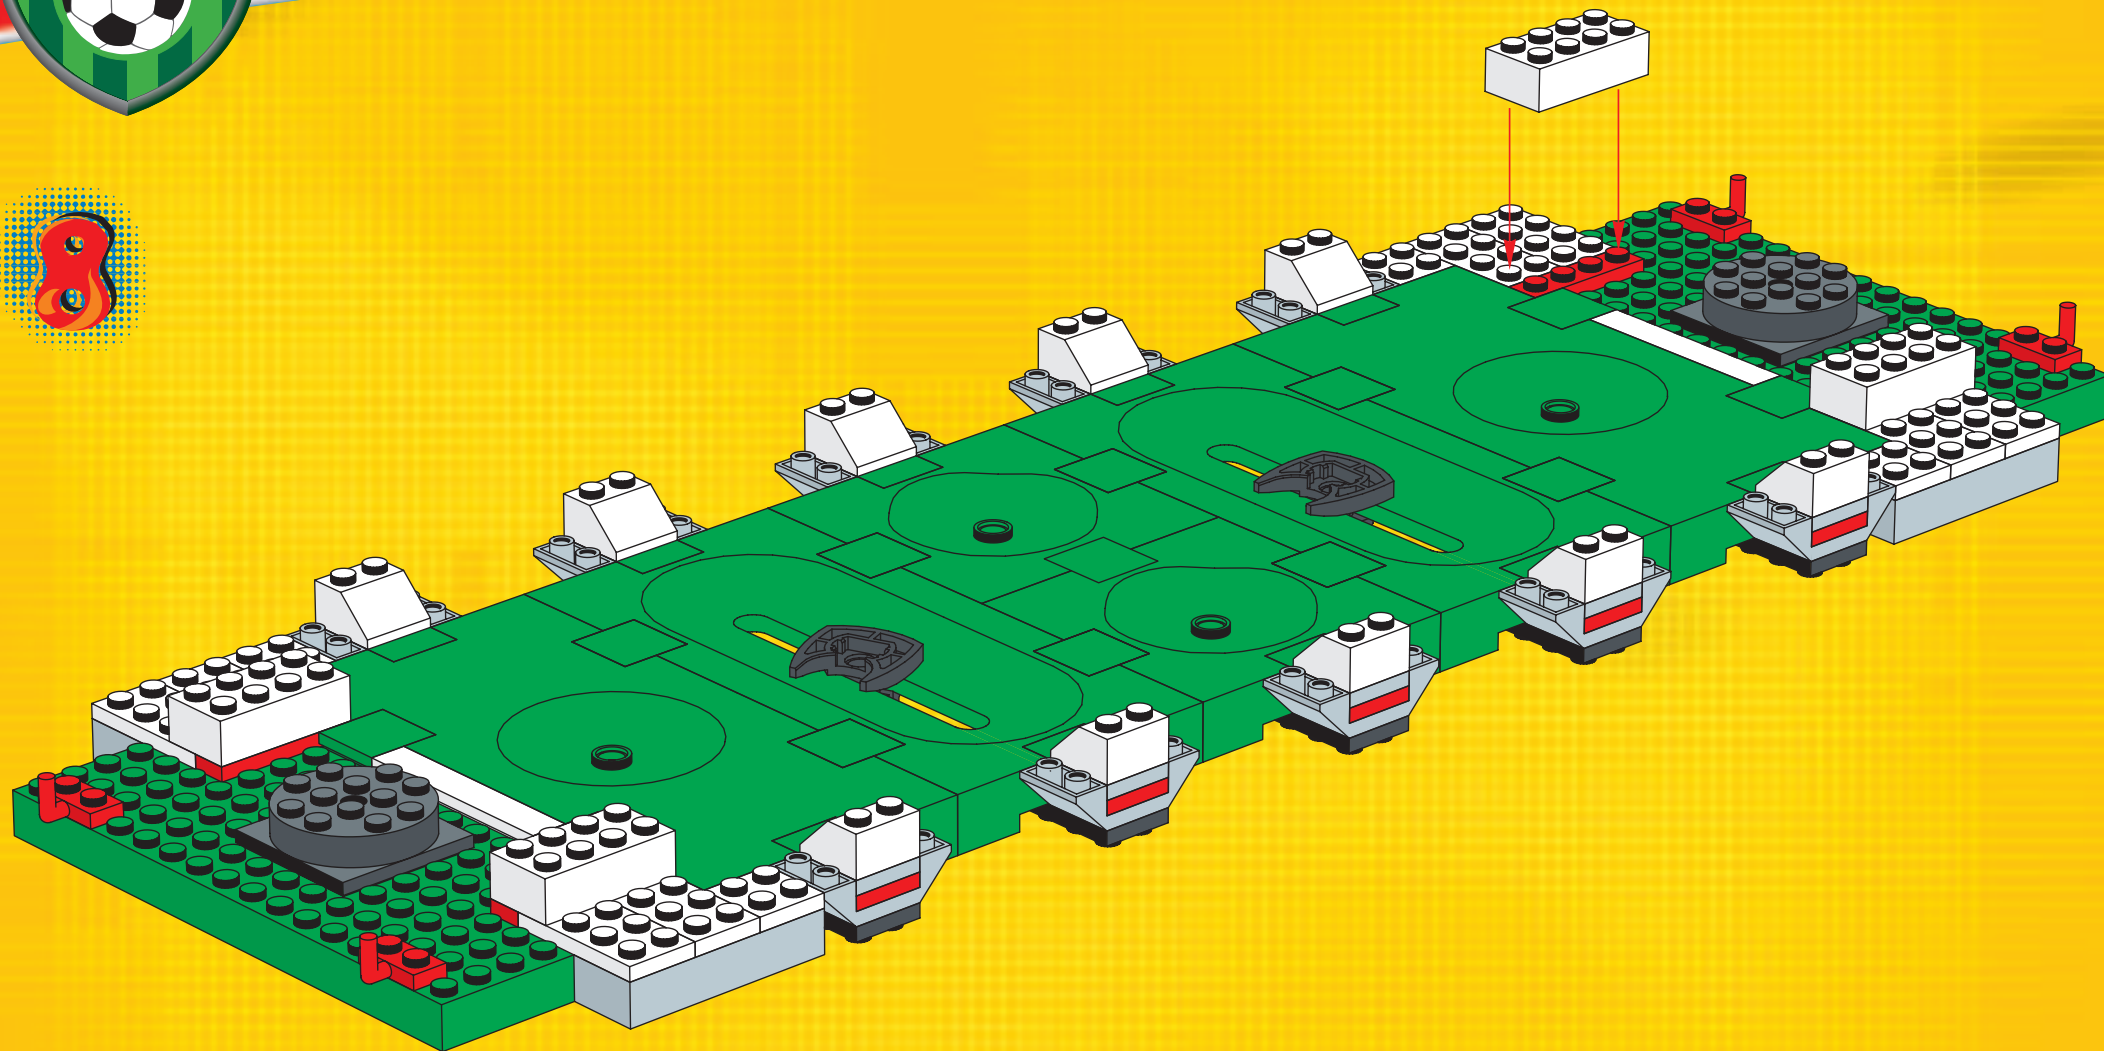 

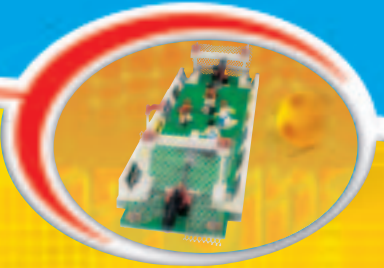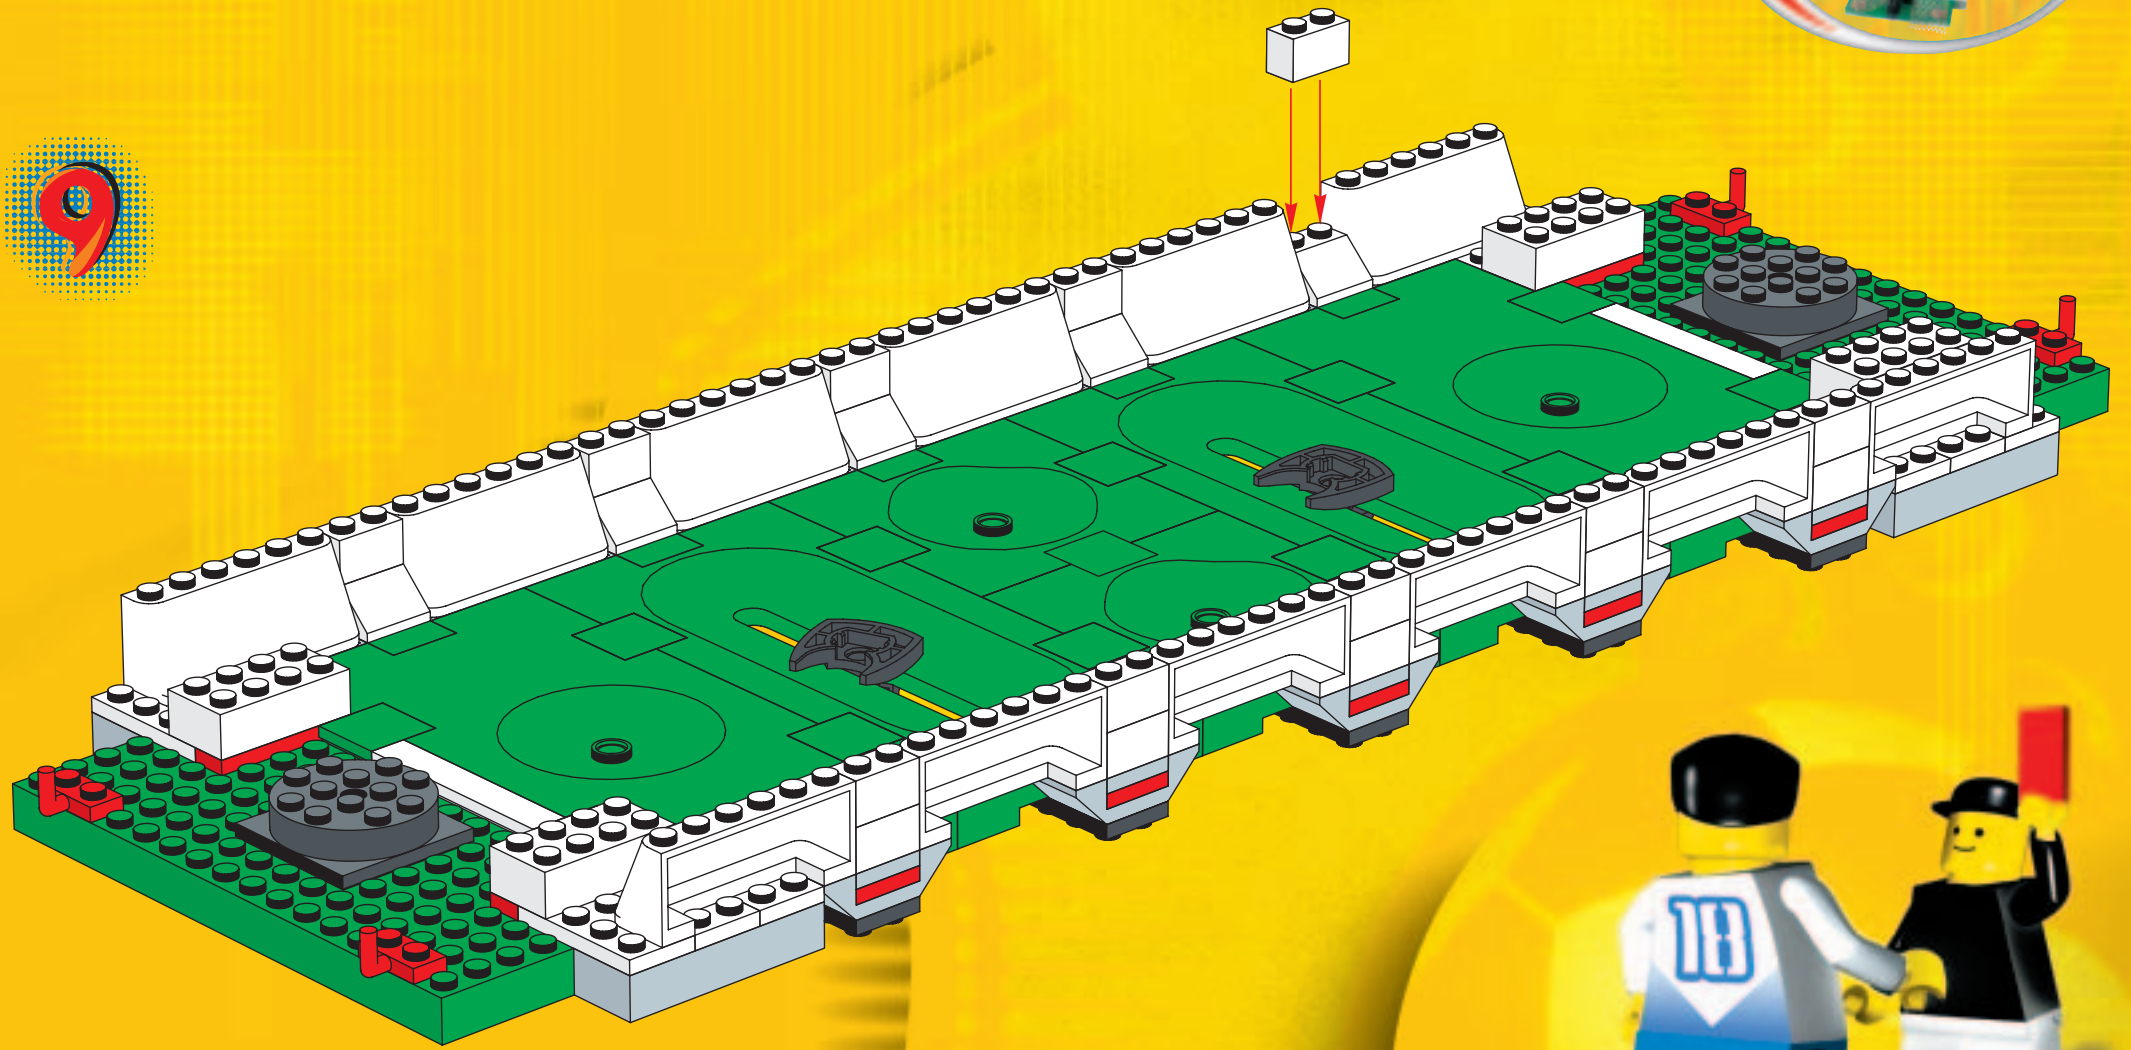  



10

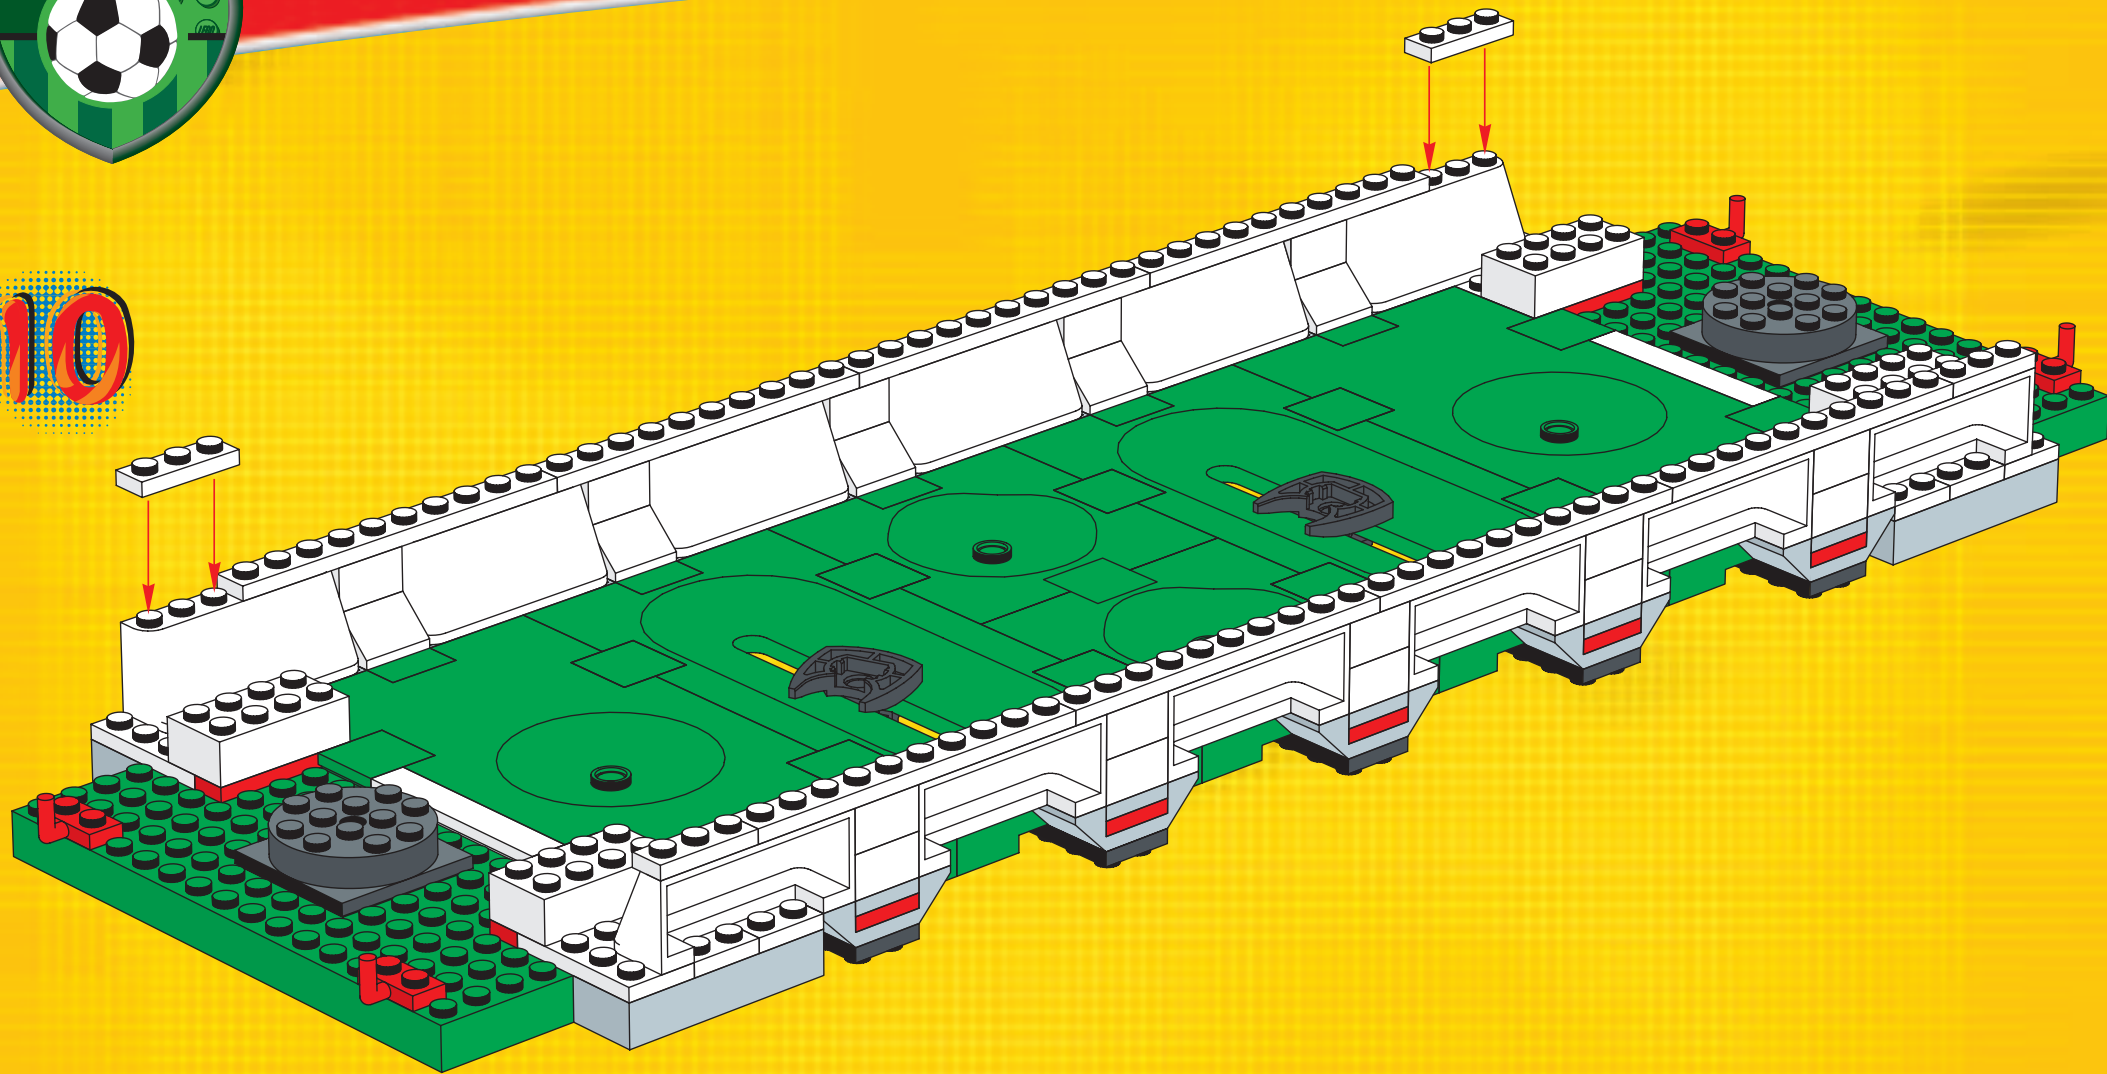 



1

 
2

3


2x

This block contains three numbered steps for assembly. Step 1 shows a red Technic connector being placed into a red Technic base. Step 2 shows a grey handle being inserted into the red Technic assembly, with a green square highlighting the hole in the handle. Step 3 shows a grey handle with a red Technic assembly attached, and a grey Technic connector being inserted into the handle. The number '2x' is located at the bottom right of the block.




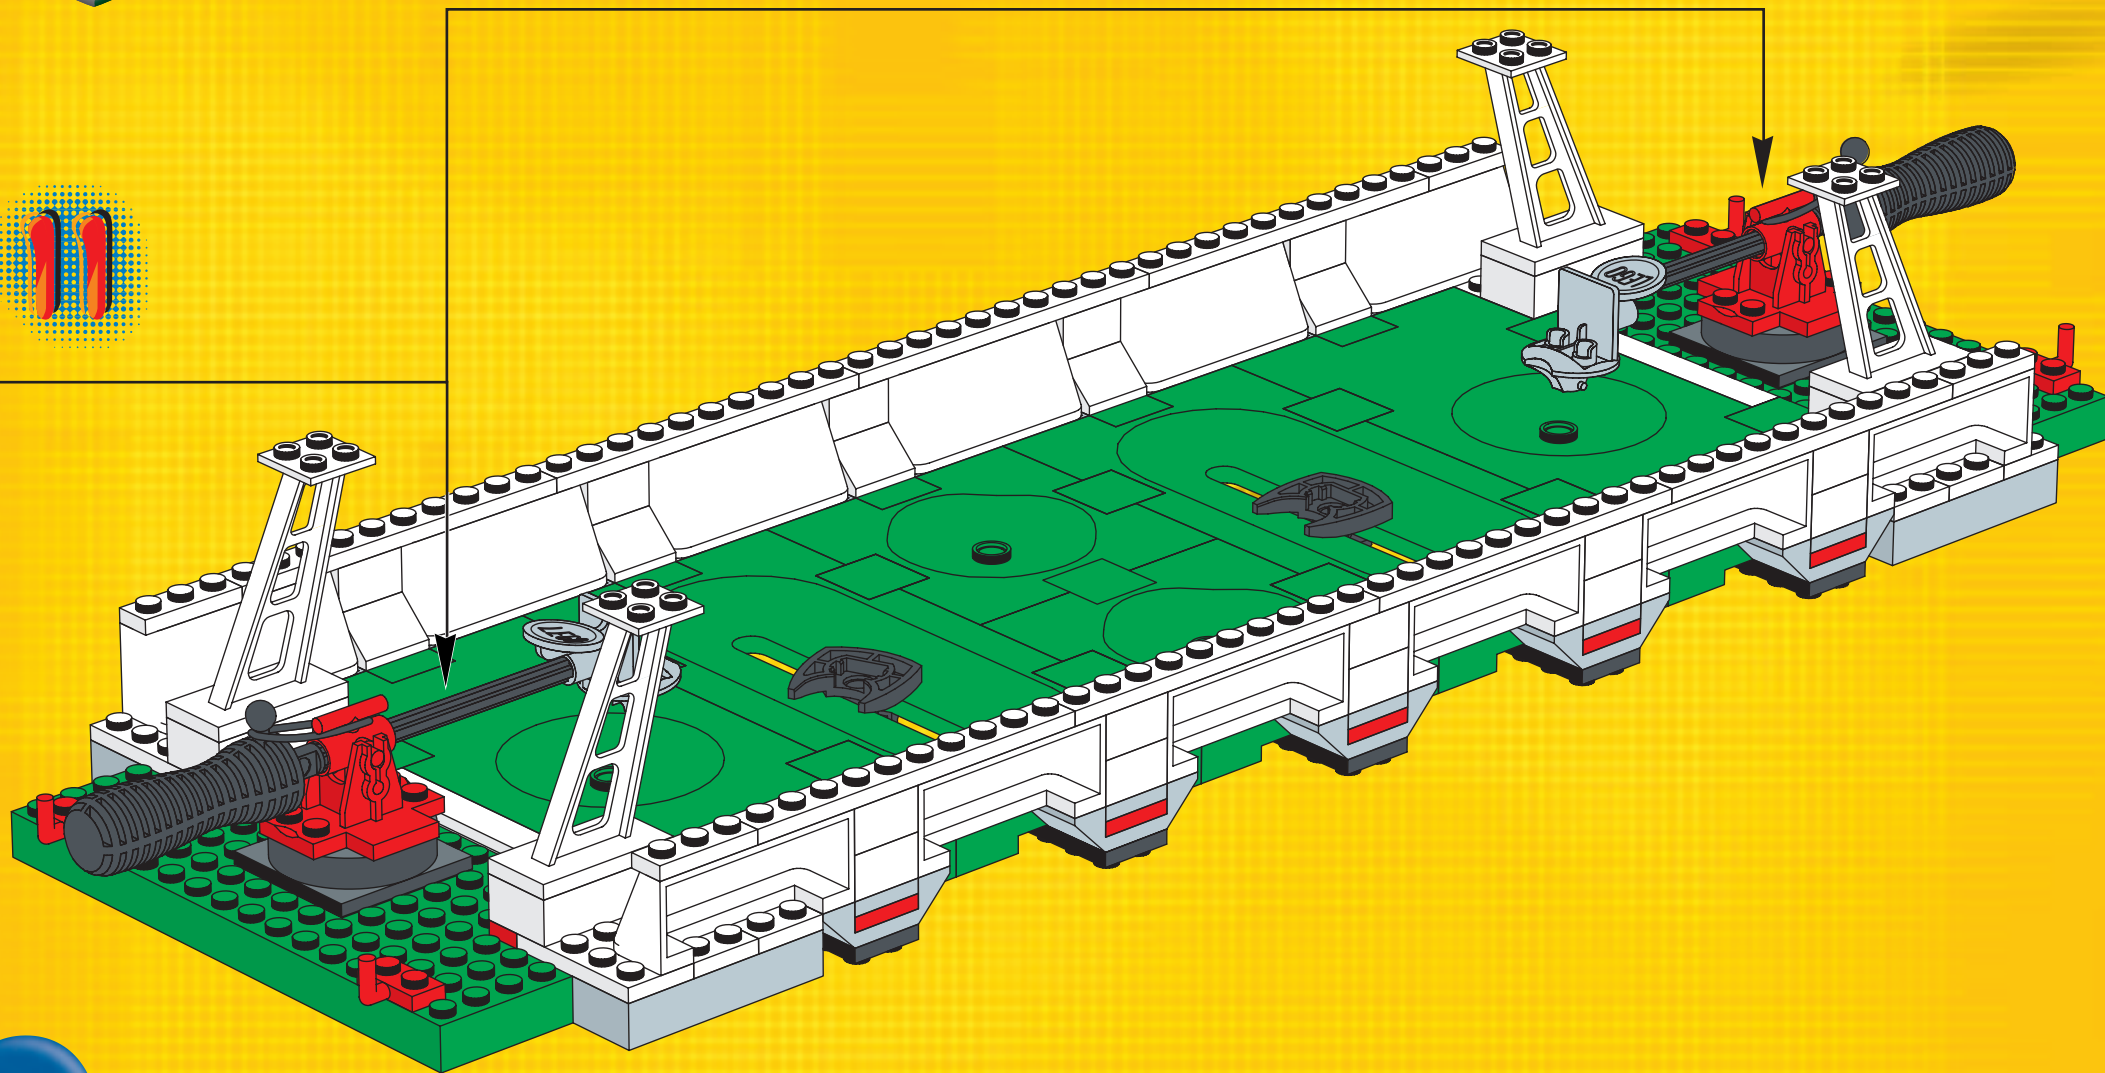



12

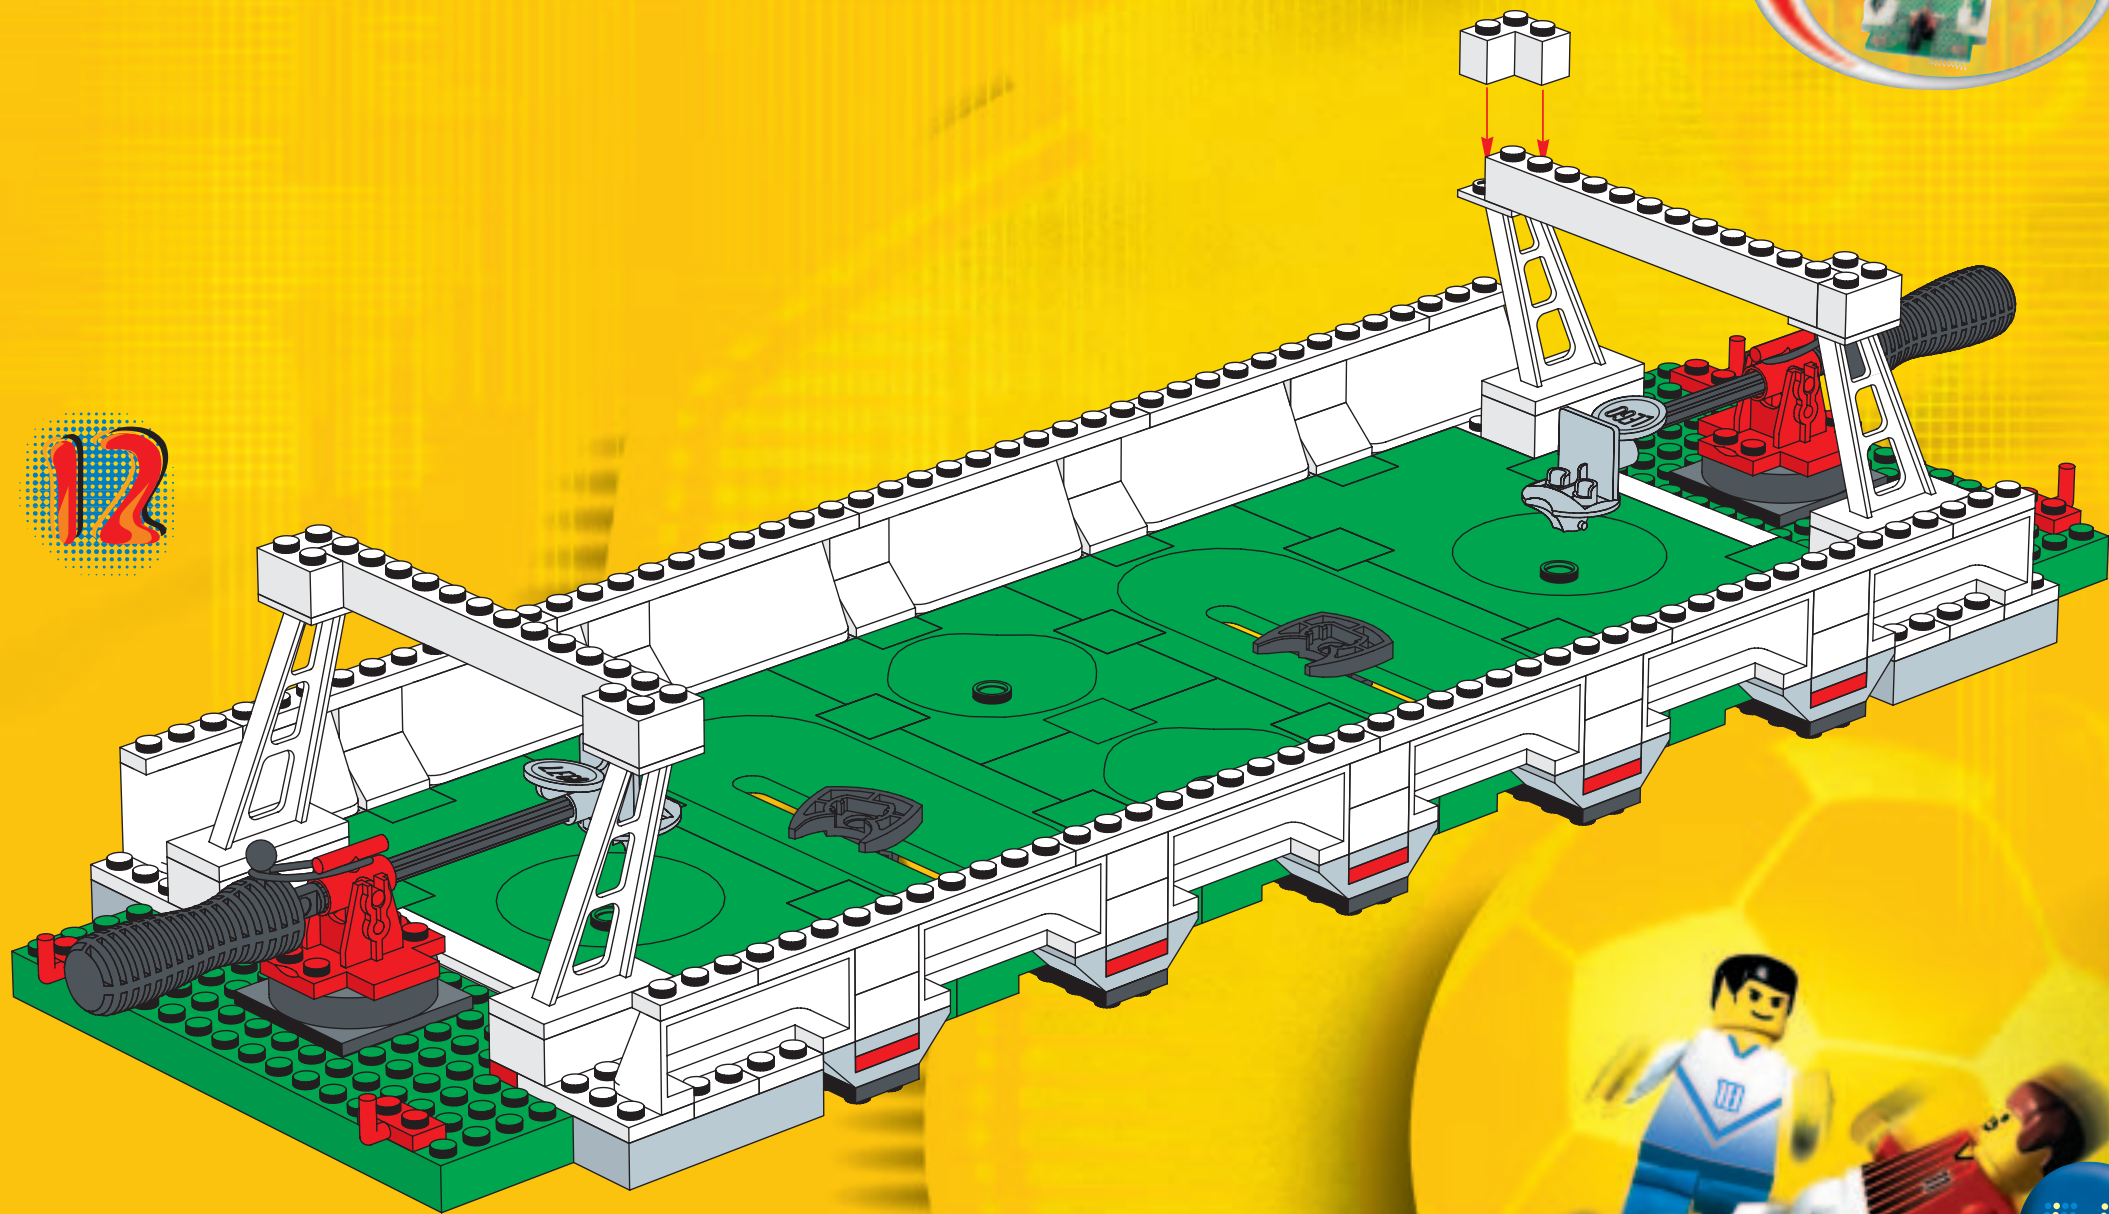 





13

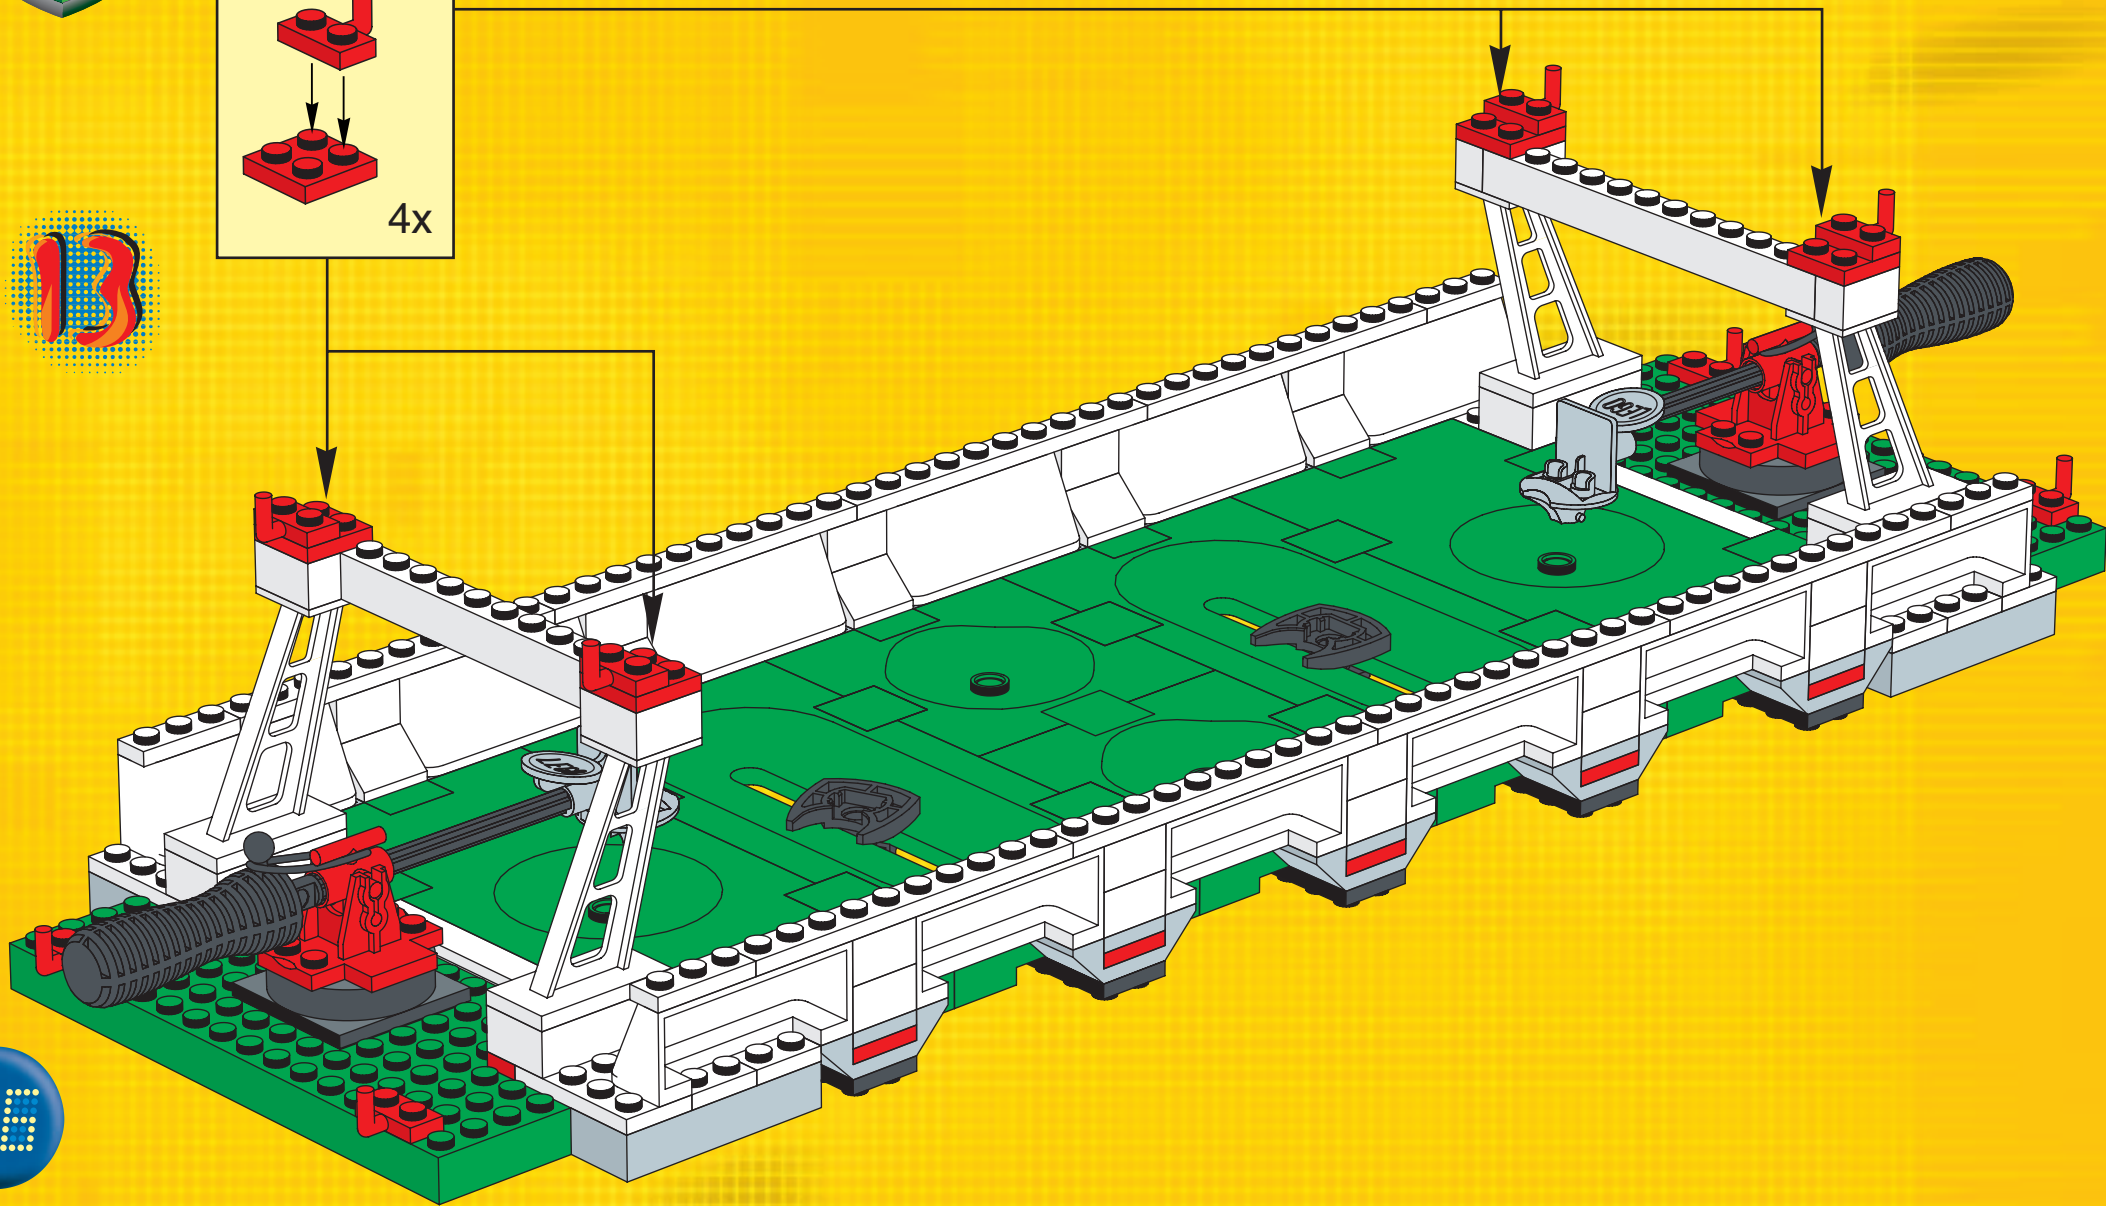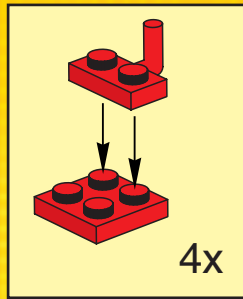  

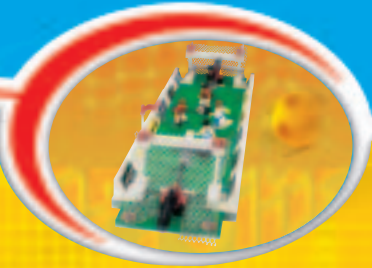 

14

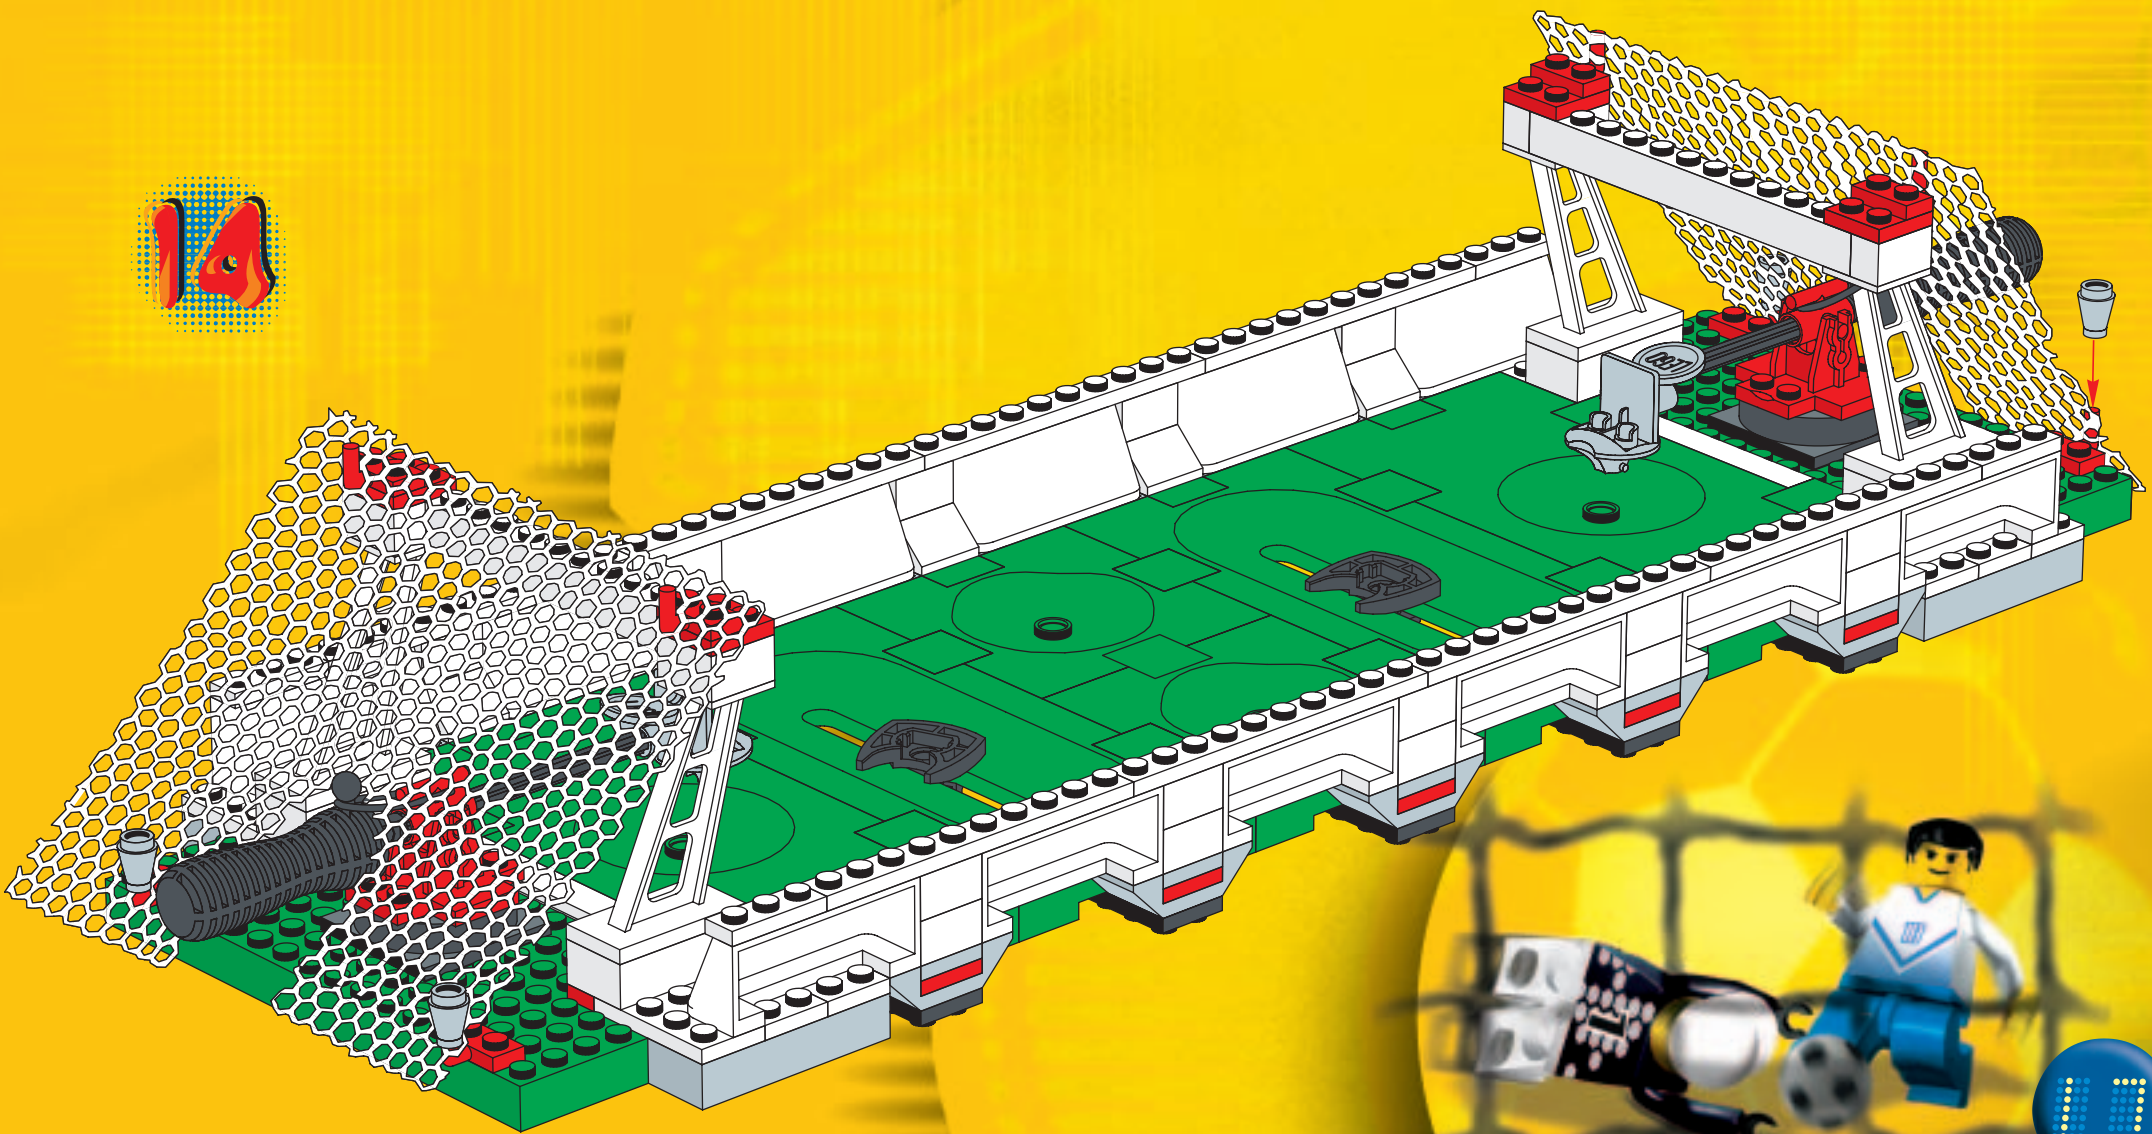 

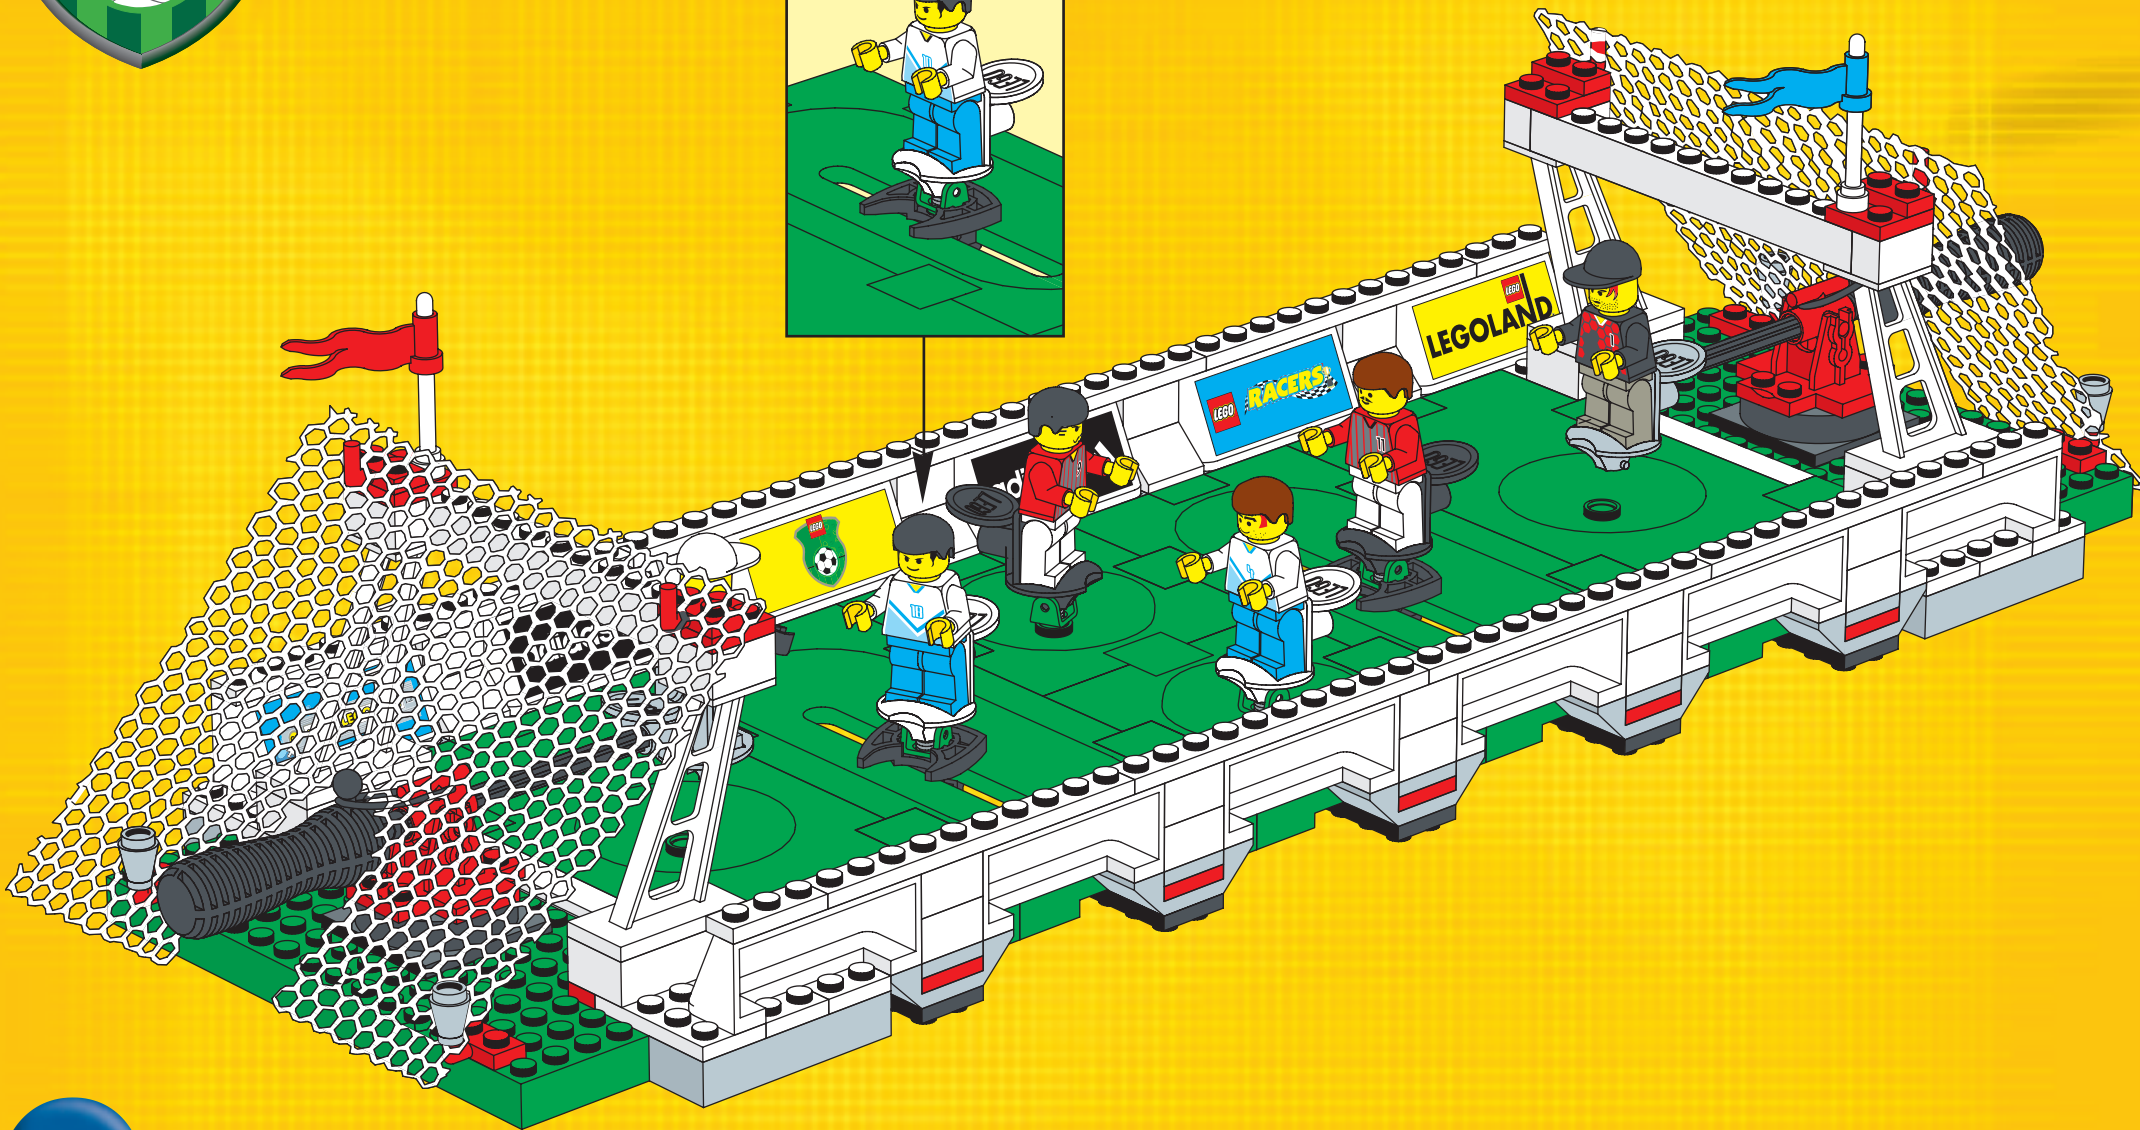 



3423



3424



3422



3421

 
 
 
 
 
 
 
 
 


3425



3420



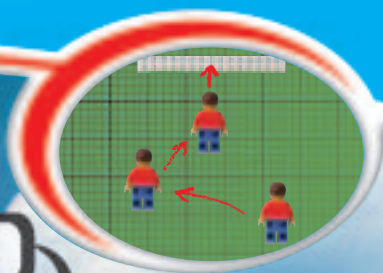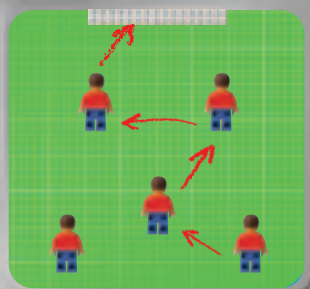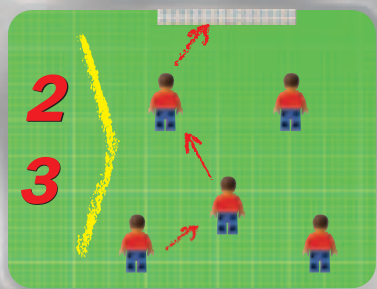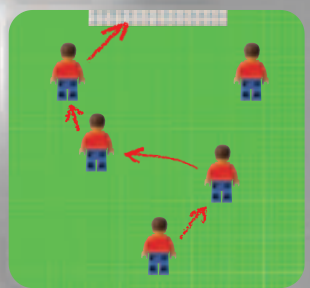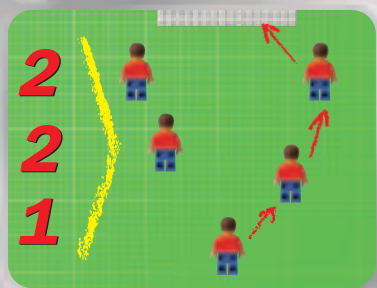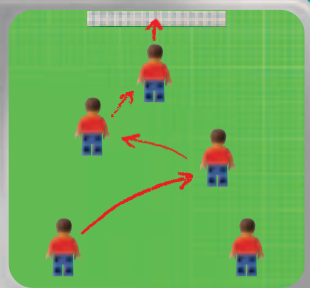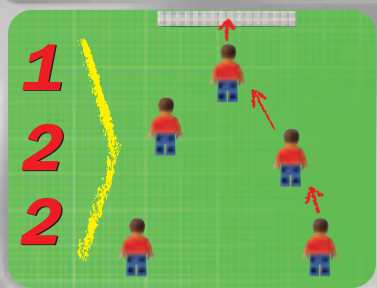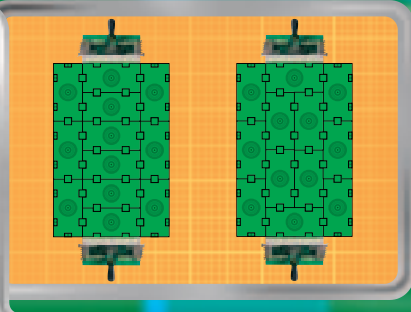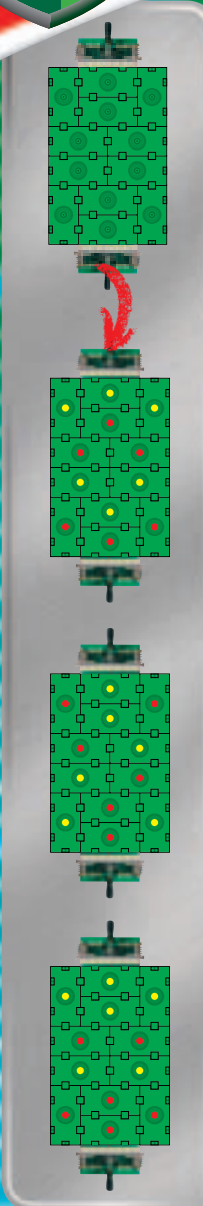

LEGO® CUP



PLAY

FOOTBALL MANIA



GAME BOY ADVANCE



PlayStation 2

Nintendo® and Game Boy Advance™ are trademarks of Nintendo Co., Ltd.
PlayStation and the PlayStation logo are registered trademarks of Sony Computer Entertainment Inc.
LEGO and the LEGO logo are trademarks of The LEGO Group. © 2001 The LEGO Group





GO www.LEGO.com
JOIN THE FUN!