



Mixels

41561

 


TAPSY



6150702

1

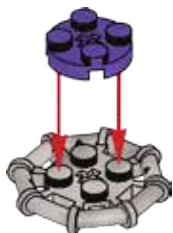


2




3



 4

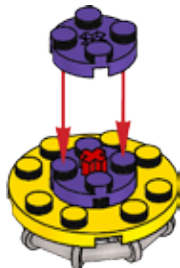


5

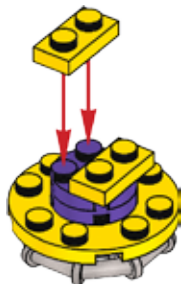 

6



 
7

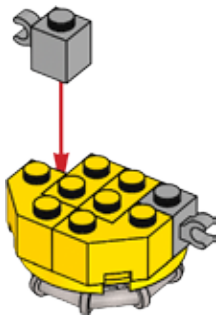


8



 9

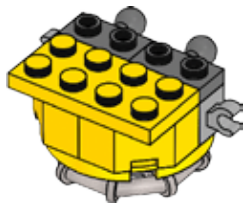


10

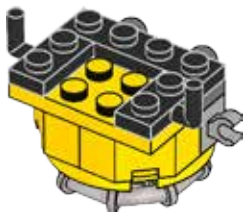 


11



 
12




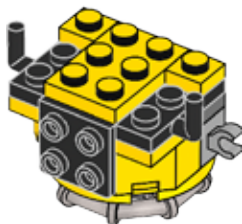


13

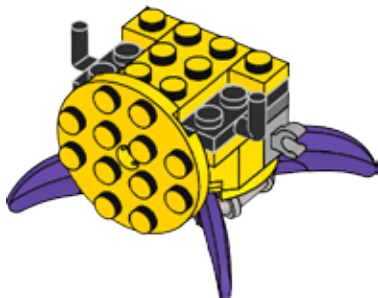 


14

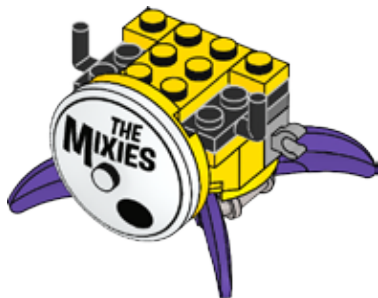 


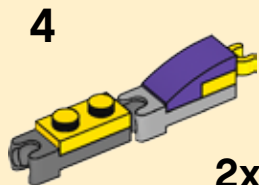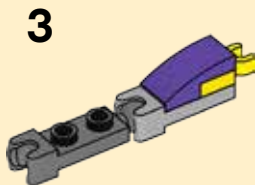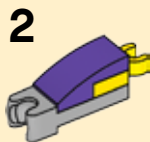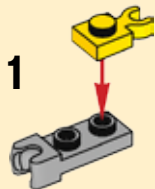    


2x

  15

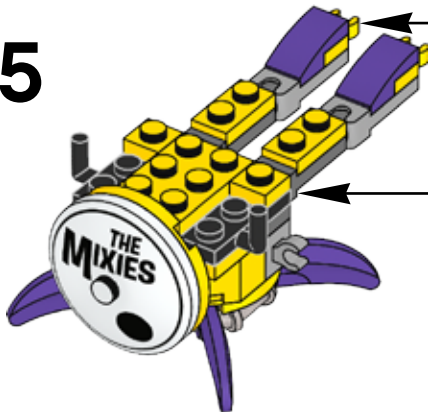


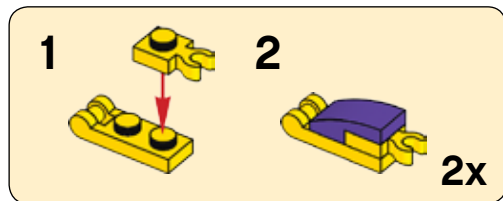



16

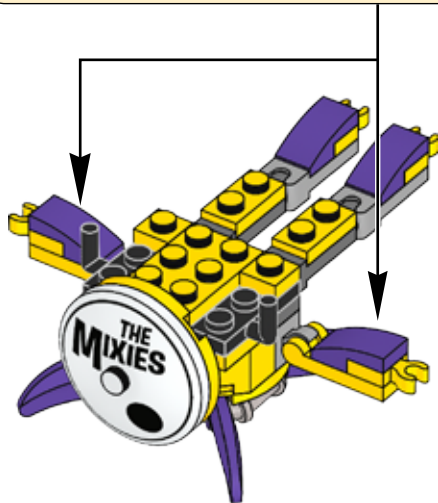 

17

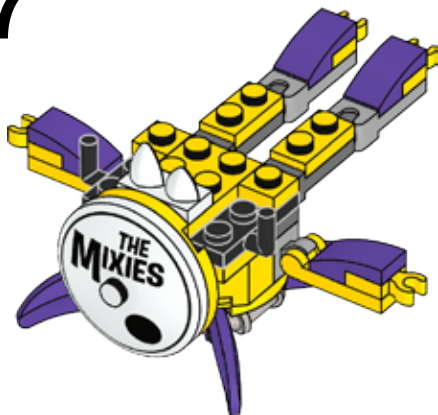 


18

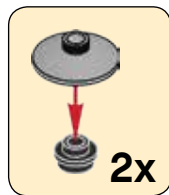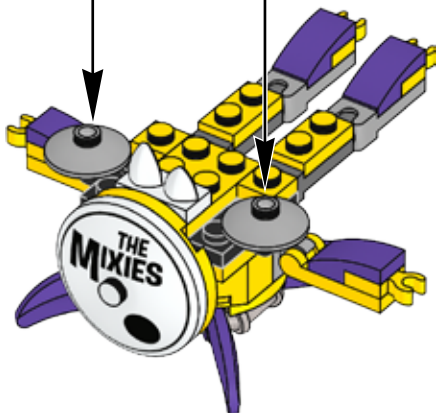  


2x

 19

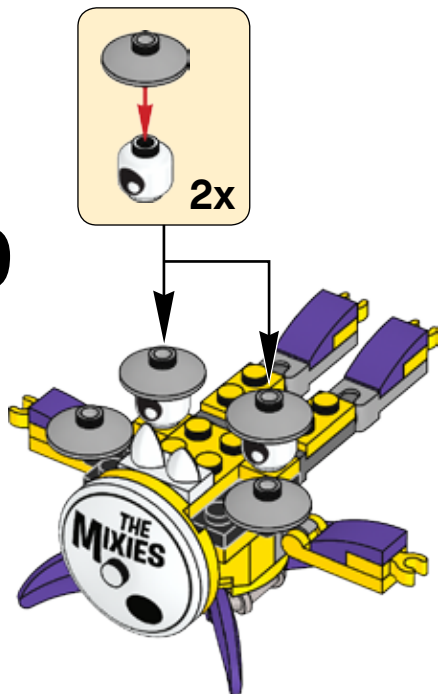

20

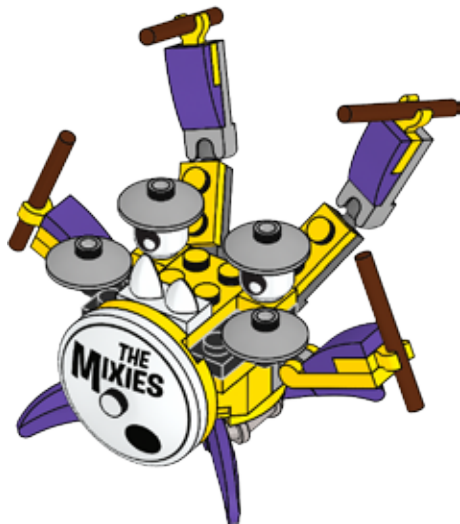 



2x
6100627



2x
6039479



2x
6043639



2x
302424



2x
4515349



2x
4569733



2x
6039482



2x
6060802



4x
4613258



3x
6030534



1x
6117973



2x
4535764



1x
6046384



4x
302324



4x
6057390



1x
371026



4x
4211512



1x
6133732



2x
4515367



4x
6132861



Customer Service

Kundenservice

Service Consommateurs

Servicio Al Consumidor

LEGO.com/service or dial



00800 5346 5555 :



1-800-422-5346 :



2x
4581524



1x
6020990



1x
302124



1x
4142865



1x
302024



4x
6116613



JAMZY
41560

TAPSY
41561

TRUMPSY
41562

MIXIES
MAX!



LEGO.com/mixels



SERIE 7

SERIE 7 E SÉRIE

WELCOME TO
BIENVENUE A • BIENVENIDO A
MIXOPOLIS

PALADUM
41559

TAPSY
41561

TRUMPSY
41562

CAMILLOT
41557

JAMZY
41560

BUSTO
41555

TIKETZ
41556

KUFFS
41554

MIXADEL
41558

LEGO.com/mixels



Mixels™

WELCOME TO
BIENVENUE À • BIENVENIDO A

MIXOPOLIS

