



CREATOR

31027



LEGO.com/creator



1



2





3



4

 


5




6



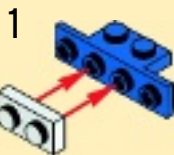

7

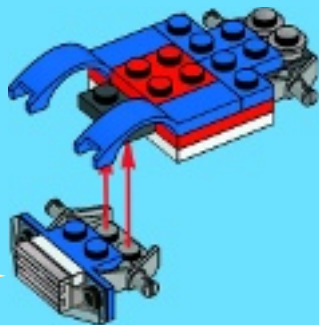 



8



9



10



 
11



12



13

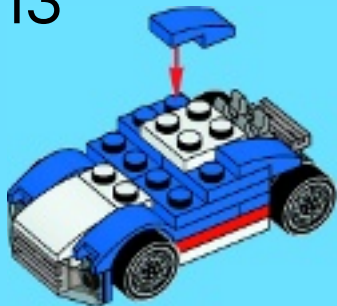

14





1



2



 
3




4




5

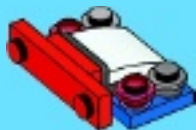


6

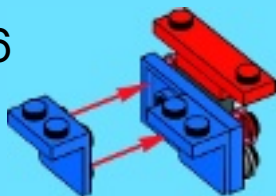 

7

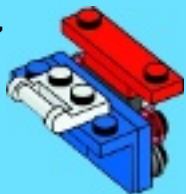 

15

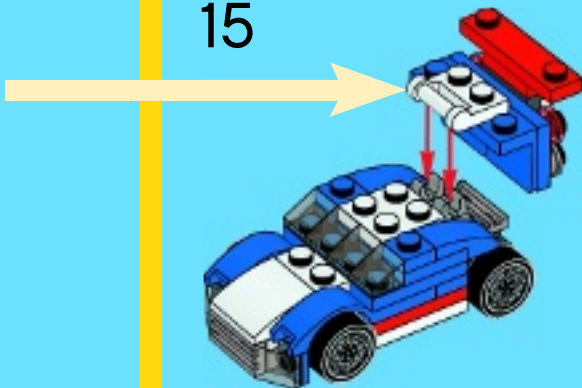 



4x

16





1



2



3



4



1



 
2



5




6

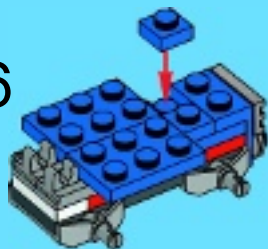

7



 8

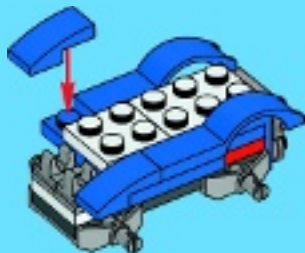


9




 10



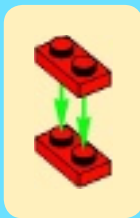


11

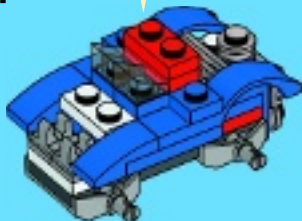 

12




 13






14

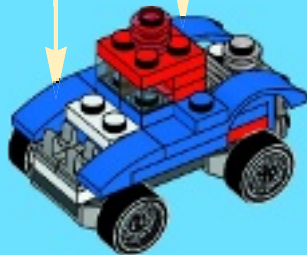 

1

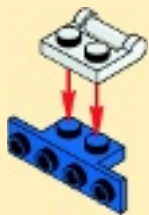 

2



3



15





 
1




2



1



2

 


3




4



 5

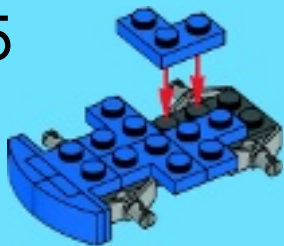

6

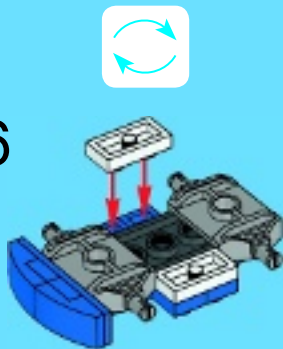 



7



 
8



9




10

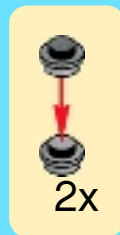



11

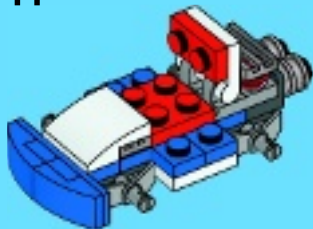 

12





4x
302401



2x
302301



1x
302201



1x
4222017



2x
6047220



2x
302101



2x
362321



1x
4631877



2x
614141



2x
302321



2x
302221



4x
4518029



2x
302123



1x
4282744



2x
302423



2x
6055065



4x
242023



2x
6037412



2x
6096304



1x
302023



2x
4619636



4x
4633691



6x
4244368



4x
4621178



2x
4598526



2x
4211569



4x
4246901



1x
6000606



1x
4211002



Customer Service

Kundenservice

Service Consommateurs

Servicio Al Consumidor

LEGO.com/service or dial



00800 5346 5555 :



1-800-422-5346 :





CREATOR

31029



31027



31033



31033



31029



31027

3 IN
EN

LEGO.com/creator