## Plastic Lined Carbage Bag

## Materials:

Fabric - 16" X 12"

Plastic sheeting \* - 16' X 12"

\* I bought my plastic sheeting in the paint department at Home Depot

Ribbon 16" long ( 1 1/2 inch wide )

Sew in Velcro




## Directions:

Step I: Cut your fabric and plastic sheeting to each be 16" X 12". Cut a piece of ribbon 16 inches long. Cut a piece of male and a piece of female Velcro I ½" wide.



Step 2: Place right sides of the fabric and black plastic sheeting together then sew along the long edge (16" edge.)

Note: Don't worry about being precise for this project  $\dots$  remember this is going to hold garbage!  $\odot$ 

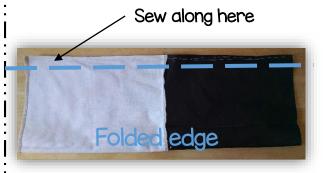

Step 3: After sewing the two pieces together, fold the piece with right sides together and sew along the short edge.




Leave opening here



Step 4: After sewing along the side, fold the bag so the seam is in the middle. Sew all the way across the bottom on the black plastic side. Sew across the bottom of the fabric side *leaving a* space open in the middle for turning..

Step 5: Square your corners and sew them. Square corners for both the black plastic lining and the fabric side of the bag. Then cut the excess material off.



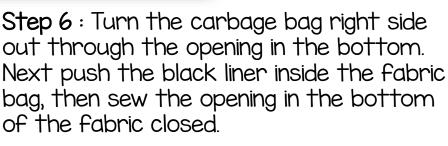

Step 7: To attach the ribbon handle, fold the edge of the ribbon over 1/2" and sew the male Velcro on one side. Repeat on the other side of the ribbon sewing on the female Velcro. Attach one side of the handle by sewing it the carbage bag.





